

Loading Unit Parts Location

Note :

When changing mechanism parts, apply the specified grease to areas marked "xx" as shown in the drawing.

Ref. No.	Part No.
1	RFKXEM30L

