

SECTION 5 EXPLODED VIEWS

NOTE:

- The mechanical parts with no reference number in the exploded views are not supplied.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

- Due to standardization, parts with part number suffix -XX and -X may be different from the parts specified in the components used on the set.

- Color Indication of Appearance Parts
Example:


(RED) ... KNOB, BALANCE (WHITE)

↑
Cabinet's Color

↑
Parts Color


The components identified by mark  or dotted line with mark  are critical for safety. Replace only with part number specified.

5-1. FRONT CABINET ASSEMBLY

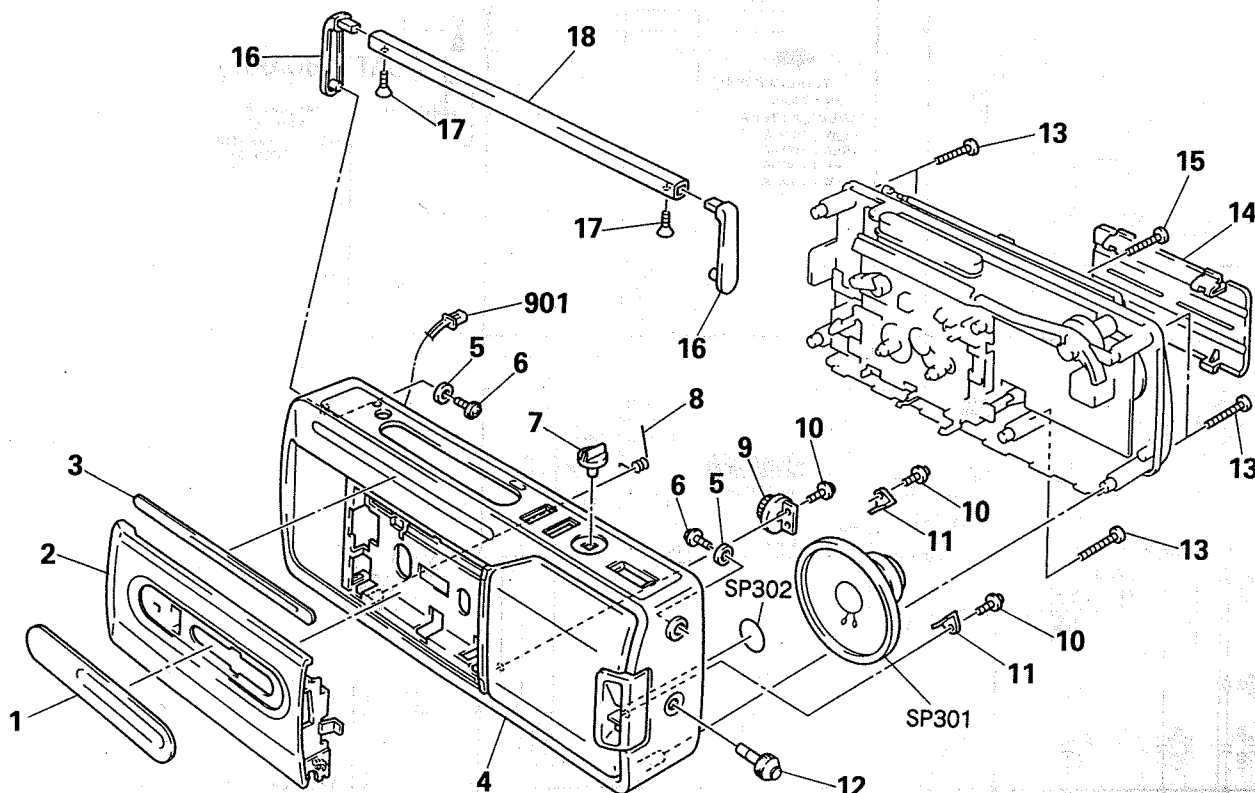

No.	Part No.	Description	Remarks	No.	Part No.	Description	Remarks
1	3-362-907-01	PLATE, ORNAMENTAL (CASSETTE)		12	3-362-877-01	KNOB (FINE TUNING)	
2	3-362-938-11 3-362-938-41	(BLACK)...HOLDER, CASSETTE (WHITE)...HOLDER, CASSETTE		13	7-685-152-19	SCREW +BTP 3X25 TYPE2 N-S	
3	3-362-921-01	PLATE, ORNAMENTAL (DIAL SCALE)		14	3-362-935-01 3-362-935-11	(BLACK)...LID, BATTERY CASE (WHITE)...LID, BATTERY CASE	
4	X-3362-162-1 X-3362-163-1	(BLACK)...FRONT CABINET (WHITE)...FRONT CABINET		15	7-685-553-19	SCREW +BTP 3X30 TYPE2 N-S	
5	3-362-930-01	WASHER (HANDLE)		16	3-362-933-01	PLATE, HANDLE SIDE	
6	3-703-135-01	SCREW, TAPPING, +PHW 3X8		17	7-685-248-19	SCREW +KTP 3X12 TYPE2 NON-SLIT	
7	3-362-932-01	KNOB (VOL)		18	3-362-909-01 3-362-909-11	(BLACK)...HANDLE (WHITE)...HANDLE	
8	3-362-918-01	SPRING (CASSETTE)		901	*1-563-470-11	HOUSING, CONNECTOR 2P	
9	3-362-934-01	DAMPER		SP301	1-544-380-11	SPEAKER	
10	7-685-647-79	SCREW +BVP 3X10 TYPE2 N-S		SP302	1-529-094-11	BUZZER	
11	*3-362-920-01	BRACKET (SPEAKER)					


5-2. REAR CABINET ASSEMBLY

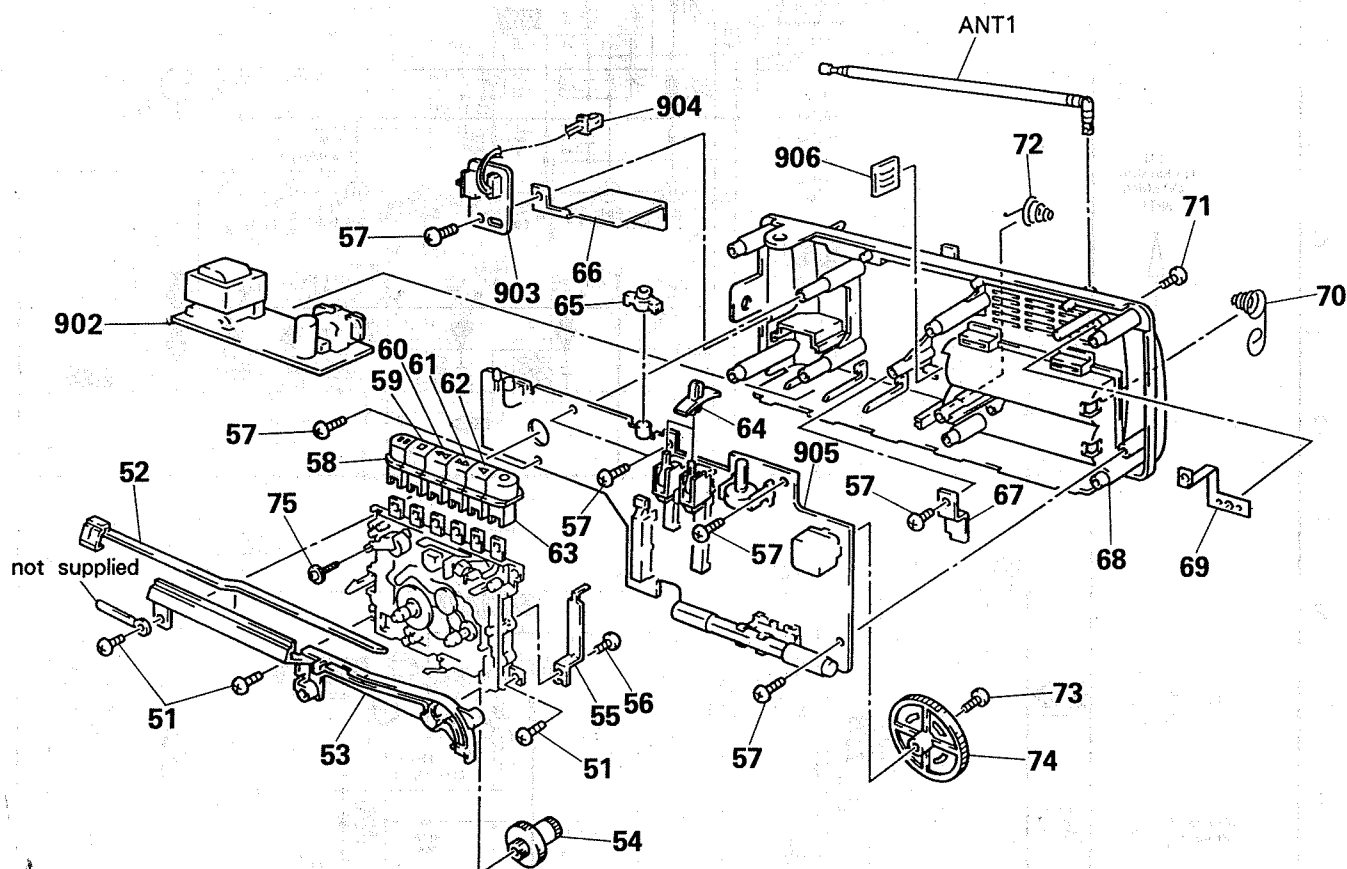

No.	Part No.	Description	Remarks	No.	Part No.	Description	Remarks
51	7-685-648-79	SCREW +BVTP 3X12 TYPE2 N-S		68	3-362-940-11	(BLACK)...CABINET (REAR)	
52	3-362-931-01	POINTER			3-362-940-41	(WHITE)...CABINET (REAR)	
53	*3-362-912-01	CHASSIS		69	3-362-911-01	BRACKET (ANTENNA)	
54	3-362-937-01	KNOB (TUNING)		70	3-362-916-01	SPRING (PM), BATTERY	
55	3-362-906-01	REC LEVER		71	7-682-548-04	SCREW +P 3X8	
56	7-621-255-15	SCREW +PTT 2X3 (S)		72	3-362-915-01	SPRING (M), BATTERY	
57	7-685-647-79	SCREW +BVTP 3X10 TYPE2 N-S		73	7-621-770-87	SCREW +P 2.6X5	
58	3-362-923-01	BUTTON (PAUSE)		74	3-362-936-01	GEAR, VARIABLE CAPACITOR	
59	3-362-924-01	BUTTON (STOP)		75	3-366-352-01	SCREW 1.4X6	
60	3-362-926-01	BUTTON (FF)		902	*1-636-594-11	PC BOARD, POWER	
61	3-362-925-01	BUTTON (REW)		903	*1-636-595-11	PC BOARD, SW	
62	3-362-927-01	BUTTON (PLAY)		904	*1-563-470-11	HOUSING, CONNECTOR 2P	
63	3-362-928-01	BUTTON (REC)		905	*A-3261-286-A	MOUNTED PCB, MAIN	
64	3-362-878-01	KNOB (LEVER)		906	1-638-216-11	PC BOARD, BATT	
65	3-321-122-01	CUSHION, MICROPHONE		ANT1	1-504-484-11	ANTENNA, TELESCOPIC	
66	*3-362-913-01	PLATE (A), SHIELD					
67	*3-362-908-01	BRACKET (AC SOCKET)					

5-3. MECHANISM DECK ASSEMBLY (1)


(MF-140 II : YS22Z-01)

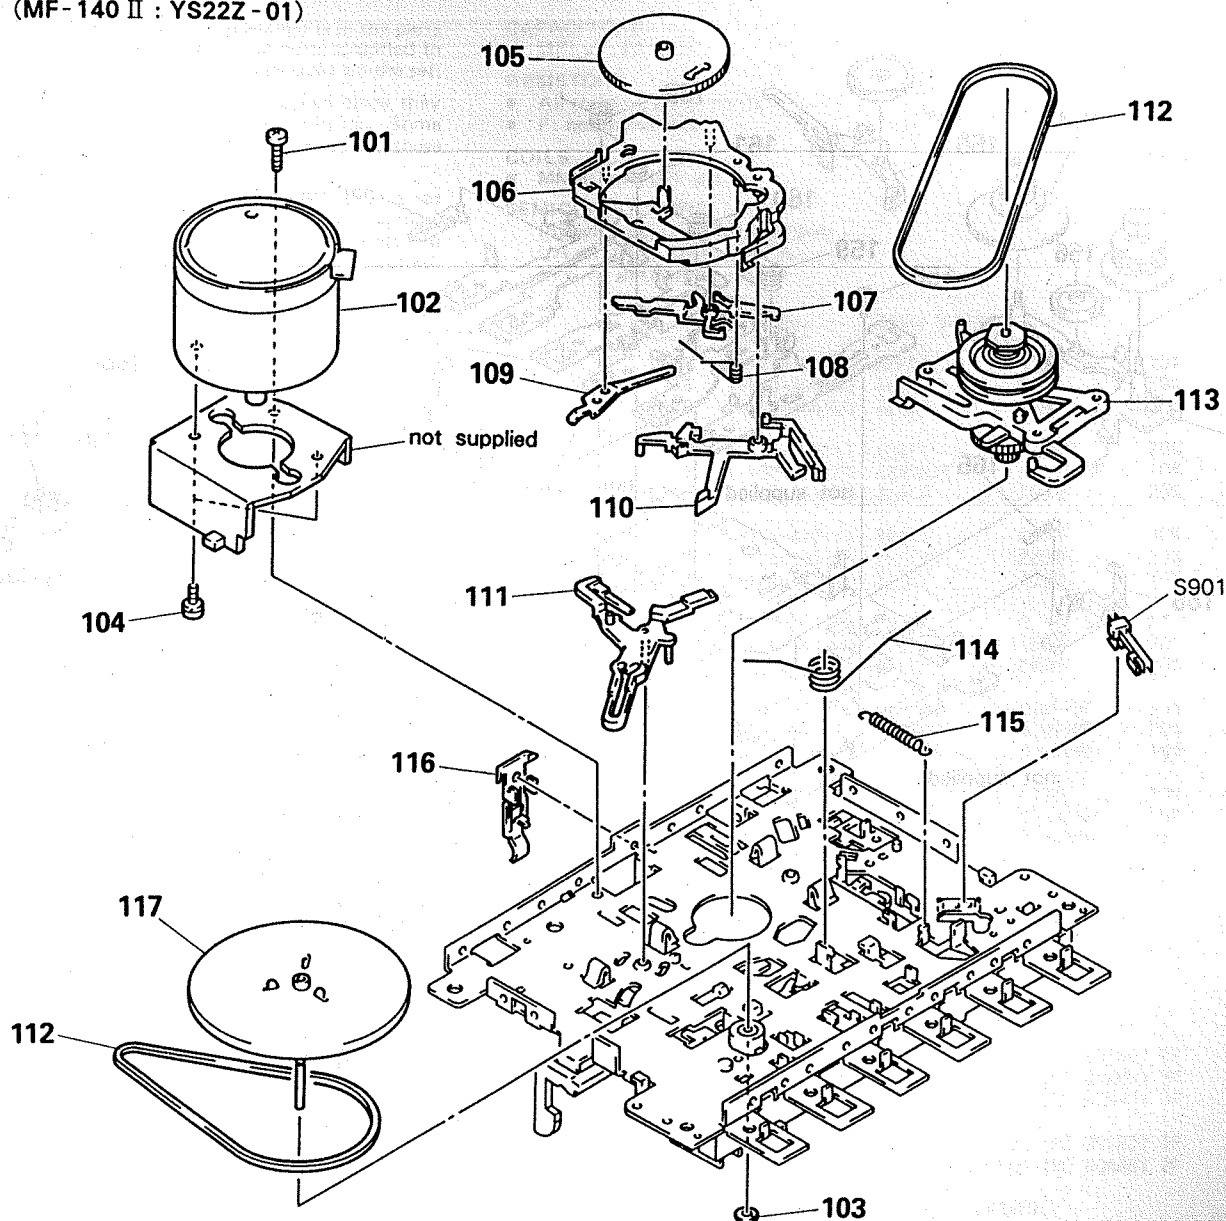

No.	Part No.	Description	Remarks	No.	Part No.	Description	Remarks
101	7-621-770-87	SCREW +BVTT 2.6X5 (S)		110	3-362-975-01	LEVER, SENSOR	
102	3-363-231-01	MOTOR ASSY		111	3-362-972-01	SENSOR	
103	3-362-980-01	WASHER		112	3-362-989-01	BELT	
104	7-628-254-00	SCREW +PS 2.6X5		113	3-362-969-01	IDLER ASSY, PF	
105	3-362-974-01	GEAR, CAM		114	3-362-970-01	SPRING	
106	3-362-973-01	AS (BASE)		115	3-362-971-01	SPRING	
107	3-362-976-01	LEVER, CONTROL		116	3-362-967-01	SPRING, CASSETTE	
108	3-362-977-01	SPRING		117	3-362-979-01	FW ASSY	
109	3-362-978-01	SPRING, PLATE		S901	1-572-538-11	SWITCH, LEAF	

5-4. MECHANISM DECK ASSEMBLY (2)

(MF-140 II : YS22Z-01)

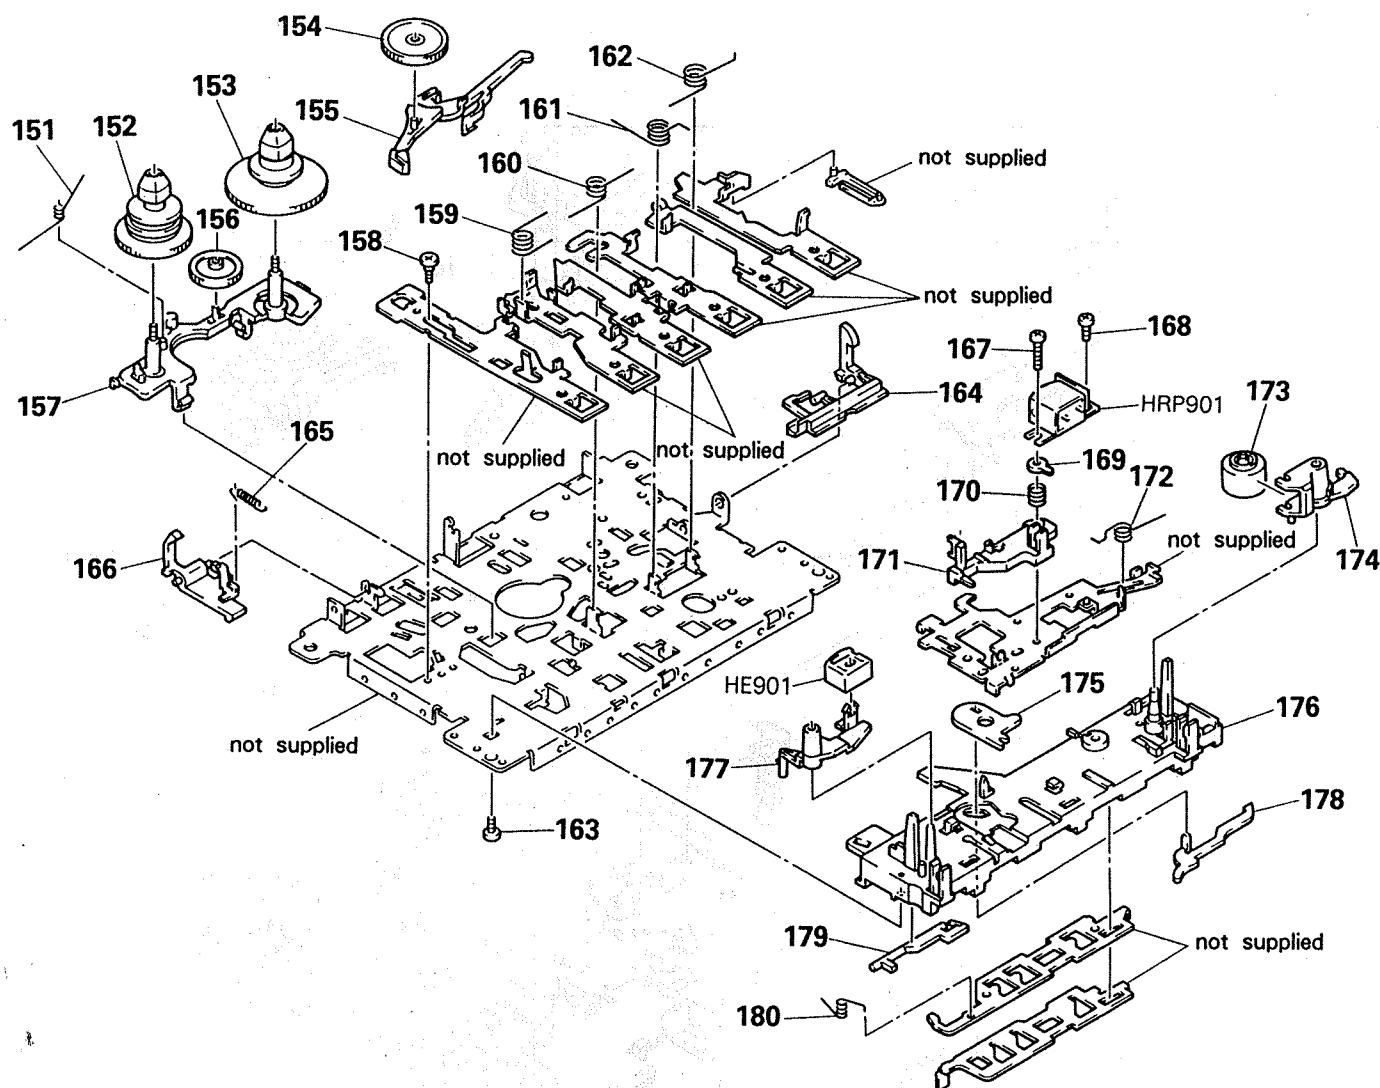

No.	Part No.	Description	Remarks	No.	Part No.	Description	Remarks
151	3-362-964-01	SPRING		167	3-363-229-01	SCREW	
152	3-362-963-01	REEL, S		168	7-621-255-25	SCREW +PTT 2X4 (S)	
153	3-362-962-01	REEL ASSY, T		169	3-363-230-01	LUG	
154	3-362-960-01	PULLEY, IDLER		170	3-362-985-01	SPRING	
155	3-362-959-01	ARM, IDLER		171	3-362-986-01	HOLDER, HEAD	
156	3-362-965-01	IDLER, FF		172	3-362-983-01	SPRING	
157	3-362-961-01	SPINDLE (BASE)		173	3-362-982-01	PINCH ROLLER	
158	3-362-958-01	SCREW		174	3-362-981-01	PINCH ARM	
159	3-362-954-01	SPRING		175	3-366-108-01	LINK CR	
160	3-362-955-01	SPRING		176	3-362-942-01	FRAME ASSY	
161	3-362-956-01	SPRING		177	3-362-987-01	ARM, EH	
162	3-362-957-01	SPRING		178	3-366-107-01	ARM CR	
163	7-685-104-19	SCREW +PTP 2X6		179	3-362-944-01	STOPPER, REC	
164	3-362-968-01	LEVER, EJECT		180	3-362-945-01	SPRING	
165	3-363-228-01	SPRING		HE901	1-543-777-11	HEAD, MAGNETIC (ERASING)	
166	3-362-966-01	INTER LOCK		HRP901	1-543-776-11	HEAD, MAGNETIC (REC/PB)	