


2.Exploded Views and Parts List

2-1 Total Exploded View and Parts List

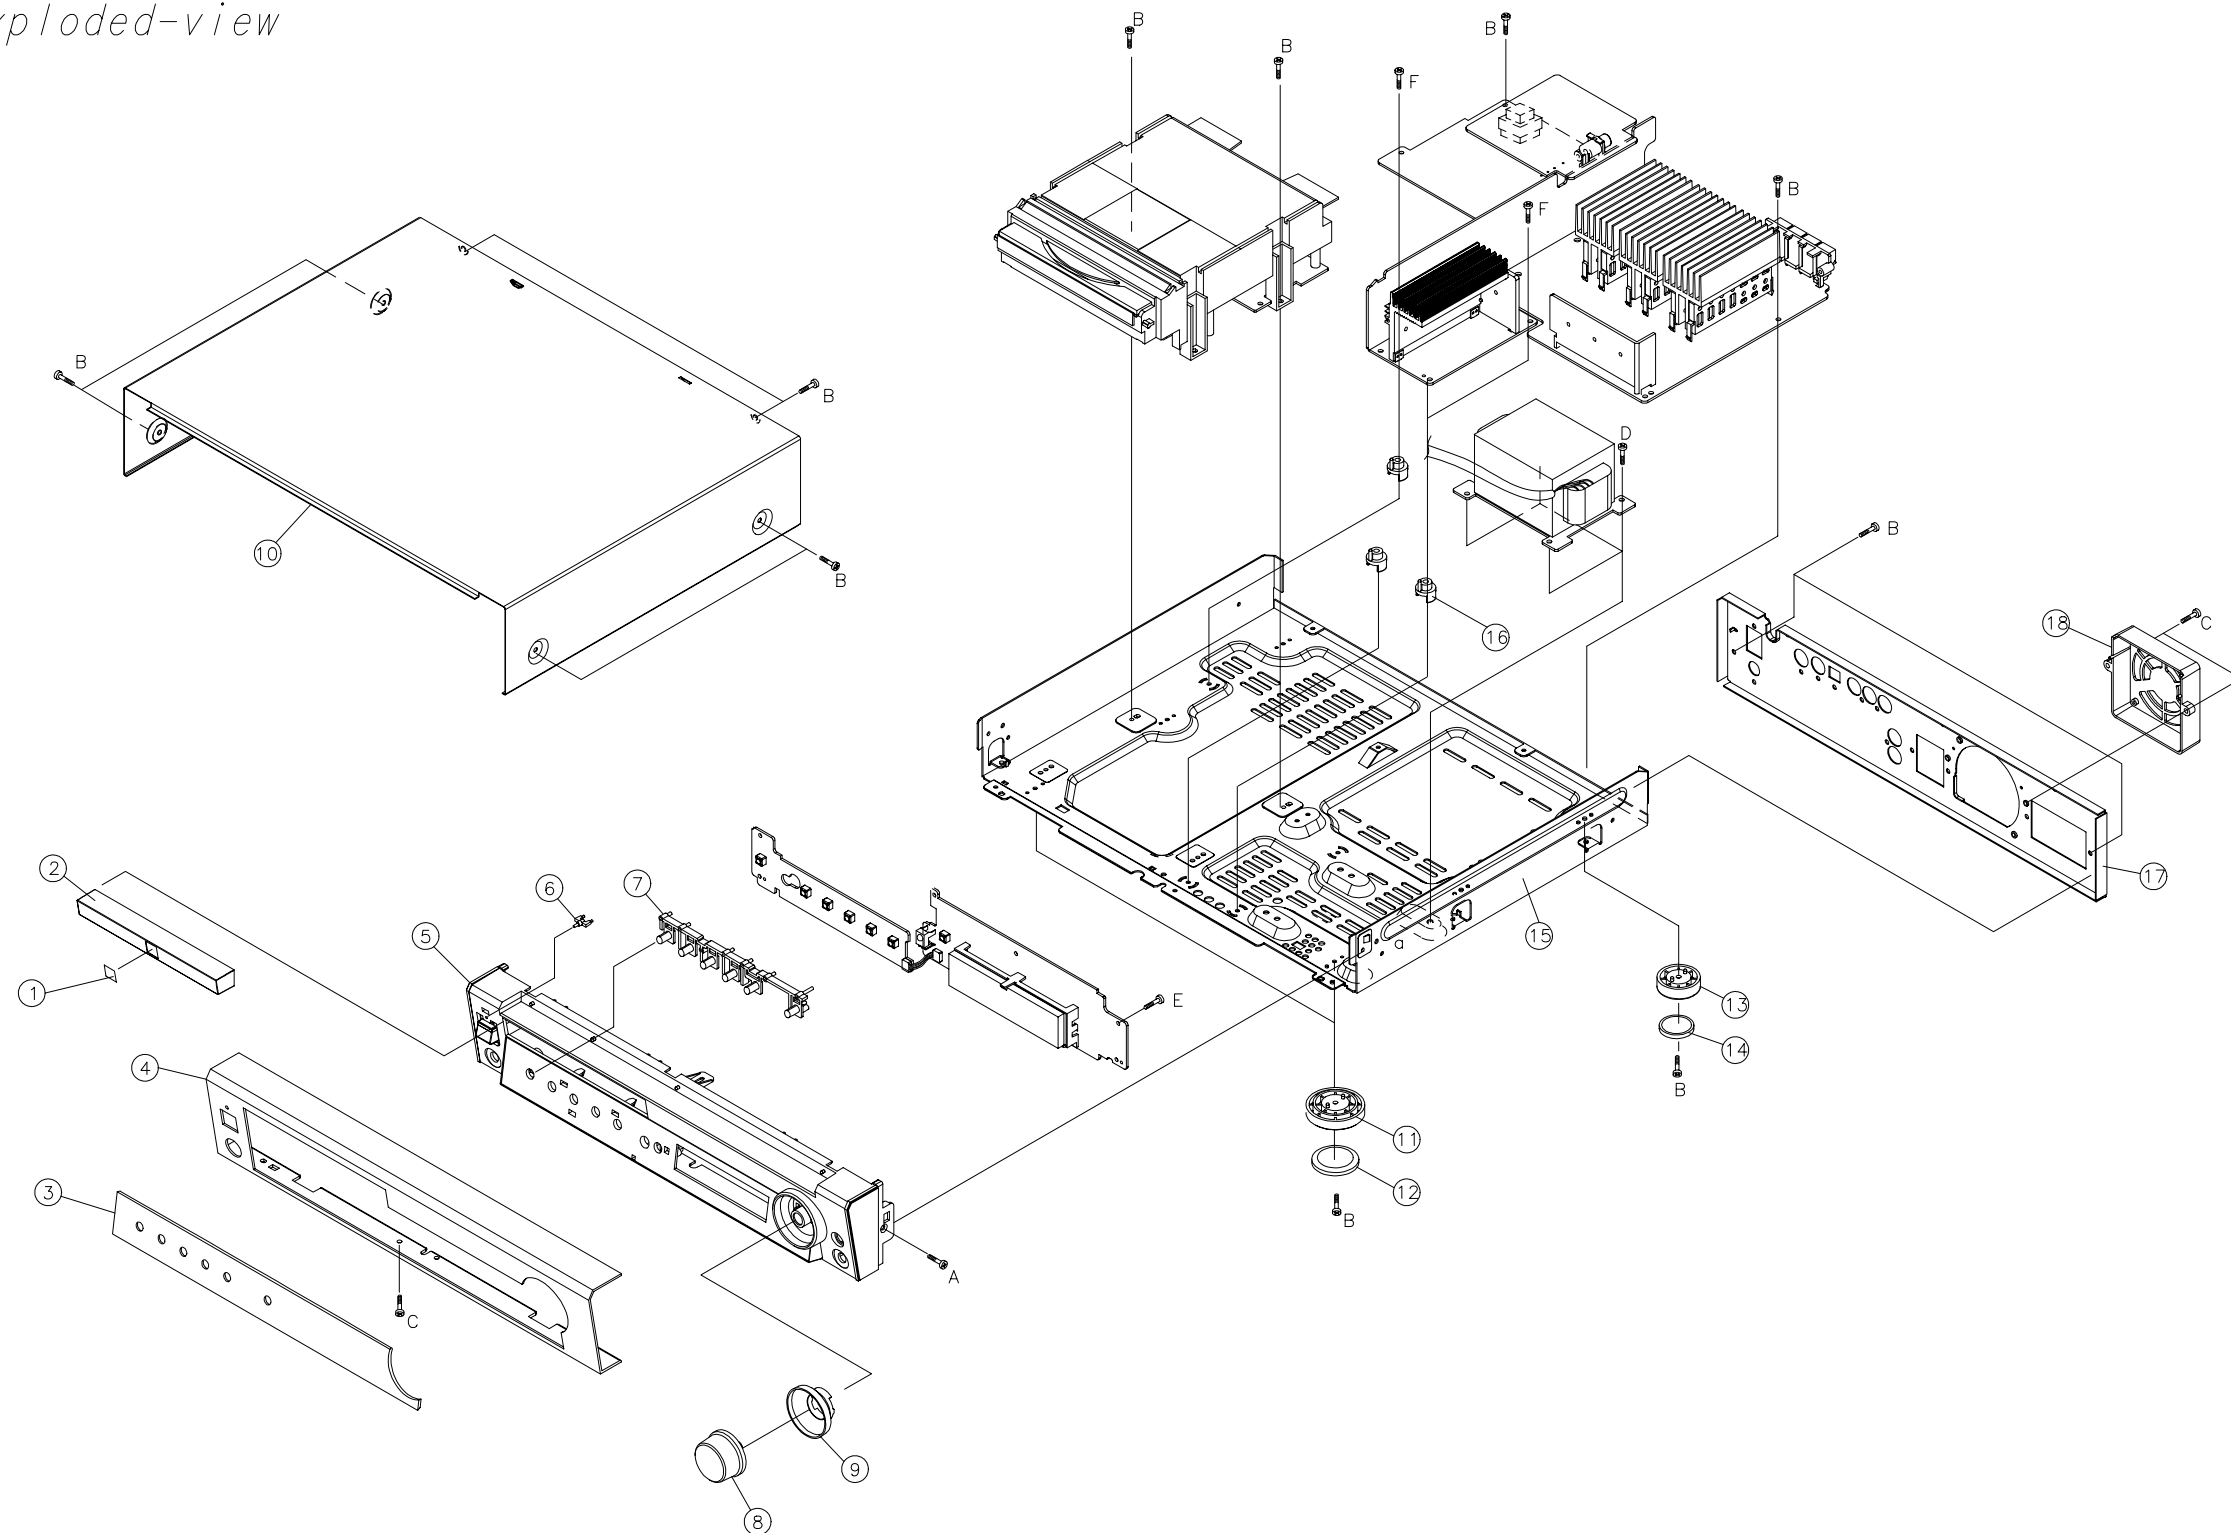


* Parts List of Total Exploded view

O : use , - : none use

No.	Code No.	Description ; Specification	Q'ty	EUROPE	USA	ASIA	REMARK
1	AH64-01539A	BADGE-DVD	1	O	O	O	
2	AH64-01363A	DOOR-TRAY	1	O	O	O	
3	AH64-01364C	WINDOW-VFD	1	O	O	O	
4	AH64-01356B	PANEL-FRONT	1	-	O	O	
	AH64-01356C	PANEL-FRONT	1	O	-	-	RDS logo
5	AH64-01360A	CABINET-FRONT	1	O	O	O	
6	AH67-00122A	LENS-POWER	1	O	O	O	
7	AH64-01366A	KNOB-FUNCTION	1	O	O	O	
8	AH64-01367A	KNOB-VOLUME	1	O	O	O	
9	AH67-00123A	LENS-VOLUME	1	O	O	O	
10	AH64-01358B	CABINET-TOP	1	O	O	O	
11	AH61-00766A	HOLDER-FOOT,F	2	O	O	O	
12	AH69-00503A	CUSHION-FOOT,F	2	O	O	O	
13	AH61-00777A	HOLDER-FOOT,B	2	O	O	O	
14	AH69-00503B	CUSHION-FOOT,B	2	O	O	O	
15	AH64-01357A	CABINET-BOTTOM	1	O	O	O	
16	AH61-00774A	HOLDER-PCB	4	O	O	O	
17	AH64-01359B	CABINET-REAR	1	O	-	-	europe
	AH64-01359C	CABINET-REAR	1	-	O	-	
	AH64-01359D	CABINET-REAR	1	-	-	O	
	AH64-01359E	CABINET-REAR	1	-	-	O	dual voltage
	AH64-01359H	CABINET-REAR	1	-	-	O	SEAU buyer
18	AH63-00303A	COVER-FAN	1	O	O	O	
A	6002-000126	SCREW-TAPPING ; FH 3*10 BLK	2	O	O	O	CABINET-FRONT + CABINET-BOTTOM
B	6003-000398	SCREW-TAP TITE ; BH 2S 3*6 YEL	3	O	O	O	CABINET-FRONT + CABINET-BOTTOM
			7				MAIN-PCB + CABINET-BOTTOM
			2				DVD-MECHA. + CABINET-BOTTOM
			4				HOLDER-FOOT + CABINET-BOTTOM
C	6003-000276	SCREW-TAP TITE ; BH M3*10 YEL	4	O	O	O	PANEL-FRONT + CABINET-FRONT
			15	O	O	O	CABINET-REAR + JACK
D	AH60-10107A	SCREW-TAP TITE ; M4*6 YEL	4	O	O	O	POWER-TRANS + CABINET-BOTTOM
E	AH60-10020D	SCREW-TAP TITE ; RH 2.6*8 YEL	9	O	O	O	CABINET-FRONT + PCB-FRONT
F	6003-000278	SCREW-TAP TITE ; BH 3*14 YEL	3	O	O	O	MAIN-PCB + CABINET-BOTTOM

2-2 MECHA Exploded View and Parts list

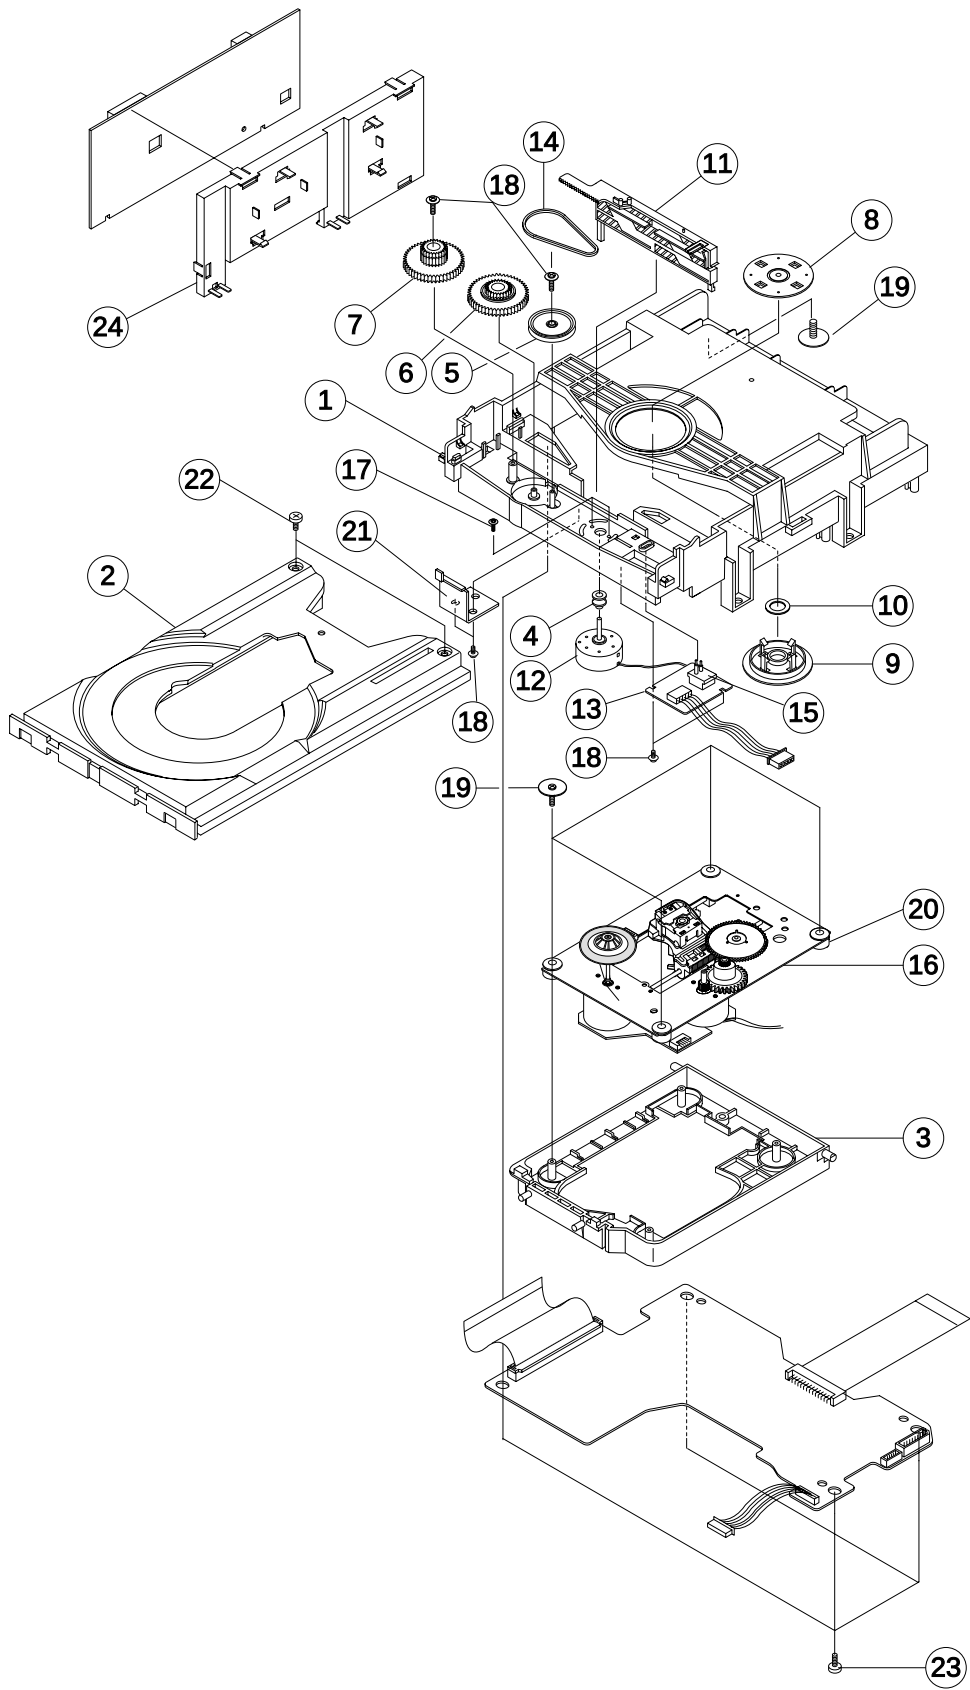

No.	Code No.	Description ;	Specification	Q'TY
	AH97-00822A	DVD MECHA	CMS-D100	
1	AH61-00746A	BASE-MAIN	ABS BLK	1
2	AH63-00294A	TRAY-DISC	ABS D/GRAY	1
3	AH66-00159A	LEVER-LIFT	ABS BLK	1
4	AH66-00160A	PULLEY-MOTOR	POM WHT	1
5	AH66-00161A	GEAR-PULLEY	TPE WHT	1
6	AH66-00162A	GEAR-MIDDLE	TPE WHT	1
7	AH66-00163A	GEAR-TRAY	POM WHT	1
8	AH66-00164A	CLAMPER-UPPER	POM WHT	1
9	AH66-00165A	CLAMPER-LOWER	POM WHT	1
10	AH61-00747A	BRACKET-CHUCK	SECC t1.0	1
11	AH66-00166A	SLIDE-CAM	POM WHT	1
12	AH31-00030A	MOTOR-DC	RF-300CA-11440	1
13	AH41-00352A	PCB-SWITCH	26.5*21.6	1
14	AH66-00167A	BELT-PULLEY	CR 1.5	1
15	3409-001119	SWITCH-DETECTOR	JDS2200	1
16	AH59-00130A	DVD DECK	CMS-S21MG6	1
17	6001-001257	SCREW-MACHINE	1.7*3(W4.5)	2
18	AJ60-10001A	SCREW-TAP	2*5(W7)	6
19	6003-001210	SCREW-TAP	2.6*6(W12)	5
20	AH73-00025B	RUBBER-CD	BUTYL 15	4
21	AH61-00958A	BRACKET-GUIDE	SECC 1.0t	1
22	6003-000283	SCREW-TAP	3*8	2
23	6003-000276	SCREW-TAP	3*10	4
24	AH61-00828A	HOLDER-PCB	ABS BLK	1

*** Caution:** Actually, the whole MECHA do not include DECK ASSY.
DECK ASSY should be requested separately at service repair.

2-3 SPEAKER Exploded View and Parts list

* CAUTION : It is used the bonding, connet NET FRAME(or FRONT PANEL ASS'Y) to CABINET ASS'Y.
So when the disassembly, take extreme care not to damage the SPEAKER.

