


2.Exploded Views and Parts List

2-1 Total Exploded View and Parts List

HT-DL200 SERIES EXPLODED VIEW


MODEL : HT-D200/DL200/D250/D2000

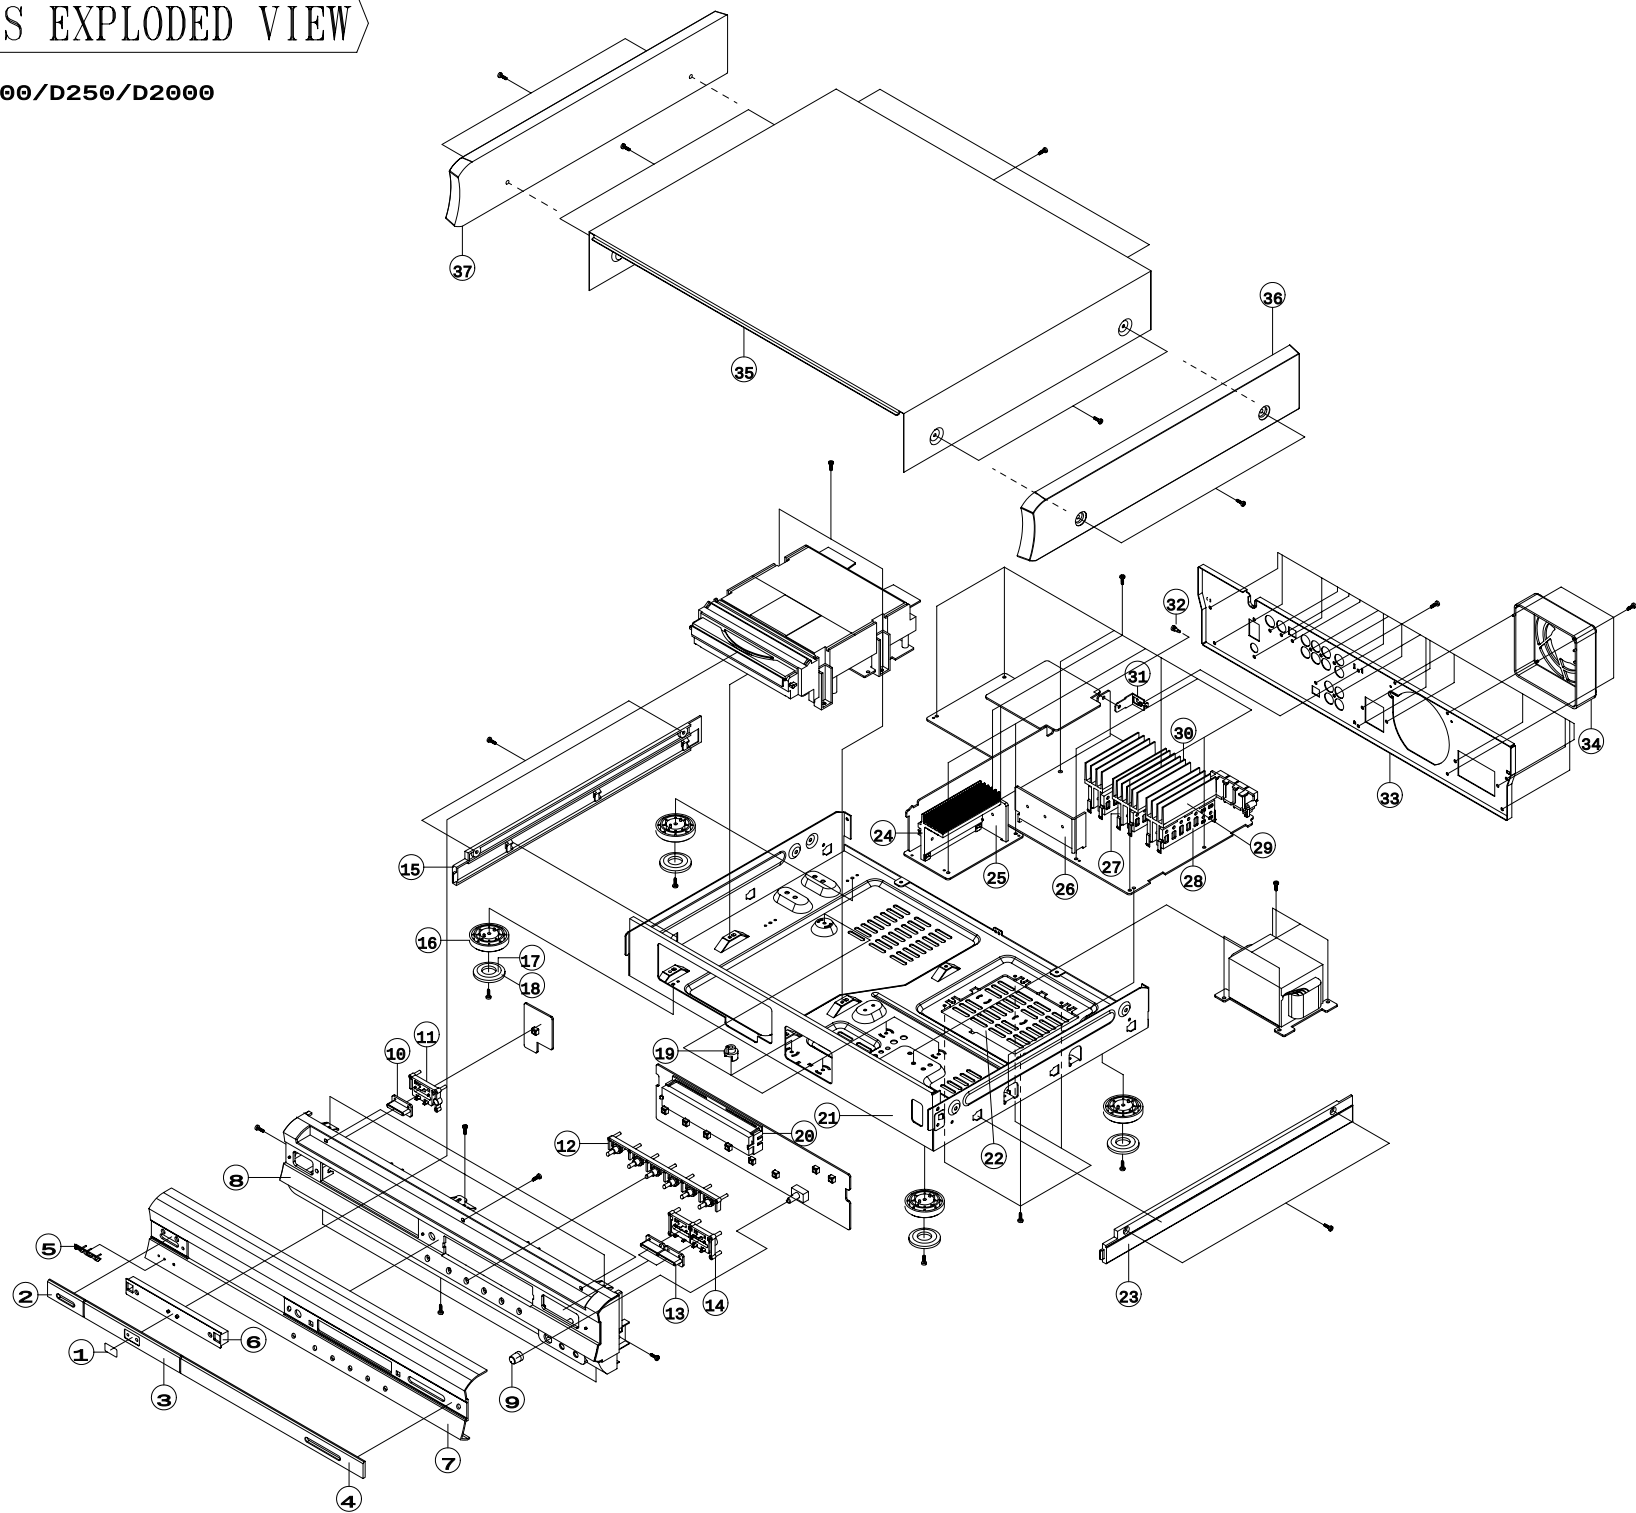

* Parts List of Total Exploded view

No.	Code No.	Description ; Specification	Q'ty	REMARK
1	AH64-01538A	BADGE-DVD	1	
2	AH64-01482A	DECORATION-POWER	1	
3	AH64-01483A	DECORATION-CD DOOR	1	
4	AH64-01484A	DECORATION-VFD	1	ENGLISH
5	AH64-70003D	BADGE-BRAND	1	SAMSUNG
6	AH64-01481B	DOOR-TRAY	1	
7	AH64-01474C	PANEL-FRONT	1	ENGLISH
8	AH64-01478C	CABINET-FRONT	1	WITHOUT MIC
10	AH67-00130B	LENS-POWER	1	
11	AH64-01485A	KNOB-POWER	1	
12	AH64-01487B	KNOB-FUNCTION	1	
13	AH67-00131B	LENS-VOLUME	2	
14	AH64-01486A	KNOB-VOLUME	1	
15	AH64-01479B	DECORATION-SIDE,L	1	
16	AH61-00776A	HOLDER-FOOT,F	4	
17	AH69-00503A	CUSHION-FOOT,F	4	
18	AH69-00503B	CUSHION-FOOT,B	4	
19	AH61-00774A	HOLDER-PCB	5	
20	AH61-00853A	HOLDER-VFD	1	
21	AH64-01475A	CABINET-BOTTOM	1	
22	AH64-01475B	CABINET-BOTTOM	1	
23	AH64-01480B	DECORATION-SIDE,R	1	
24	AH62-00051B	HEAT-SINK,D	1	
25	AH62-00051C	HEAT-SINK,B	1	
26	AH62-00052A	HEAT-SINK,DIO	1	
27	AH61-00855A	HOLDER-IC	1	
28	AH61-00933A	HOLDER-IC	5	
29	AH62-00064A	HEAT-SINK,MAIN 2	2	
30	AH62-00057B	HEAT-SINK-MAIN	1	
31	AH61-00856A	BRACKET-PCB	1	
32	AH61-40014A	SUPPORT-RIVET	1	
33	AH64-01477B	CABINET-REAR (ASIA)	1	WITHOUT VOLTAGE SELECTOR
33	AH64-01477D	CABINET-REAR (ASIA)	1	VOLTAGE SELECTOR
33	AH64-01477E	CABINET-REAR (ELS)	1	SCART JACK
33	AH64-01477F	CABINET-REAR (USA)	1	DIGITAL IN
34	AH63-00340A	COVER-FAN	1	
35	AH64-01476B	CABINET-TOP	1	

2-2 MECHA Exploded View and Parts list

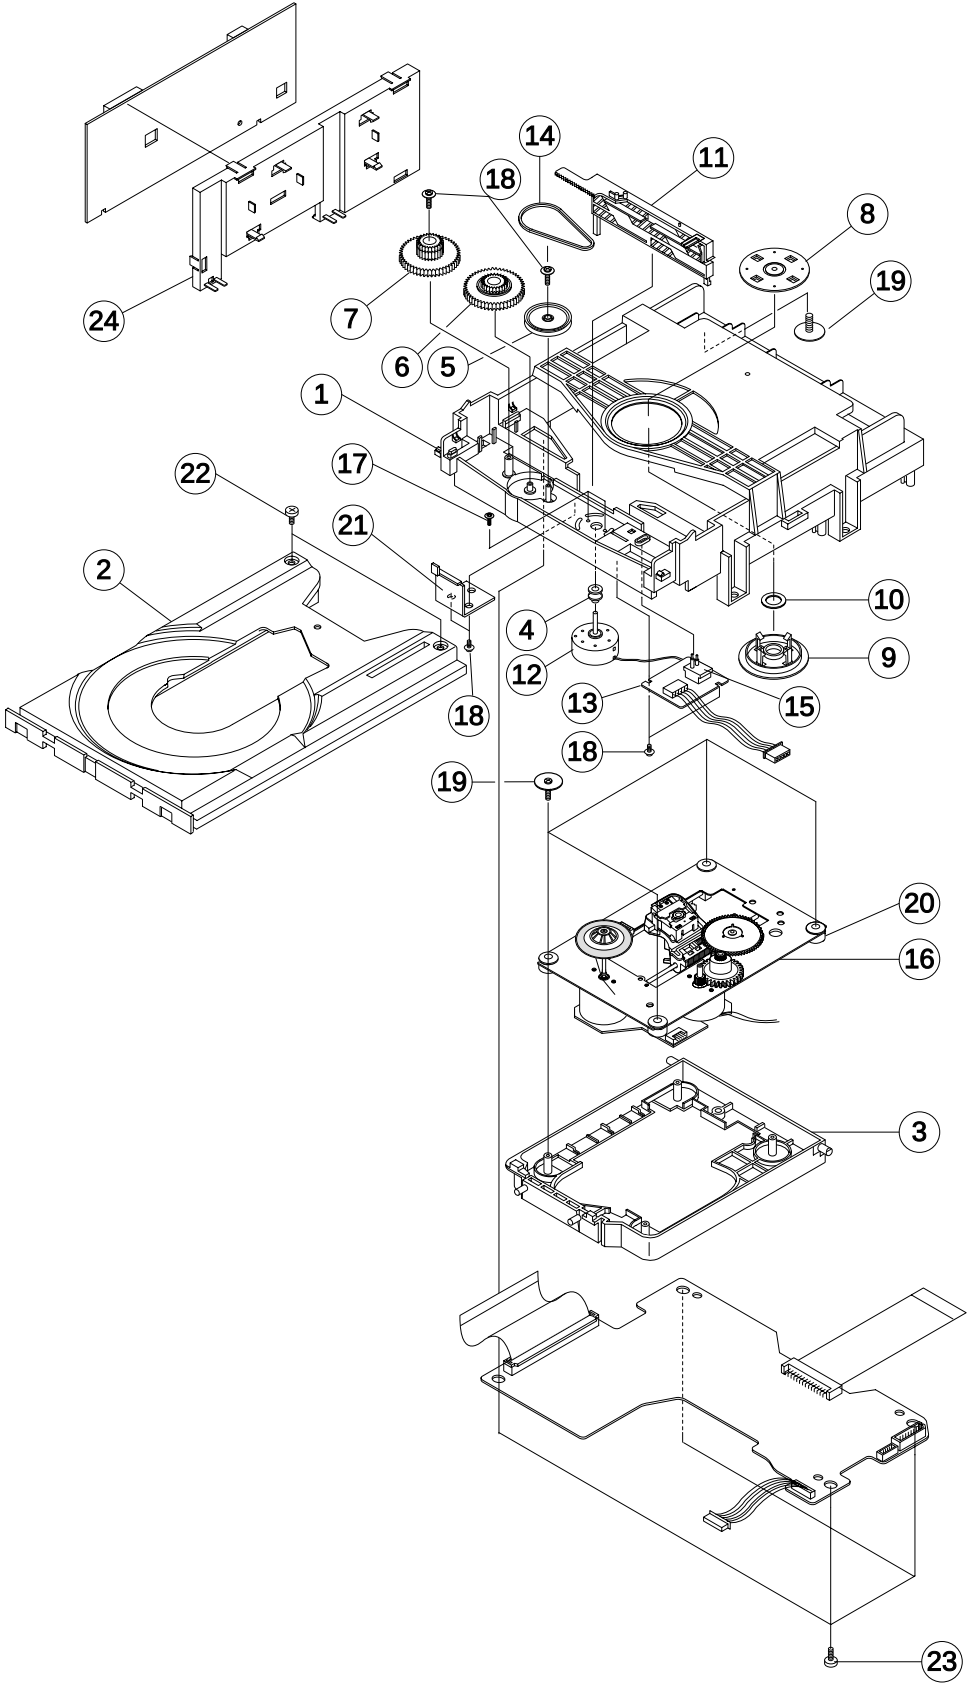

No.	Code No.	Description ;	Specification	Q'TY
	AH97-00822A	DVD MECHA	CMS-D100	
1	AH61-00746A	BASE-MAIN	ABS BLK	1
2	AH63-00294A	TRAY-DISC	ABS D/GRAY	1
3	AH66-00159A	LEVER-LIFT	ABS BLK	1
4	AH66-00160A	PULLEY-MOTOR	POM WHT	1
5	AH66-00161A	GEAR-PULLEY	TPE WHT	1
6	AH66-00162A	GEAR-MIDDLE	TPE WHT	1
7	AH66-00163A	GEAR-TRAY	POM WHT	1
8	AH66-00164A	CLAMPER-UPPER	POM WHT	1
9	AH66-00165A	CLAMPER-LOWER	POM WHT	1
10	AH61-00747A	BRACKET-CHUCK	SECC t1.0	1
11	AH66-00166A	SLIDE-CAM	POM WHT	1
12	AH31-00030A	MOTOR-DC	RF-300CA-11440	1
13	AH41-00352A	PCB-SWITCH	26.5*21.6	1
14	AH66-00167A	BELT-PULLEY	CR 1.5	1
15	3409-001119	SWITCH-DETECTOR	JDS2200	1
16	AH59-00130A	DVD DECK	CMS-S21MG6	1
17	6001-001257	SCREW-MACHINE	1.7*3(W4.5)	2
18	AJ60-10001A	SCREW-TAP	2*5(W7)	6
19	6003-001210	SCREW-TAP	2.6*6(W12)	5
20	AH73-00025B	RUBBER-CD	BUTYL 15	4
21	AH61-00958A	BRACKET-GUIDE	SECC 1.0t	1
22	6003-000283	SCREW-TAP	3*8	2
23	6003-000276	SCREW-TAP	3*10	4
24	AH61-00828A	HOLDER-PCB	ABS BLK	1

*** Caution:** Actually, the whole MECHA do not include DECK ASSY.
DECK ASSY should be requested separately at service repair.

2-3 SPEAKER Exploded View and Parts list

* CAUTION : It is used the bonding, connet NET FRAME(or FRONT PANEL ASS'Y) to CABINET ASS'Y.
So when the disassembly, take extreme care not to damage the SPEAKER.

