

SECTION 8

REPAIR PARTS LIST

8-1. EXPLODED VIEWS

NOTE:

- XX and -X mean standardized parts, so they may have some difference from the original one.

- Color Indication of Appearance Parts

Example:

KNOB, BALANCE (WHITE) . . . (RED)

 
↑
Parts Color

↑
Cabinet's Color

- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Hardware (# mark) list and accessories and packing materials are given in the last of the electrical parts list.

The components identified by mark  or dotted line with mark  are critical for safety.
Replace only with part number specified.


8-1-1. FRONT PANEL AND CABINET ASSEMBLIES

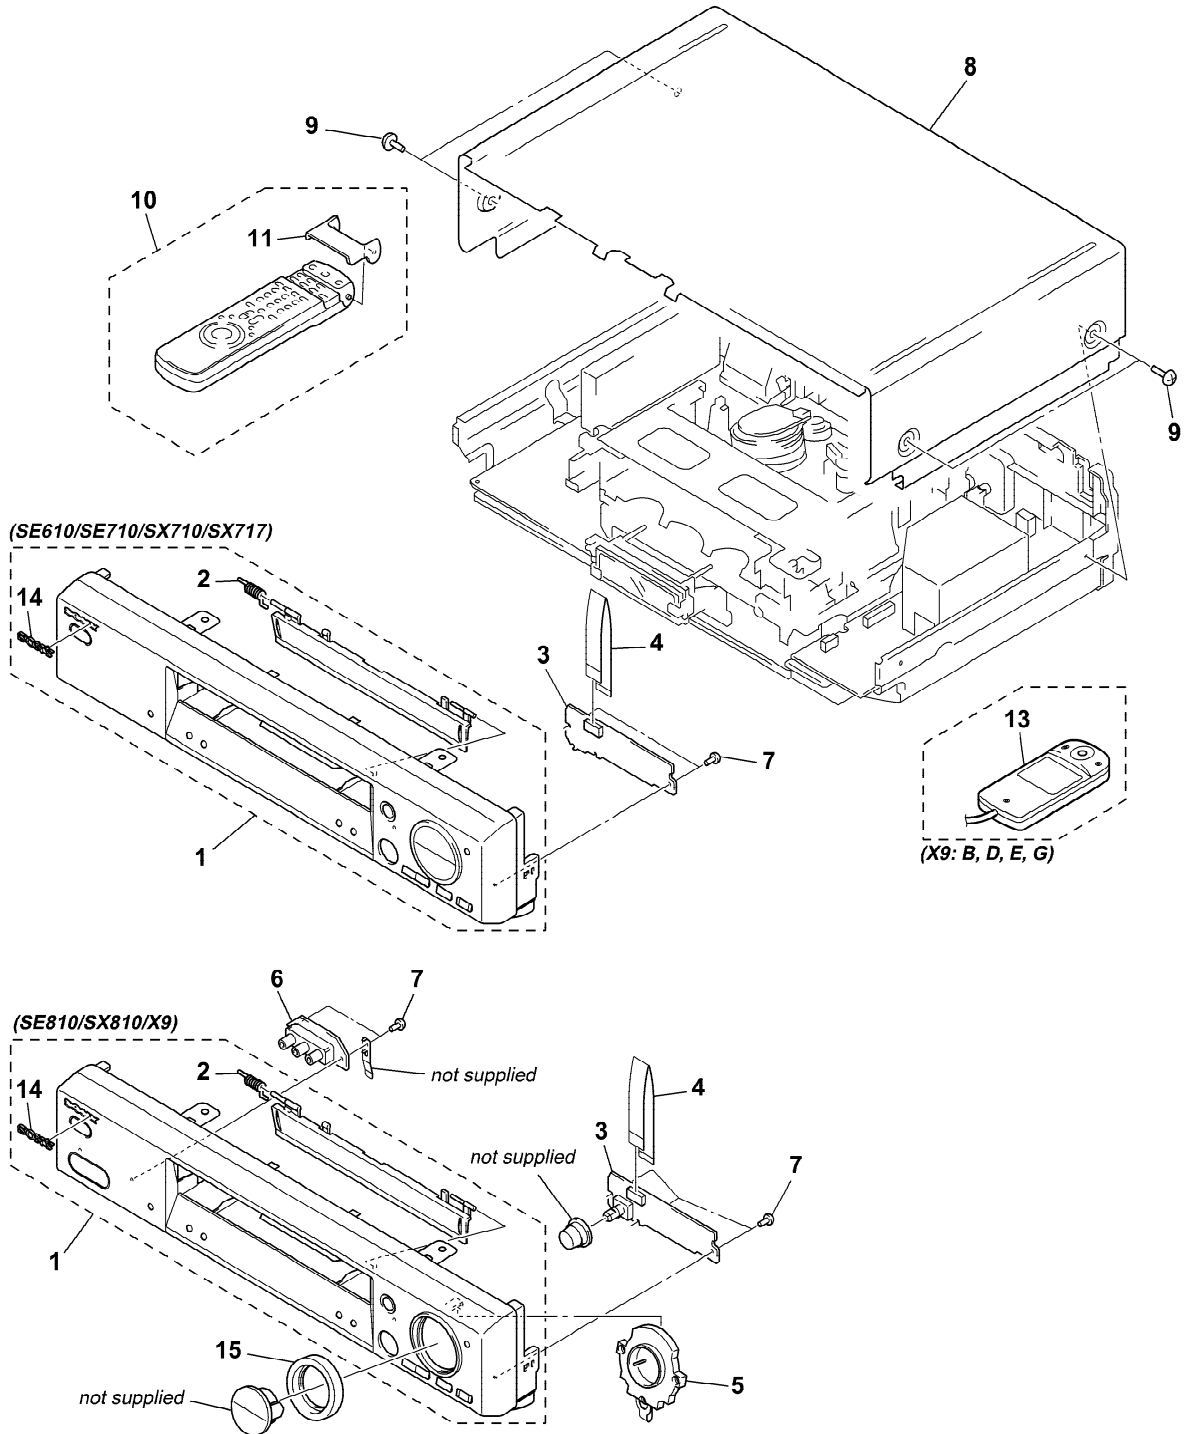

SLV-SE610/SE710/SE810/SX710/SX717/SX810/X9


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
1	X-3951-270-1	PANEL ASSY, FRONT (SE610: A, E, G, K, N)		10	1-418-010-11	COMMANDER, STANDARD (RMT-V259)	
1	X-3951-271-1	PANEL ASSY, FRONT (SE610B)				(SX717/SX810)	
1	X-3951-272-1	PANEL ASSY, FRONT (SE710: D, E, K, N)		10	1-418-010-31	COMMANDER, STANDARD (RMT-V259B)	
1	X-3951-273-1	PANEL ASSY, FRONT (SE710B)				(X9N)	
1	X-3951-274-1	PANEL ASSY, FRONT (SE710: G, I)		10	1-418-780-11	COMMANDER, STANDARD (RMT-V288)	
						(SX710: D, E, K, N)	
1	X-3951-275-1	PANEL ASSY, FRONT (SX710: D, E, K, N)		10	1-418-780-21	COMMANDER, STANDARD (RMT-V288A)	
1	X-3951-276-1	PANEL ASSY, FRONT (SX710B)				(SX710B)	
1	X-3951-277-1	PANEL ASSY, FRONT (SX717)		10	1-418-782-11	COMMANDER, STANDARD (RMT-V259K)	
1	X-3951-278-1	PANEL ASSY, FRONT (SE810: D, E, K, N)				(SE810: D, E, G, K, N)	
1	X-3951-279-1	PANEL ASSY, FRONT (SE810B)					
				10	1-418-782-21	COMMANDER, STANDARD (RMT-V259L)	
1	X-3951-280-1	PANEL ASSY, FRONT (SE810G)				(SE810B)	
1	X-3951-281-1	PANEL ASSY, FRONT (SX810)		10	1-476-369-11	COMMANDER, STANDARD (RMT-V259R)	
1	X-3951-757-1	PANEL ASSY, FRONT (X9: E, D)				(X9: D, E, G)	
1	X-3951-759-1	PANEL ASSY, FRONT (X9B)		10	1-476-370-11	COMMANDER, STANDARD (RMT-V259S)	
1	X-3951-760-1	PANEL ASSY, FRONT (X9G)				(X9B)	
				10	1-476-406-11	COMMANDER, STANDARD (RMT-V288B)	
1	X-3951-761-1	PANEL ASSY, FRONT (X9N)				(SE610: A, E, G, K, N/SE710: D, E, G, I, K, N)	
2	3-953-432-01	SPRING (GE), FL		10	1-476-406-21	COMMANDER, STANDARD (RMT-V288C)	
* 3	A-6794-810-A	DS-95 BOARD, COMPLETE				(SE610B/SE710B)	
		(SE610/SE710/SX710/SX717)					
* 3	A-6794-812-A	DS-95 BOARD, COMPLETE (SE810/SX810/X9)		11	3-709-430-01	COVER, REMOTE CONTROL	
4	1-757-593-11	CABLE, FLAT (FDS-10)				(for RMT-V259/V288/V288A/V288B/V288C)	
		(SE610/SE710/SX710/SX717)				(SE610/SE710/SX710/SX717/SX810)	
				11	3-709-430-11	COVER, REMOTE CONTROL	
4	1-757-594-11	CABLE, FLAT (FDS-9) (SE810/SX810/X9)				(for RMT-V259K/V259L) (SE810)	
5	1-762-844-31	SWITCH, ROTARY (SE810/SX810/X9)		13	1-476-070-11	CONTROLLER, STB/SAT (RMT-CM103)	
* 6	A-6794-811-A	JK-201 BOARD, COMPLETE (SE810/SX810/X9)				(X9: B, D, E)	
7	4-921-277-41	SCREW (B2.6X8), TAPPING, BIND		13	1-476-070-21	CONTROLLER, STB/SAT (RMT-CM103) (X9G)	
8	3-057-808-31	CASE, UPPER (SX710/SX717/SX810)					
				14	3-053-436-01	EMBLEM (NO.5), SONY (SX710/SX717/SX810)	
8	3-057-808-51	CASE, UPPER (SE610/SE710/SE810/X9)		14	3-053-436-11	EMBLEM (NO.5), SONY (SE610/SE710/SE810)	
9	3-363-099-01	SCREW (CASE 3 TP2) (SX710/SX717/SX810)		14	4-942-568-61	EMBLEM (NO.5), SONY (X9)	
9	3-363-099-11	SCREW (CASE 3 TP2)		15	3-057-801-11	RING (H), CHANGE SPEED (SX810)	
		(SE610/SE710/SE810/X9)		15	3-057-801-31	RING (H), CHANGE SPEED (SE810/X9)	

 8-1-2. CHASSIS ASSEMBLY

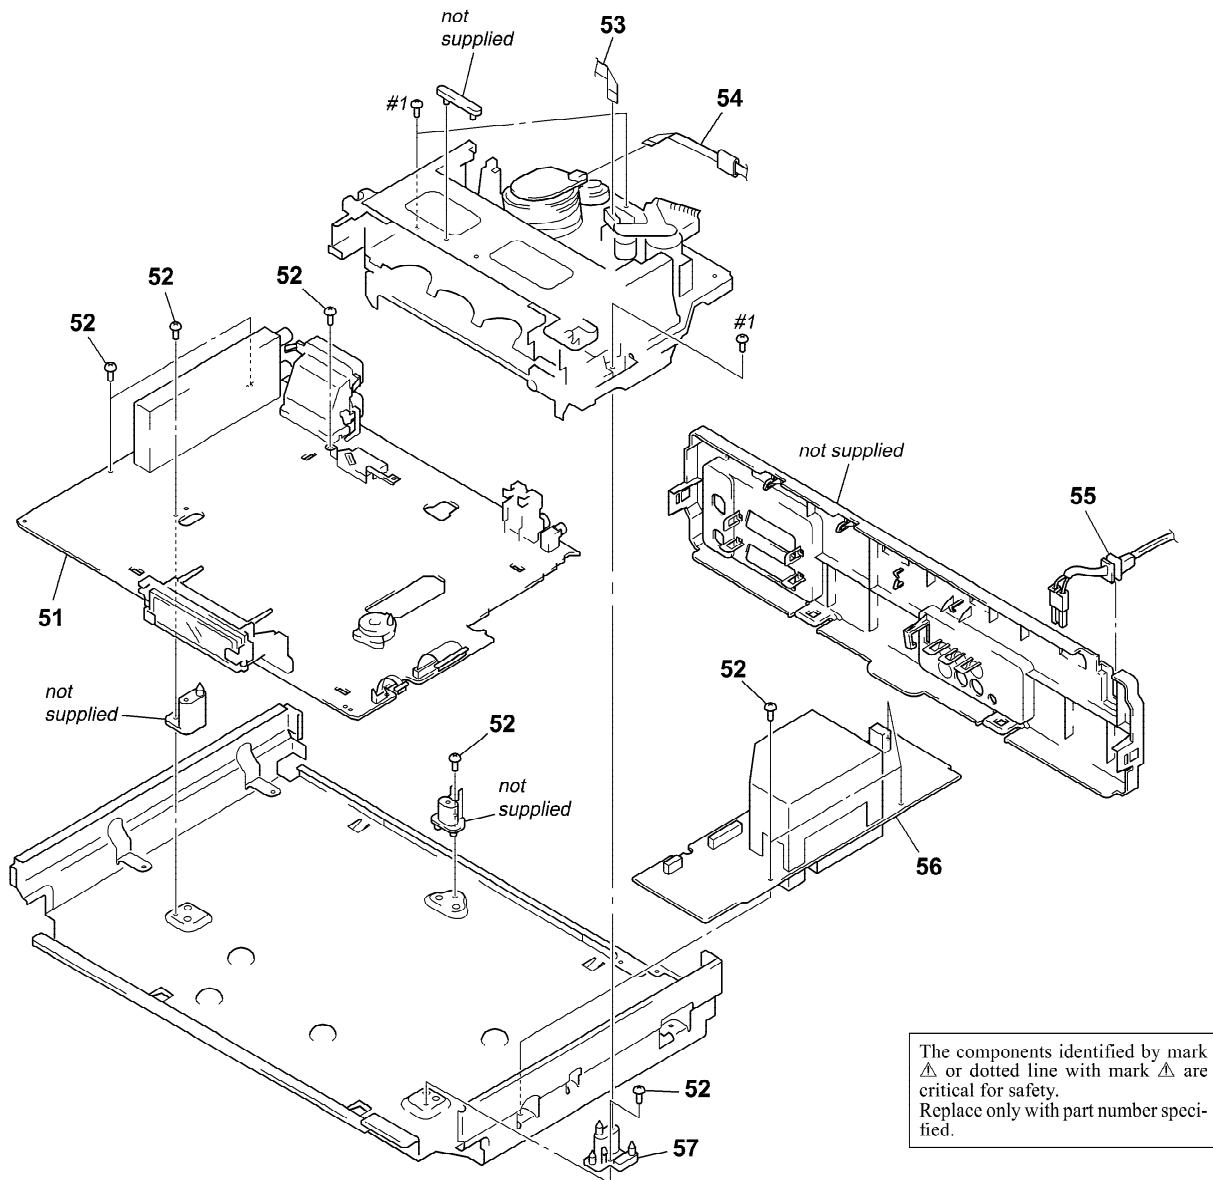


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
* 51	A-6713-793-A	MA-400 BOARD, COMPLETE (SE710D/SX710D/SX717D)		* 51	A-6713-807-A	MA-400 BOARD, COMPLETE (X9D)	
* 51	A-6713-794-A	MA-400 BOARD, COMPLETE (SE710B/SX710B)		* 51	A-6713-808-A	MA-400 BOARD, COMPLETE (X9B)	
* 51	A-6713-795-A	MA-400 BOARD, COMPLETE (SE810B)		* 51	A-6713-809-A	MA-400 BOARD, COMPLETE (X9E)	
* 51	A-6713-796-A	MA-400 BOARD, COMPLETE (SE810D/SX810)		* 51	A-6713-810-A	MA-400 BOARD, COMPLETE (SE810N/X9N)	
* 51	A-6713-797-A	MA-400 BOARD, COMPLETE (SE810G)		* 51	A-6713-811-A	MA-400 BOARD, COMPLETE (SE810K)	
* 51	A-6713-798-A	MA-400 BOARD, COMPLETE (SE710G)		* 51	A-6713-812-A	MA-400 BOARD, COMPLETE (SE710N/SX710N)	
* 51	A-6713-799-A	MA-400 BOARD, COMPLETE (SE710E/SX710E/SX717E)		* 51	A-6713-813-A	MA-400 BOARD, COMPLETE (SE710K/SX710K)	
* 51	A-6713-800-A	MA-400 BOARD, COMPLETE (SE710I)		* 51	A-6713-814-A	MA-400 BOARD, COMPLETE (SE610N)	
* 51	A-6713-801-A	MA-400 BOARD, COMPLETE (SE810E)		* 51	A-6713-815-A	MA-400 BOARD, COMPLETE (SE610K)	
* 51	A-6713-802-A	MA-400 BOARD, COMPLETE (SE610G)		52	3-970-608-21	SUMITITE (B3), +BV	
* 51	A-6713-803-A	MA-400 BOARD, COMPLETE (SE610A)		53	1-757-537-11	CABLE, FLAT (FAC-9)	
* 51	A-6713-804-A	MA-400 BOARD, COMPLETE (SE610B)		54	1-792-022-11	CABLE, FLAT (FFM-001)	
* 51	A-6713-805-A	MA-400 BOARD, COMPLETE (SE610E)		Δ 55	1-782-012-11	CORD, POWER	
* 51	A-6713-806-A	MA-400 BOARD, COMPLETE (X9G)		* 56	1-468-458-14	POWER BLOCK (SRV938EK)	
				57	3-057-805-01	BASE, MD (R), KS	

 8-1-3. MECHANISM CHASSIS ASSEMBLY (1)

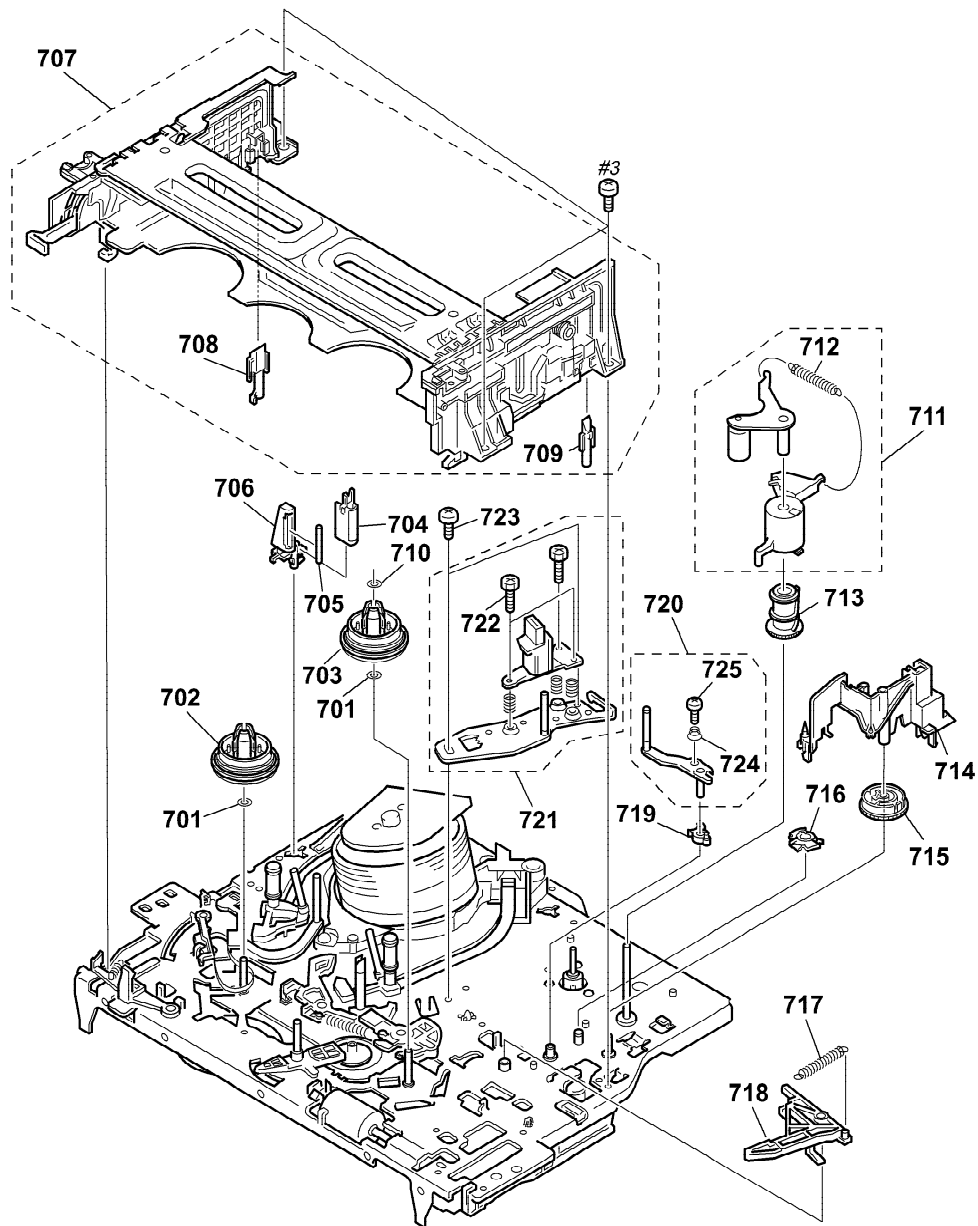


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
701	3-977-509-01	WASHER, THRUST		714	3-063-773-02	OPENER, LID (SL)	
702	3-977-507-01	TABLE, REEL (S)		715	3-977-441-03	GEAR, PINCH PRESSING	
703	3-977-508-01	TABLE, REEL (T)		716	3-977-445-02	GEAR, TG8 ARM DRIVING	
704	1-500-471-11	HEAD, FE		717	3-062-763-01	SPRING, EXTENSION (RVS BRAKE)	
705	3-977-495-01	SHAFT TG2		718	X-3950-964-1	ARM ASSY, RVS BRAKE (SL)	
706	3-977-494-01	HOLDER, FEH		719	3-063-756-01	GEAR, TG8 ARM H/R	
707	A-6776-359-C	FL COMPLETE ASSY (SL)		720	X-3947-590-1	TG8 ASSY	
708	3-977-535-01	PLATE, LUMINOUS (END SENSOR)		721	A-6775-791-A	ACE BLOCK ASSY (EURO 3)	
709	3-977-536-01	PLATE, LUMINOUS (TOP SENSOR)		722	3-974-556-11	+ HEXA TT 2.6X9 (TAPER)	
710	3-977-443-01	WASHER, STOPPER		723	3-979-508-01	SCREW +HEXA TP SW 3X8	
711	A-6759-863-B	PRESS BLOCK ASSY, PINCH		724	3-059-958-01	SPRING, TG 8	
712	3-958-455-01	SPRING (PINCH), TENSION		725	3-051-300-03	LOCK ACE SCREW	
713	3-977-447-01	GEAR, ELEVATOR					

 8-1-4. MECHANISM CHASSIS ASSEMBLY (2)

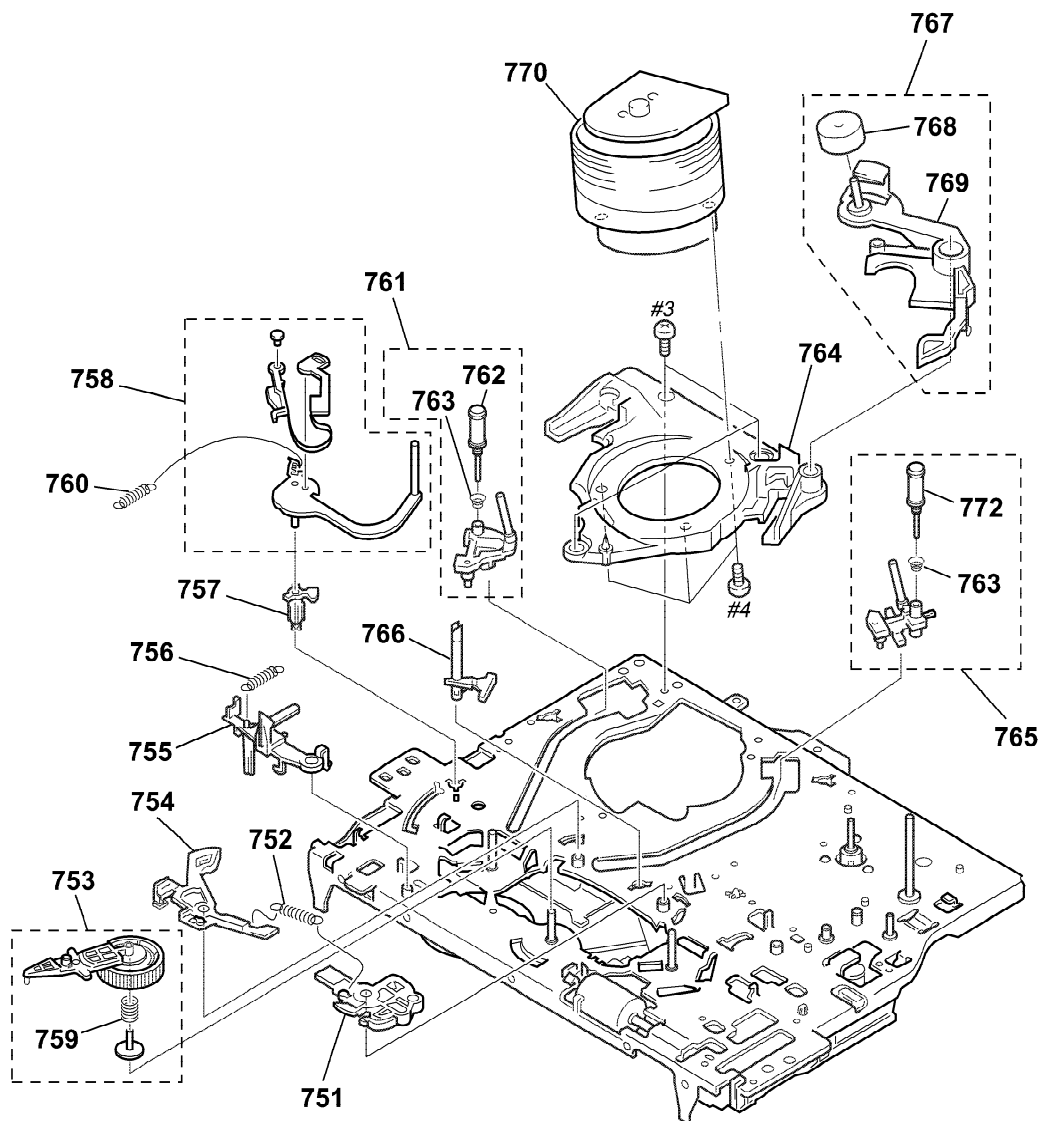

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
751	X-3949-363-1	BRAKE ASSY, MAIN (T)		763	3-965-178-01	SPRING	
752	3-053-882-01	SPRING, TENS (MAIN BRAKE)		764	3-062-687-01	BASE, DRUM, K (UPPER MOTOR)	
753	X-3947-573-1	ARM ASSY, PENDULUM		765	A-6750-328-E	SHUTTLE (T) BLOCK ASSY	
754	X-3951-005-1	BRAKE ASSY, MAIN (S) (B) H/R		766	3-977-501-01	PLATE, LUMINOUS	
755	3-063-772-01	LEVER, REC PROOF (SL)		767	A-6746-074-G	ROLLER BLOCK ASSY, HC	
756	3-976-767-01	SPRING, TENS. (REC. PROOF)		768	X-3947-255-1	ROLLER ASSY, HC	
757	3-977-487-01	BOSS, TG1 FULCRUM		769	3-975-724-07	ARM, HC	
758	X-3950-966-1	TG1 ASSY (SL)		770	1-772-364-11	DRUM ASSY, DZH-0B5A-R	
759	3-063-958-01	SPRING, COMP (SL PEND)				(EXCEPT SE610B/SE710B/ SE810B/SX710B/X9B)	
760	3-977-488-01	SPRING (POWER TENSION)		770	1-772-365-11	DRUM ASSY, DZH-0B6A-R	
761	A-6775-463-A	SHUTTLE (S) BLOCK ASSY, ST				(SE610B/SE710B/SE810B/SX710B/X9B)	
762	X-3948-050-1	ROLLER ASSY, GUIDE		772	X-3949-910-1	G. ROLLER ASSY	

 8-1-5. MECHANISM CHASSIS ASSEMBLY (3)

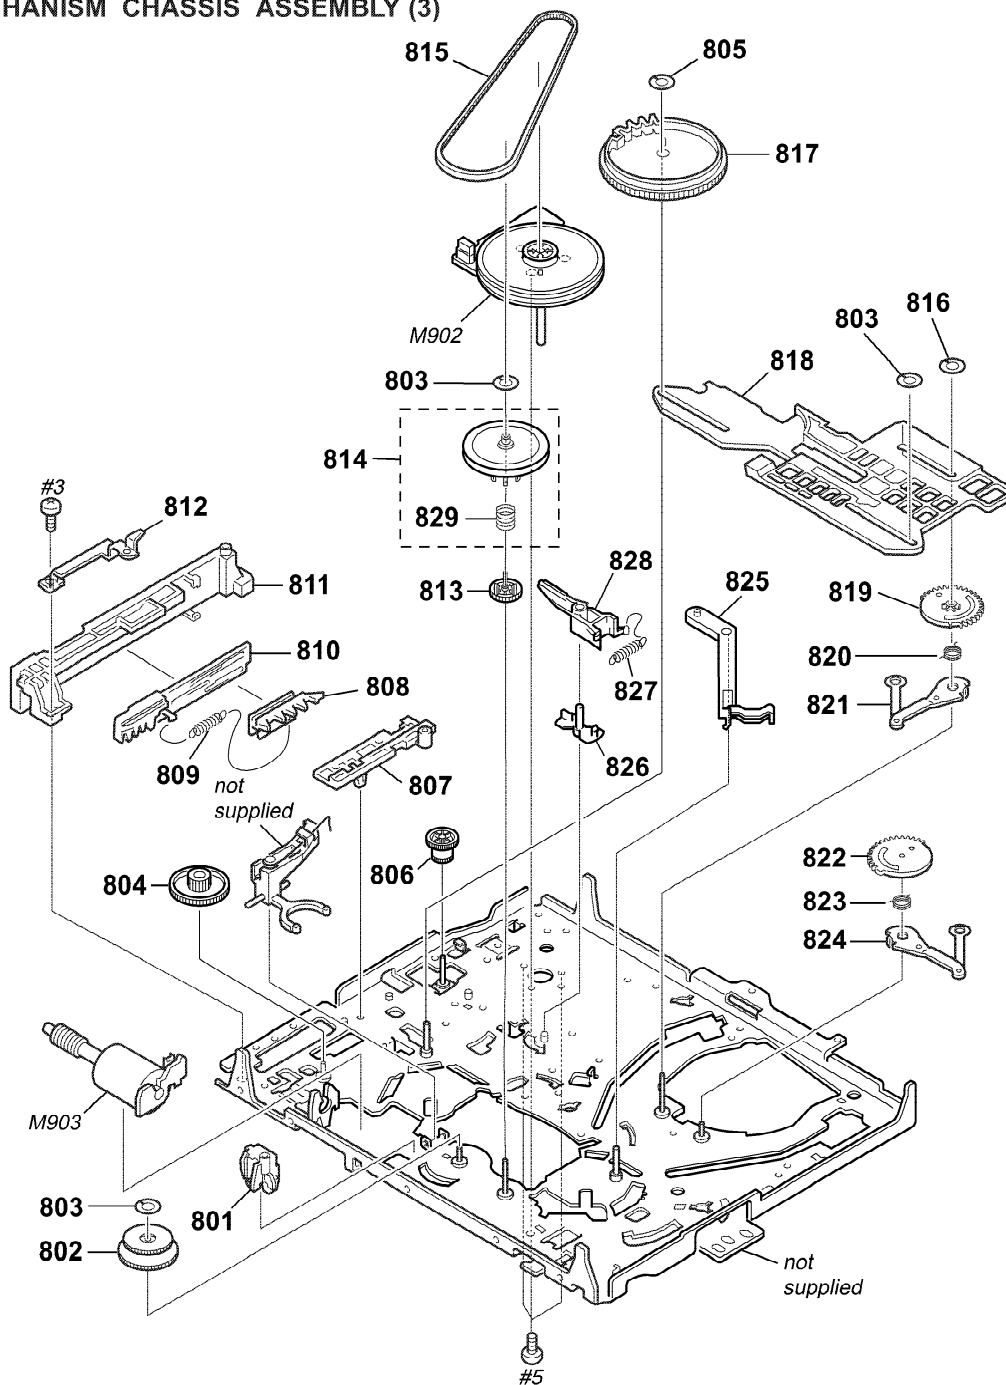

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
801	3-977-437-01	RETAINER, CAM MOTOR		817	3-063-755-01	GEAR, CAM H/R	
802	X-3949-364-1	ASSY, REEL DIRECT SELECT (B)		818	3-063-768-01	SLIDER (SL)	
803	3-977-443-01	WASHER, STOPPER		819	3-063-757-01	GEAR, LOADING (T) H/R	
804	3-063-760-01	WORM-WHEEL H/R		820	3-977-456-03	SPRING, TORSION (LOAD T)	
805	3-056-952-11	WASHER, STOPPER		821	X-3948-132-2	LEVER ASSY, LOADING (T)	
806	3-977-444-01	GEAR, PINCH TRANSMISSION		822	3-977-451-01	GEAR, LOADING (S)	
807	3-977-515-01	GUIDE, FL SLIDER		823	3-977-452-01	SPRING, TORSION (LOAD S)	
808	3-977-517-01	PLATE, SLIDE, FL		824	X-3948-131-1	LEVER ASSY, LOADING (S)	
809	3-977-519-01	SPRING, TENS. (LIMIT, FL)		825	3-977-489-01	ARM, TG1 DRIVING	
810	3-977-518-02	PLATE, LIMITTER, FL		826	3-977-468-01	SHAFT, CAPSTAN BRAKE	
811	3-977-516-01	HOLDER, FL SLIDER		827	3-977-467-02	SPRING, CAP BRAKE	
812	3-977-877-01	PLATE, RETAINER		828	X-3950-965-1	BRAKE ASSY, CAPSTAN (SL)	
813	3-977-504-01	GEAR, CLUTCH		829	3-063-823-01	SPRING, COMP (LIMITTER LOW K)	
814	X-3949-365-1	GEAR ASSY PULLEY (B)		M902	1-698-971-11	MOTOR, DC (CAPSTAN)	
815	3-977-510-01	BELT, RUBBER		M903	X-3947-577-1	MOTOR ASSY, CAM	
816	3-056-824-01	WASHER, STOPPER					

8-2. ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
All resistors are in ohms.
METAL: Metal-film resistor.
METAL OXIDE: Metal oxide-film resistor.
F: nonflammable

- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS
In each case, u: μ , for example:
uA. . . : μ A. . . uPA. . . : μ PA. . .
uPB. . . : μ PB. . . uPC. . . : μ PC. . .
uPD. . . : μ PD. . .
- CAPACITORS
uF: μ F
- COILS
uH: μ H
- Not all of the parts for POWER BLOCK (SRV938EK) are listed.

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
*	A-6794-810-A	DS-95 BOARD, COMPLETE (SE610/SE710/SX710/SX717)		S453	1-786-097-21	SWITCH, TACT (▶) (SE610/SE710/SX710/SX717)	
*	A-6794-812-A	DS-95 BOARD, COMPLETE (SE810/SX810/X9) ***** (Ref.No. 1,000 Series)		S454	1-786-097-21	SWITCH, TACT (JOG) (SE810/SX810/X9)	
		< CONNECTOR >		S455	1-786-097-21	SWITCH, TACT (▶▶)	
CN450	1-770-514-31	CONNECTOR, FFC/FPC 5P (SE810/SX810/X9)		S456	1-786-097-21	SWITCH, TACT (■)	
CN451	1-770-519-31	CONNECTOR, FFC/FPC 11P (SE810/SX810/X9)		S457	1-786-097-21	SWITCH, TACT (合)	
CN453	1-770-514-31	CONNECTOR, FFC/FPC 5P (SE610/SE710/SX710/SX717)					
		< DIODE >					
D450	8-719-056-06	DIODE SLR-342DCT31 (JOG) (SE810/SX810/X9)					
		< SHORT >					
JS450	1-216-295-11	SHORT 0 (SE610/SE710/SX710/SX717)					
		< TRANSISTOR >					
Q450	8-729-043-29	TRANSISTOR PDTC144EK-115 (SE810/SX810/X9)					
		< RESISTOR >					
R450	1-249-408-11	CARBON 180 5% 1/4W F (SE810/SX810/X9)					
R451	1-216-057-00	METAL CHIP 2.2K 5% 1/10W					
R452	1-249-417-11	CARBON 1K 5% 1/4W F					
R453	1-216-053-00	METAL CHIP 1.5K 5% 1/10W					
R454	1-216-057-00	METAL CHIP 2.2K 5% 1/10W					
R455	1-216-061-00	METAL CHIP 3.3K 5% 1/10W					
R456	1-249-425-11	CARBON 4.7K 5% 1/4W F					
R457	1-249-417-11	CARBON 1K 5% 1/4W F					
R458	1-216-053-00	METAL CHIP 1.5K 5% 1/10W					
		< SWITCH >					
S410	1-418-156-11	ENCODER, ROTARYRY (DIAL TIMER) (SE810/SX810/X9)					
S450	1-786-097-21	SWITCH, TACT (●)					
S451	1-786-097-21	SWITCH, TACT (◀◀)					
S452	1-786-097-21	SWITCH, TACT (■) (SE610/SE710/SX710/SX717)					

MA-400

Ref. No.	Part No.	Description	Remark
*	A-6713-793-A	MA-400 BOARD, COMPLETE (SE710D/SX710D/SX717D)	
*	A-6713-794-A	MA-400 BOARD, COMPLETE (SE710B/SX710B)	
*	A-6713-795-A	MA-400 BOARD, COMPLETE (SE810B)	
*	A-6713-796-A	MA-400 BOARD, COMPLETE (SE810D/SX810)	
*	A-6713-797-A	MA-400 BOARD, COMPLETE (SE810G)	
*	A-6713-798-A	MA-400 BOARD, COMPLETE (SE710G)	
*	A-6713-799-A	MA-400 BOARD, COMPLETE (SE710E/SX710E/SX717E)	
*	A-6713-800-A	MA-400 BOARD, COMPLETE (SE710I)	
*	A-6713-801-A	MA-400 BOARD, COMPLETE (SE810E)	
*	A-6713-802-A	MA-400 BOARD, COMPLETE (SE610G)	
*	A-6713-803-A	MA-400 BOARD, COMPLETE (SE610A)	
*	A-6713-804-A	MA-400 BOARD, COMPLETE (SE610B)	
*	A-6713-805-A	MA-400 BOARD, COMPLETE (SE610E)	
*	A-6713-806-A	MA-400 BOARD, COMPLETE (X9G)	
*	A-6713-807-A	MA-400 BOARD, COMPLETE (X9D)	
*	A-6713-808-A	MA-400 BOARD, COMPLETE (X9B)	
*	A-6713-809-A	MA-400 BOARD, COMPLETE (X9E)	
*	A-6713-810-A	MA-400 BOARD, COMPLETE (SE810N/X9N)	
*	A-6713-811-A	MA-400 BOARD, COMPLETE (SE810K)	
*	A-6713-812-A	MA-400 BOARD, COMPLETE (SE710N/SX710N)	
*	A-6713-813-A	MA-400 BOARD, COMPLETE (SE710K/SX710K)	
*	A-6713-814-A	MA-400 BOARD, COMPLETE (SE610N)	
*	A-6713-815-A	MA-400 BOARD, COMPLETE (SE610K) ***** (Ref.No. 1,000 Series)	
	3-057-806-01	BASE, FL	
	3-058-480-02	HOLDER, FLO	
	3-960-273-11	SPACER, TOP END	
		< CAPACITOR >	
C100	1-163-009-11	CERAMIC CHIP 0.001uF 10% 50V	
C101	1-163-009-11	CERAMIC CHIP 0.001uF 10% 50V	
C102	1-163-009-11	CERAMIC CHIP 0.001uF 10% 50V	
C103	1-128-057-11	ELECT 330uF 20% 6.3V	
C105	1-163-009-11	CERAMIC CHIP 0.001uF 10% 50V	
C107	1-104-664-11	ELECT 47uF 20% 16V	
C108	1-127-573-11	CERAMIC CHIP 1uF 10% 16V	
C113	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C114	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C115	1-163-038-11	CERAMIC CHIP 0.1uF 25V	
C120	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C121	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C122	1-124-589-11	ELECT 47uF 20% 16V	
C123	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C131	1-124-589-11	ELECT 47uF 20% 16V	
C133	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
C134	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
C140	1-126-933-11	ELECT 100uF 20% 16V	
C141	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C142	1-163-037-11	CERAMIC CHIP 0.022uF 10% 25V	
C143	1-126-965-11	ELECT 22uF 20% 50V	
C144	1-126-965-11	ELECT 22uF 20% 50V	
C145	1-126-933-11	ELECT 100uF 20% 16V	
C146	1-164-161-11	CERAMIC CHIP 0.0022uF 10% 100V	
C147	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V (SE810/SX810/X9)	

Ref. No.	Part No.	Description	Remark
C160	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C161	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C162	1-104-905-11	CAPACITOR 0.22F 5.5V	
C163	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C164	1-126-933-11	ELECT 100uF 20% 16V	
C165	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C166	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C167	1-163-809-11	CERAMIC CHIP 0.047uF 10% 25V	
C168	1-163-231-11	CERAMIC CHIP 15PF 5% 50V	
C169	1-163-237-11	CERAMIC CHIP 27PF 5% 50V	
C170	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
C171	1-163-229-11	CERAMIC CHIP 12PF 5% 50V	
C172	1-163-227-11	CERAMIC CHIP 10PF 0.5PF 50V	
C173	1-163-007-11	CERAMIC CHIP 680PF 10% 50V	
C174	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
C201	1-126-965-11	ELECT 22uF 20% 50V	
C202	1-163-809-11	CERAMIC CHIP 0.047uF 10% 25V	
C203	1-163-037-11	CERAMIC CHIP 0.022uF 10% 25V	
C204	1-126-960-11	ELECT 1uF 20% 50V	
C205	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
C206	1-104-664-11	ELECT 47uF 20% 16V	
C207	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V (SE610B/SE710B/SE810B/SX710B/X9B)	
C209	1-163-037-11	CERAMIC CHIP 0.022uF 10% 25V	
C210	1-126-960-11	ELECT 1uF 20% 50V	
C211	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C212	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C213	1-126-960-11	ELECT 1uF 20% 50V	
C214	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C215	1-124-589-11	ELECT 47uF 20% 16V	
C217	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
C218	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C219	1-126-960-11	ELECT 1uF 20% 50V	
C220	1-124-261-00	ELECT 10uF 20% 50V	
C221	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
C222	1-126-160-11	ELECT 1uF 20% 50V	
C223	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
C224	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C225	1-104-664-11	ELECT 47uF 20% 16V	
C226	1-107-823-11	CERAMIC CHIP 0.47uF 10% 16V	
C227	1-126-964-11	ELECT 10uF 20% 50V	
C228	1-109-982-11	CERAMIC CHIP 1uF 10% 10V	
C229	1-126-964-11	ELECT 10uF 20% 50V	
C230	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
C231	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
C232	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
C233	1-104-664-11	ELECT 47uF 20% 16V	
C234	1-163-255-11	CERAMIC CHIP 150PF 5% 50V	
C236	1-163-259-91	CERAMIC CHIP 220PF 5% 50V	
C237	1-126-960-11	ELECT 1uF 20% 50V	
C238	1-163-237-11	CERAMIC CHIP 27PF 5% 50V	
C239	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
C240	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C241	1-126-960-11	ELECT 1uF 20% 50V	
C242	1-126-960-11	ELECT 1uF 20% 50V	
C243	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V (SE810/SX810/X9)	
C244	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V (SE610: B, E/SE710/SE810/ SX710/SX717/SX810/X9)	

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
C245	1-163-989-11	CERAMIC CHIP	0.033uF	10%	25V	C338	1-124-261-00	ELECT	10uF	20%	50V
C247	1-104-664-11	ELECT	47uF	20%	16V			(SE610: B, E/SE710: B, D, E, K, N/			
C248	1-124-589-11	ELECT	47uF	20%	16V			SE810: B, D, E, K, N/			
C249	1-163-243-11	CERAMIC CHIP	47PF	5%	50V			SX710/SX717/SX810/X9: B, D, E, N)			
C250	1-163-243-11	CERAMIC CHIP	47PF	5%	50V	C351	1-126-965-11	ELECT	22uF	20%	50V
			(SE810/SX810/X9)			C352	1-126-963-11	ELECT	4.7uF	20%	50V
C251	1-163-243-11	CERAMIC CHIP	47PF	5%	50V	C353	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
			(SE610: B, E/SE710/SE810/			C354	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
			SX710/SX717/SX810/X9)								
C252	1-163-243-11	CERAMIC CHIP	47PF	5%	50V	C355	1-124-589-11	ELECT	47uF	20%	16V
C281	1-164-489-11	CERAMIC CHIP	0.22uF	10%	16V	C357	1-124-589-11	ELECT	47uF	20%	16V
C282	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V	C358	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C284	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C359	1-137-374-11	MYLAR	0.047uF	5%	50V
C285	1-124-589-11	ELECT	47uF	20%	16V			(SE610/SE710/SX710/SX717)			
C286	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C359	1-137-462-11	MYLAR	0.018uF	5%	100V
C288	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V			(SE810/SX810/X9)			
C293	1-163-251-11	CERAMIC CHIP	100PF	5%	50V	C361	1-126-163-11	ELECT	4.7uF	20%	50V
C295	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C362	1-128-131-11	ELECT	22uF	20%	50V
C296	1-163-227-11	CERAMIC CHIP	10PF	0.5PF	50V	C363	1-124-242-00	ELECT	33uF	20%	25V
C297	1-163-227-11	CERAMIC CHIP	10PF	0.5PF	50V	C365	1-163-010-11	CERAMIC CHIP	0.0012uF	10%	50V
C298	1-163-227-11	CERAMIC CHIP	10PF	0.5PF	50V	C366	1-163-011-11	CERAMIC CHIP	0.0015uF	10%	50V
C299	1-163-227-11	CERAMIC CHIP	10PF	0.5PF	50V	C367	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C303	1-163-038-11	CERAMIC CHIP	0.1uF		25V	C368	1-126-964-11	ELECT	10uF	20%	50V
C304	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C369	1-126-960-11	ELECT	1uF	20%	50V
C306	1-104-664-11	ELECT	47uF	20%	16V	C370	1-124-589-11	ELECT	47uF	20%	16V
C307	1-104-664-11	ELECT	47uF	20%	16V	C374	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C308	1-126-964-11	ELECT	10uF	20%	50V	C375	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C309	1-163-020-00	CERAMIC CHIP	0.0082uF	10%	50V	C390	1-137-397-11	MYLAR	0.047uF	5%	100V
C310	1-119-799-11	ELECT	47uF	20%	16V			(SE810/SX810/X9)			
C311	1-126-964-11	ELECT	10uF	20%	50V	C391	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C312	1-124-257-00	ELECT	2.2uF	20%	50V			(SE810/SX810/X9)			
C313	1-126-964-11	ELECT	10uF	20%	50V	C392	1-163-011-11	CERAMIC CHIP	0.0015uF	10%	50V
C314	1-119-799-11	ELECT	47uF	20%	16V			(SE810/SX810/X9)			
C315	1-163-020-00	CERAMIC CHIP	0.0082uF	10%	50V	C393	1-126-933-11	ELECT	100uF	20%	16V
C316	1-126-964-11	ELECT	10uF	20%	50V			(SE810/SX810/X9)			
C317	1-164-489-11	CERAMIC CHIP	0.22uF	10%	16V	C394	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C319	1-124-261-00	ELECT	10uF	20%	50V			(SE810/SX810/X9)			
C320	1-126-964-11	ELECT	10uF	20%	50V	C395	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C322	1-126-964-11	ELECT	10uF	20%	50V	C420	1-124-589-11	ELECT	47uF	20%	16V
C323	1-163-038-11	CERAMIC CHIP	0.1uF		25V	C423	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C324	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C424	1-124-261-00	ELECT	10uF	20%	50V
C325	1-164-489-11	CERAMIC CHIP	0.22uF	10%	16V	C427	1-124-635-00	ELECT	220uF	20%	6.3V
C326	1-164-489-11	CERAMIC CHIP	0.22uF	10%	16V	C500	1-163-131-00	CERAMIC CHIP	390PF	5%	50V
C327	1-164-489-11	CERAMIC CHIP	0.22uF	10%	16V	C501	1-163-131-00	CERAMIC CHIP	390PF	5%	50V
C328	1-126-960-11	ELECT	1uF	20%	50V	C502	1-163-131-00	CERAMIC CHIP	390PF	5%	50V
			(SE810/SX810/X9)			C503	1-163-131-00	CERAMIC CHIP	390PF	5%	50V
C329	1-126-960-11	ELECT	1uF	20%	50V	C510	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
			(SE810/SX810/X9)			C511	1-104-664-11	ELECT	47uF	20%	16V
C330	1-126-960-11	ELECT	1uF	20%	50V	C512	1-104-664-11	ELECT	47uF	20%	16V
			(SE810/SX810/X9)			C513	1-126-935-11	ELECT	470uF	20%	6.3V
C331	1-126-960-11	ELECT	1uF	20%	50V	C514	1-163-239-11	CERAMIC CHIP	33PF	5%	50V
C332	1-126-960-11	ELECT	1uF	20%	50V			(SE710/SE810/SX710/SX717/SX810/X9)			
			(SE610: B, E/SE710/SE810/			C515	1-163-239-11	CERAMIC CHIP	33PF	5%	50V
			SX710/SX717/SX810/X9)					(SE710/SE810/SX710/SX717/SX810/X9)			
C333	1-126-960-11	ELECT	1uF	20%	50V	C516	1-163-017-00	CERAMIC CHIP	0.0047uF	5%	50V
			(SE610: B, E/SE710/SE810/			C570	1-163-131-00	CERAMIC CHIP	390PF	5%	50V
			SX710/SX717/SX810/X9)					(SE610: B, E/SE710/SE810/SX710/SX717/SX810/X9)			
C336	1-126-964-11	ELECT	10uF	20%	50V	C571	1-163-131-00	CERAMIC CHIP	390PF	5%	50V
C337	1-124-261-00	ELECT	10uF	20%	50V			(SE610: B, E/SE710/SE810/			
			(SE610: B, E/SE710: B, D, E, K, N/					SX710/SX717/SX810/X9)			
			SE810: B, D, E, K, N/			C572	1-163-131-00	CERAMIC CHIP	390PF	5%	50V
			SX710/SX717/SX810/X9: B, D, E, N)					(SE610: B, E/SE710: B, D, E, K, N/			
								SE810: B, D, E, K, N/			
								SX710/SX717/SX810/X9: B, D, E, N)			

MA-400

Ref. No.	Part No.	Description	Remark
C573	1-163-131-00	CERAMIC CHIP 390PF 5% 50V (SE610: B, E/SE710: B, D, E, K, N/ SE810: B, D, E, K, N/ SX710/SX717/SX810/X9: B, D, E, N)	
C580	1-127-876-21	CERAMIC 0.01uF 10% 50V	
C611	1-104-664-11	ELECT 47uF 20% 25V	
C612	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C613	1-126-933-11	ELECT 100uF 20% 16V	
C618	1-126-965-11	ELECT 22uF 20% 50V	
C621	1-124-635-00	ELECT 220uF 20% 6.3V (SE610: B, E/SE710/SE810/ SX710/SX717/SX810/X9)	
C660	1-163-231-11	CERAMIC CHIP 15PF 5% 50V	
C661	1-163-231-11	CERAMIC CHIP 15PF 5% 50V	
C662	1-163-017-00	CERAMIC CHIP 0.0047uF 5% 50V	
C663	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C664	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
C665	1-163-245-11	CERAMIC CHIP 56PF 5% 50V (SE610: B, K, N/SE710: B, K, N/SE810: B, K, N/ SX710: B, K, N/X9: B, N)	
C666	1-163-135-00	CERAMIC CHIP 560PF 5% 50V	
C667	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C668	1-125-972-91	ELECT 100uF 20% 16V	
C669	1-163-016-00	CERAMIC CHIP 0.0039uF 10% 50V	
C670	1-109-982-11	CERAMIC CHIP 1uF 10% 10V	
C671	1-163-235-11	CERAMIC CHIP 22PF 5% 50V	
C672	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C701	1-126-964-11	ELECT 10uF 20% 50V	
C702	1-164-161-11	CERAMIC CHIP 0.0022uF 10% 100V	
C704	1-126-964-11	ELECT 10uF 20% 50V	
C705	1-163-021-91	CERAMIC CHIP 0.01uF 10% 50V	
C708	1-104-664-11	ELECT 47uF 20% 16V	
C709	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C710	1-126-965-11	ELECT 22uF 20% 50V	
C711	1-104-664-11	ELECT 47uF 20% 16V	
C712	1-163-241-11	CERAMIC CHIP 39PF 5% 50V	
C713	1-163-241-11	CERAMIC CHIP 39PF 5% 50V	
C714	1-104-664-11	ELECT 47uF 20% 16V	
C720	1-163-021-91	CERAMIC CHIP 0.01uF 10% 50V	
C730	1-126-964-11	ELECT 10uF 20% 50V	
C731	1-126-964-11	ELECT 10uF 20% 50V	
C752	1-126-933-11	ELECT 100uF 20% 16V	
C753	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
C754	1-126-935-11	ELECT 470uF 20% 6.3V	
C755	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
C757	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C801	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C850	1-163-038-11	CERAMIC CHIP 0.1uF 25V	
C851	1-126-964-11	ELECT 10uF 20% 50V (SE710/SE810/SX710/SX717/SX810/X9)	
C852	1-164-161-11	CERAMIC CHIP 0.0022uF 10% 100V (SE710/SE810/SX710/SX717/SX810/X9)	
C853	1-163-989-11	CERAMIC CHIP 0.033uF 10% 25V (SE710/SE810/SX710/SX717/SX810/X9)	
C855	1-164-489-11	CERAMIC CHIP 0.22uF 10% 16V (SE710/SE810/SX710/SX717/SX810/X9)	
C856	1-163-038-11	CERAMIC CHIP 0.1uF 25V (SE710/SE810/SX710/SX717/SX810/X9)	
C871	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C872	1-104-664-11	ELECT 47uF 20% 16V (X9: B, D, E, G)	
C873	1-163-038-11	CERAMIC CHIP 0.1uF 25V (X9: B, D, E, G)	

Ref. No.	Part No.	Description	Remark
C874	1-163-038-11	CERAMIC CHIP 0.1uF 25V (X9: B, D, E, G)	
C875	1-126-935-11	ELECT 470uF 20% 6.3V (X9: B, D, E, G)	
C970	1-163-259-91	CERAMIC CHIP 220PF 5% 50V (SE610B/SE710B/SE810B/SX710B/X9B)	
C971	1-124-257-00	ELECT 2.2uF 20% 50V (SE610B/SE710B/SE810B/SX710B/X9B)	
C972	1-163-017-00	CERAMIC CHIP 0.0047uF 5% 50V (SE610B/SE710B/SE810B/SX710B/X9B)	
C973	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V (SE610B/SE710B/SE810B/SX710B/X9B)	
C974	1-126-160-11	ELECT 1uF 20% 50V (SE610B/SE710B/SE810B/SX710B/X9B)	
C975	1-163-037-11	CERAMIC CHIP 0.022uF 10% 25V (SE610B/SE710B/SE810B/SX710B/X9B)	
C976	1-163-259-91	CERAMIC CHIP 220PF 5% 50V (SE610B/SE710B/SE810B/SX710B/X9B)	
C977	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V (SE610B/SE710B/SE810B/SX710B/X9B)	
C978	1-163-017-00	CERAMIC CHIP 0.0047uF 5% 50V (SE610B/SE710B/SE810B/SX710B/X9B)	
C979	1-163-255-11	CERAMIC CHIP 150PF 5% 50V (SE610B/SE710B/SE810B/SX710B/X9B)	
C980	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V (SE610B/SE710B/SE810B/SX710B/X9B)	
C981	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V (SE610B/SE710B/SE810B/SX710B/X9B)	
C982	1-163-007-11	CERAMIC CHIP 680PF 10% 50V (SE610B/SE710B/SE810B/SX710B/X9B)	
C983	1-163-009-11	CERAMIC CHIP 0.001uF 10% 50V (SE610B/SE710B/SE810B/SX710B/X9B)	
C984	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V (SE610B/SE710B/SE810B/SX710B/X9B)	
C985	1-163-251-11	CERAMIC CHIP 100PF 5% 50V (SE610B/SE710B/SE810B/SX710B/X9B)	
C986	1-124-261-00	ELECT 10uF 20% 50V (SE610B/SE710B/SE810B/SX710B/X9B)	
C987	1-124-465-00	ELECT 0.47uF 20% 50V (SE610B/SE710B/SE810B/SX710B/X9B)	
C988	1-163-251-11	CERAMIC CHIP 100PF 5% 50V (SE610B/SE710B/SE810B/SX710B/X9B)	
C991	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V (SE610B/SE710B/SE810B/SX710B/X9B)	
C992	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V (SE610B/SE710B/SE810B/SX710B/X9B)	
C993	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V (SE610B/SE710B/SE810B/SX710B/X9B)	
C994	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V (SE610B/SE710B/SE810B/SX710B/X9B)	
C995	1-125-972-91	ELECT 100uF 20% 16V (SE610B/SE710B/SE810B/SX710B/X9B)	
C996	1-163-227-11	CERAMIC CHIP 10PF 0.5PF 50V (SE610B/SE710B/SE810B/SX710B/X9B)	
< CONNECTOR >			
CN101	1-784-484-11	CONNECTOR, FFC/FPC 5P	
CN102	1-779-723-11	CONNECTOR, BOARD TO BOARD 9P	
* CN104	1-766-716-11	CONNECTOR, BOARD TO BOARD 3P	
* CN161	1-506-469-11	PIN, CONNECTOR 4P	
CN260	1-784-490-11	CONNECTOR, FFC/FPC 11P	
* CN262	1-560-894-00	PIN, CONNECTOR 6P	
CN350	1-784-486-11	CONNECTOR, FFC/FPC 7P	
CN460	1-784-490-11	CONNECTOR, FFC/FPC 11P (SE810/SX810/X9)	

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
CN461	1-784-484-11	CONNECTOR, FFC/FPC 5P (SE610/SE710/SX710/SX717)		IC351	8-759-499-30	IC BA7755AF-E2	
CN500	1-793-918-11	CONNECTOR, SQUARE TYPE 21P (LINE-1 (TV)) (SE610: A, G, K, N)		IC420	8-759-643-83	IC uPD16315GB-3BS	
* CN501	1-568-954-11	PIN, CONNECTOR 5P (SE810/SX810/X9)		IC460	8-759-830-96	IC SFH5110-40	
CN570	1-793-917-11	CONNECTOR, SQUARE TYPE 21P (LINE-1 (TV), DECODER/LINE-2 IN) (SE610: B, E/SE710/SX710/SX717)		△ IC601	8-759-438-18	IC PQ12RD08	
CN570	1-793-917-11	CONNECTOR, SQUARE TYPE 21P (LINE-1 (TV), DECODER/LINE-3 IN) (SE810/SX810/X9)		IC850	8-759-484-61	IC SDA5650X-GEG (SE710/SE810/SX710/SX717/SX810/X9)	
CN600	1-778-674-21	CONNECTOR, BOARD TO BOARD 19P		IC970	8-759-438-17	IC LA7337 (SE610B/SE710B/SE810B/SX710B/X9B)	
CN601	1-793-673-11	CONNECTOR, BOARD TO BOARD 7P				< JACK >	
		< DIODE >		J500	1-784-414-11	JACK, PIN 2P (LINE-2 OUT) (SE710/SE810/SX710/SX717/SX810/X9)	
D100	8-719-048-26	DIODE GL528V1 (T/S LED)		J871	1-779-013-11	JACK, MINIATURE (STB CONTROL) (X9: B, D, E, G)	
D110	8-719-200-82	DIODE MPG06D-6052PKG3				< JUMPER RESISTOR >	
D424	8-719-067-40	DIODE STZ6.8N-T146		JR001	1-216-295-11	SHORT 0	
D500	8-719-071-50	DIODE BZA408B-115		JR003	1-216-295-11	SHORT 0	
D501	8-719-071-50	DIODE BZA408B-115		JR004	1-216-295-11	SHORT 0	
D502	8-719-070-59	DIODE PDZ6.8B-115		JR006	1-216-295-11	SHORT 0	
D503	8-719-977-40	DIODE UDZ-TE-17-13B		JR007	1-216-295-11	SHORT 0	
D504	8-719-070-59	DIODE PDZ6.8B-115		JR008	1-216-295-11	SHORT 0	
D570	8-719-071-50	DIODE BZA408B-115 (SE610: B, E/SE710/SE810/ SX710/SX717/SX810/X9)		JR009	1-216-295-11	SHORT 0	
D571	8-719-070-59	DIODE PDZ6.8B-115 (SE610: B, E/SE710/SE810/ SX710/SX717/SX810/X9)		JR010	1-216-295-11	SHORT 0	
D572	8-719-977-40	DIODE UDZ-TE-17-13B (SE610: B, E/SE710/SE810/ SX710/SX717/SX810/X9)		JR011	1-216-295-11	SHORT 0	
D573	8-719-070-59	DIODE PDZ6.8B-115		JR012	1-216-295-11	SHORT 0	
D590	8-719-911-19	DIODE 1SS119-25TD		JR013	1-216-295-11	SHORT 0	
D603	8-719-200-82	DIODE MPG06D-6052PKG3 (SE610: B, E/SE710/SE810/ SX710/SX717/SX810/X9)		JR014	1-216-295-11	SHORT 0	
D606	8-719-200-82	DIODE MPG06D-6052PKG3		JR015	1-216-295-11	SHORT 0	
D607	8-719-200-82	DIODE MPG06D-6052PKG3		JR016	1-216-295-11	SHORT 0	
D702	8-719-982-26	DIODE MTZJ-T-77-33		JR017	1-216-295-11	SHORT 0	
D720	8-719-911-19	DIODE 1SS119-25TD		JR018	1-216-295-11	SHORT 0	
D721	8-719-911-19	DIODE 1SS119-25TD		JR019	1-216-295-11	SHORT 0	
D750	8-719-200-82	DIODE MPG06D-6052PKG3		JR020	1-216-295-11	SHORT 0	
D800	8-719-911-19	DIODE 1SS119-25TD (SE710/SE810/SX710/SX717/SX810/X9)		JR021	1-216-295-11	SHORT 0	
D871	8-719-070-59	DIODE PDZ6.8B-115 (X9)		JR022	1-216-295-11	SHORT 0	
D872	8-719-070-59	DIODE PDZ6.8B-115 (X9)		JR201	1-216-296-11	SHORT 0	
D873	8-719-070-59	DIODE PDZ6.8B-115 (X9)		JR202	1-216-296-11	SHORT 0	
		< IC >		JR203	1-216-296-11	SHORT 0	
IC130	8-759-645-07	IC LB1943N		JR204	1-216-296-11	SHORT 0	
IC160	8-759-248-87	IC MM1256XF-BE		JR205	1-216-296-11	SHORT 0	
IC161	8-759-682-41	IC M24C32-WMN6T (A) (X9: B, D, E, G)		JR206	1-216-296-11	SHORT 0	
IC161	8-759-714-06	IC M24C16-WMN6T (A) (SE610/SE710/SE810/SX710/ SX717/SX810/X9N)		JR207	1-216-296-11	SHORT 0	
IC162	8-759-694-68	IC M37970MGA-051GP (SE610)		JR208	1-216-296-11	SHORT 0	
IC162	8-759-694-69	IC M37970MGA-050GP (SE710/SE810/SX710/SX717/SX810/X9)		JR209	1-216-296-11	SHORT 0	
IC201	8-759-699-51	IC LA71710M-MPB-E		JR210	1-216-296-11	SHORT 0	
IC301	8-759-638-55	IC TDA9605H/N2, 518		JR211	1-216-296-11	SHORT 0	
				JR212	1-216-296-11	SHORT 0	
				JR213	1-216-296-11	SHORT 0	
				JR214	1-216-296-11	SHORT 0	
				JR215	1-216-296-11	SHORT 0	
				JR216	1-216-296-11	SHORT 0	
				JR217	1-216-296-11	SHORT 0	
				JR219	1-216-296-11	SHORT 0	
				JR220	1-216-296-11	SHORT 0	
				JR221	1-216-296-11	SHORT 0	
				JR222	1-216-296-11	SHORT 0	
				JR223	1-216-296-11	SHORT 0	

The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.

MA-400

Ref. No.	Part No.	Description	Remark
JR224	1-216-296-11	SHORT	0
JR225	1-216-296-11	SHORT	0
JR226	1-216-296-11	SHORT	0
JR227	1-216-296-11	SHORT	0
JR228	1-216-296-11	SHORT	0
JR229	1-216-296-11	SHORT	0
JR230	1-216-296-11	SHORT	0
JR231	1-216-296-11	SHORT	0
JR232	1-216-296-11	SHORT	0
JR233	1-216-296-11	SHORT	0
JR234	1-216-296-11	SHORT	0
JR235	1-216-296-11	SHORT	0
JR236	1-216-296-11	SHORT	0
JR238	1-216-296-11	SHORT	0
JR239	1-216-296-11	SHORT	0
JR240	1-216-296-11	SHORT	0
JR241	1-216-296-11	SHORT	0
JR242	1-216-296-11	SHORT	0
JR243	1-216-296-11	SHORT	0
JR244	1-216-296-11	SHORT	0
JR245	1-216-296-11	SHORT	0
JR246	1-216-296-11	SHORT	0
JR247	1-216-296-11	SHORT	0
JR248	1-216-296-11	SHORT	0
JR249	1-216-296-11	SHORT	0
JR251	1-216-296-11	SHORT	0
JR252	1-216-296-11	SHORT	0
JR253	1-216-296-11	SHORT	0
JR254	1-216-296-11	SHORT	0
JR255	1-216-296-11	SHORT	0
JR256	1-216-296-11	SHORT	0
JR257	1-216-296-11	SHORT	0
JR258	1-216-296-11	SHORT	0
JR259	1-216-296-11	SHORT	0
JR260	1-216-295-11	SHORT	0
JR261	1-216-296-11	SHORT	0
JR262	1-216-296-11	SHORT	0
JR263	1-216-295-11	SHORT	0
JR264	1-216-296-11	SHORT	0
JR265	1-216-296-11	SHORT	0
JR266	1-216-296-11	SHORT	0
JS351	1-216-295-11	SHORT	0 (SE810/SX810/X9)
JS591	1-216-295-11	SHORT	0
< COIL >			
L140	1-414-936-21	INDUCTOR	22uH
L160	1-414-936-21	INDUCTOR	22uH
L161	1-414-936-21	INDUCTOR	22uH
L201	1-414-934-21	INDUCTOR	10uH
L202	1-414-934-21	INDUCTOR	10uH
L203	1-414-934-21	INDUCTOR	10uH
L204	1-414-934-21	INDUCTOR	10uH
L205	1-414-940-21	INDUCTOR	100uH
L251	1-414-479-11	INDUCTOR	47nH
L252	1-414-479-11	INDUCTOR	47nH
L253	1-414-479-11	INDUCTOR	47nH (SE810/SX810/X9)

Ref. No.	Part No.	Description	Remark
L254	1-414-479-11	INDUCTOR	47nH (SE610: B, E/SE710/SE810/ SX710/SX717/SX810/X9)
L255	1-414-479-11	INDUCTOR	47nH
L281	1-414-940-21	INDUCTOR	100uH
L301	1-414-940-21	INDUCTOR	100uH
L351	1-414-940-21	INDUCTOR	100uH
L352	1-414-940-21	INDUCTOR	100uH
L353	1-216-295-11	SHORT	0
L355	1-216-295-11	SHORT	0
L356	1-216-295-11	SHORT	0
L357	1-216-295-11	SHORT	0
L358	1-216-295-11	SHORT	0
L359	1-216-295-11	SHORT	0
L360	1-216-295-11	SHORT	0
L361	1-216-295-11	SHORT	0
L362	1-216-295-11	SHORT	0
L390	1-410-687-11	INDUCTOR	1.2mH (SE810/SX810/X9)
L460	1-414-938-21	INDUCTOR	47uH
L510	1-414-940-21	INDUCTOR	100uH
L660	1-414-930-21	INDUCTOR	2.2uH
L661	1-414-936-21	INDUCTOR	22uH (SE610: B, K, N/SE710: B, K, N/SE810: B, K, N/ SX710: B, K, N/X9: B, N)
L662	1-414-936-21	INDUCTOR	22uH
L663	1-414-936-21	INDUCTOR	22uH
L701	1-414-930-21	INDUCTOR	2.2uH
L750	1-414-930-21	INDUCTOR	2.2uH
L751	1-414-934-21	INDUCTOR	10uH
L871	1-414-934-21	INDUCTOR	10uH (X9: B, D, E, G)
L970	1-414-933-21	INDUCTOR	6.8uH (SE610B/SE710B/SE810B/SX710B/X9B)
L971	1-414-945-21	INDUCTOR	27uH (SE610B/SE710B/SE810B/SX710B/X9B)
L972	1-414-938-21	INDUCTOR	47uH (SE610B/SE710B/SE810B/SX710B/X9B)
L973	1-414-938-21	INDUCTOR	47uH (SE610B/SE710B/SE810B/SX710B/X9B)
L975	1-414-934-21	INDUCTOR	10uH (SE610B/SE710B/SE810B/SX710B/X9B)
< FLUORESCENT INDICATOR >			
ND420	1-518-741-11	TUBE, FLUORESCENT INDICATOR	
< PHOTO INTERRUPTER >			
PH100	8-749-015-86	PHOTO INTERRUPTER	GP3S120S
PH101	8-749-015-86	PHOTO INTERRUPTER	GP3S120S
< IC LINK >			
△ PS120	1-532-605-00	LINK, IC (0.4A)	
△ PS390	1-532-727-11	LINK, IC (0.25A) (SE810/SX810/X9)	
△ PS602	1-532-727-11	LINK, IC (0.25A) (SE610: B, E/SE710/SE810/ SX710/SX717/SX810/X9)	
< TRANSISTOR >			
Q100	8-729-043-84	TRANSISTOR	PT380F3
Q101	8-729-043-84	TRANSISTOR	PT380F3
Q102	8-729-281-53	TRANSISTOR	2SC1815GR-TPE2

The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
Q140	8-729-422-33	TRANSISTOR	2PD601AR-115 (SE810/SX810/X9)	Q973	8-729-422-33	TRANSISTOR	2PD601AR-115 (SE610B/SE710B/SE810B/SX710B/X9B)
Q201	8-729-422-33	TRANSISTOR	2PD601AR-115 (SE610B/SE710B/SE810B/SX710B/X9B)	Q974	8-729-422-33	TRANSISTOR	2PD601AR-115 (SE610B/SE710B/SE810B/SX710B/X9B)
Q202	8-729-216-22	TRANSISTOR	2PB709AR-115	Q975	8-729-043-32	TRANSISTOR	PDTA114EK-115 (SE610B/SE710B/SE810B/SX710B/X9B)
Q351	8-729-821-15	TRANSISTOR	2SD1620-TD	Q976	8-729-043-29	TRANSISTOR	PDTC144EK-115 (SE610B/SE710B/SE810B/SX710B/X9B)
Q352	8-729-281-53	TRANSISTOR	2SC1815GR-TPE2	Q977	8-729-043-29	TRANSISTOR	PDTC144EK-115 (SE610B/SE710B/SE810B/SX710B/X9B)
Q390	8-729-900-51	TRANSISTOR	UN2115-QRS (TX) (SE810/SX810/X9)	< RESISTOR >			
Q391	8-729-043-29	TRANSISTOR	PDTC144EK-115 (SE810/SX810/X9)	R100	1-216-077-91	RES-CHIP	15K 5% 1/10W
Q392	8-729-012-31	TRANSISTOR	2SC4040-TL2-Q (SE810/SX810/X9)	R101	1-249-413-11	CARBON	470 5% 1/4W F
Q501	8-729-043-32	TRANSISTOR	PDTA114EK-115	R102	1-216-077-91	RES-CHIP	15K 5% 1/10W
Q502	8-729-043-29	TRANSISTOR	PDTC144EK-115	R103	1-216-081-00	METAL CHIP	22K 5% 1/10W
Q510	8-729-216-22	TRANSISTOR	2PB709AR-115	R104	1-216-821-11	METAL CHIP	1K 5% 1/16W
Q540	8-729-216-22	TRANSISTOR	2PB709AR-115 (SE610: B, E/SE710: B, D, E, K, N/ SE810: B, D, E, K, N /SX710/SX717/SX810/X9: B, D, E, N)	R105	1-216-057-00	METAL CHIP	2.2K 5% 1/10W
Q541	8-729-216-22	TRANSISTOR	2PB709AR-115 (SE610: B, E/SE710: B, D, E, K, N/ SE810: B, D, E, K, N/SX710/SX717/ SX810/X9: B, D, E, N)	R106	1-249-400-11	CARBON	39 5% 1/4W F
Q590	8-729-422-33	TRANSISTOR	2PD601AR-115	R107	1-249-400-11	CARBON	39 5% 1/4W F
Q591	8-729-422-33	TRANSISTOR	2PD601AR-115	R108	1-216-081-00	METAL CHIP	22K 5% 1/10W
Q592	8-729-216-22	TRANSISTOR	2PB709AR-115	R114	1-216-089-11	RES-CHIP	47K 5% 1/10W
Q607	8-729-804-41	TRANSISTOR	2SB1122-ST-TD (SE610: B, E/SE710/SE810/ SX710/SX717/SX810/X9)	R115	1-216-089-11	RES-CHIP	47K 5% 1/10W
Q608	8-729-043-29	TRANSISTOR	PDTC144EK-115 (SE610: B, E/SE710/SE810/ SX710/SX717/SX810/X9)	R120	1-216-089-11	RES-CHIP	47K 5% 1/10W
Q612	8-729-804-41	TRANSISTOR	2SB1122-ST-TD	R121	1-216-089-11	RES-CHIP	47K 5% 1/10W
Q613	8-729-043-29	TRANSISTOR	PDTC144EK-115	R123	1-249-425-11	CARBON	4.7K 5% 1/4W F
Q660	8-729-216-22	TRANSISTOR	2PB709AR-115	R124	1-249-413-11	CARBON	470 5% 1/4W F
Q661	8-729-216-22	TRANSISTOR	2PB709AR-115	R130	1-216-077-91	RES-CHIP	15K 5% 1/10W
Q720	8-729-119-76	TRANSISTOR	2SA1309A-QRSTA	R132	1-216-817-11	METAL CHIP	470 5% 1/16W
Q721	8-729-043-29	TRANSISTOR	PDTC144EK-115	R133	1-216-089-11	RES-CHIP	47K 5% 1/10W
Q751	8-729-043-29	TRANSISTOR	PDTC144EK-115	R140	1-216-833-11	METAL CHIP	10K 5% 1/16W (SE810/SX810/X9)
Q752	8-729-216-22	TRANSISTOR	2PB709AR-115	R141	1-216-833-11	METAL CHIP	10K 5% 1/16W (SE810/SX810/X9)
Q800	8-729-216-22	TRANSISTOR	2PB709AR-115 (SE710/SE810/SX710/SX717/SX810/X9)	R142	1-216-051-00	METAL CHIP	1.2K 5% 1/10W
Q801	8-729-422-33	TRANSISTOR	2PD601AR-115 (SE710/SE810/SX710/SX717/SX810/X9)	R143	1-216-065-91	RES-CHIP	4.7K 5% 1/10W
Q802	8-729-422-33	TRANSISTOR	2PD601AR-115 (SE710/SE810/SX710/SX717/SX810/X9)	R145	1-216-295-11	SHORT	0
Q803	8-729-422-33	TRANSISTOR	2PD601AR-115 (SE710/SE810/SX710/SX717/SX810/X9)	R146	1-216-295-11	SHORT	0
Q804	8-729-043-29	TRANSISTOR	PDTC144EK-115 (SE710/SE810/SX710/SX717/SX810/X9)	R160	1-216-053-00	METAL CHIP	1.5K 5% 1/10W (SE610G/SE710: G, I/SE810G/X9G)
Q850	8-729-216-22	TRANSISTOR	2PB709AR-115 (SE710/SE810/SX710/SX717/SX810/X9)	R160	1-216-061-00	METAL CHIP	3.3K 5% 1/10W (SE610B/SE710B/SE810B/SX710B/X9B)
Q871	8-729-422-33	TRANSISTOR	2PD601AR-115 (X9: B, D, E, G)	R160	1-216-067-00	METAL CHIP	5.6K 5% 1/10W (SE610: K, N/SE710: K, N/SE810: K, N/SX710: K, N/X9N)
Q872	8-729-140-75	TRANSISTOR	2SD999-T1CL (X9: B, D, E, G)	R160	1-216-295-11	SHORT	0 (SE610: A, E/SE710: D, E/SE810: D, E/ SX710: D, E/SX717/SX810/X9: D, E)
Q873	8-729-422-33	TRANSISTOR	2PD601AR-115 (X9: B, D, E, G)	R161	1-216-053-00	METAL CHIP	1.5K 5% 1/10W (SE610E/SE710: B, G/SX710B)
Q970	8-729-216-22	TRANSISTOR	2PB709AR-115 (SE610B/SE710B/SE810B/SX710B/X9B)	R161	1-216-061-00	METAL CHIP	3.3K 5% 1/10W (SE610N/SE710: E, I/SE810B/SX710E/SX717E)
Q972	8-729-043-32	TRANSISTOR	PDTA114EK-115 (SE610B/SE710B/SE810B/SX710B/X9B)	R161	1-216-067-00	METAL CHIP	5.6K 5% 1/10W (SE710N/SE810: E, G/SX710N/X9B)
				R161	1-216-071-00	METAL CHIP	8.2K 5% 1/10W (SE710: D, K/SX710: D, K/SX717D)
				R161	1-216-075-00	METAL CHIP	12K 5% 1/10W (SE810: D, N/SX810/X9: G, N)
				R161	1-216-079-00	METAL CHIP	18K 5% 1/10W (SE810K/X9D)
				R161	1-216-085-00	METAL CHIP	33K 5% 1/10W (SE610K/X9E)
				R161	1-216-295-11	SHORT	0 (SE610: A, B, G)
				R162	1-249-429-11	CARBON	10K 5% 1/4W
				R163	1-216-833-11	METAL CHIP	10K 5% 1/16W

MA-400

Ref. No.	Part No.	Description	Remark
R164	1-216-833-11	METAL CHIP	10K 5% 1/16W
R165	1-216-061-00	METAL CHIP	3.3K 5% 1/10W
R166	1-216-061-00	METAL CHIP	3.3K 5% 1/10W
R167	1-216-069-00	METAL CHIP	6.8K 5% 1/10W
R168	1-216-101-00	METAL CHIP	150K 5% 1/10W
R169	1-216-113-00	METAL CHIP	470K 5% 1/10W
R170	1-216-061-00	METAL CHIP	3.3K 5% 1/10W
R171	1-249-429-11	CARBON	10K 5% 1/4W
R172	1-216-295-11	SHORT	0
R175	1-216-295-11	SHORT	0
R176	1-216-025-11	RES-CHIP	100 5% 1/10W
R177	1-216-817-11	METAL CHIP	470 5% 1/16W
R178	1-216-817-11	METAL CHIP	470 5% 1/16W
R179	1-216-817-11	METAL CHIP	470 5% 1/16W
R180	1-216-069-00	METAL CHIP	6.8K 5% 1/10W
R181	1-216-061-00	METAL CHIP	3.3K 5% 1/10W
R182	1-216-033-00	METAL CHIP	220 5% 1/10W
R183	1-216-033-00	METAL CHIP	220 5% 1/10W
R184	1-216-295-11	SHORT	0
R185	1-216-295-11	SHORT	0
R186	1-216-295-11	SHORT	0
R189	1-249-417-11	CARBON	1K 5% 1/4W F
R190	1-216-061-00	METAL CHIP	3.3K 5% 1/10W
R191	1-216-061-00	METAL CHIP	3.3K 5% 1/10W
R193	1-249-441-11	CARBON	100K 5% 1/4W
R194	1-216-821-11	METAL CHIP	1K 5% 1/16W
R195	1-216-295-11	SHORT	0
R196	1-216-061-00	METAL CHIP	3.3K 5% 1/10W
R200	1-216-295-11	SHORT	0 (SE610B/SE710B/SE810B/SX710B/X9B)
R201	1-216-055-00	METAL CHIP	1.8K 5% 1/10W
R202	1-216-821-11	METAL CHIP	1K 5% 1/16W (SE610B/SE710B/SE810B/SX710B/X9B)
R203	1-216-055-00	METAL CHIP	1.8K 5% 1/10W (SE610B/SE710B/SE810B/SX710B/X9B)
R204	1-216-071-00	METAL CHIP	8.2K 5% 1/10W
R205	1-216-063-91	RES-CHIP	3.9K 5% 1/10W
R206	1-249-413-11	CARBON	470 5% 1/4W F
R207	1-249-413-11	CARBON	470 5% 1/4W F
R208	1-216-089-11	RES-CHIP	47K 5% 1/10W
R209	1-216-079-00	METAL CHIP	18K 5% 1/10W
R210	1-249-429-11	CARBON	10K 5% 1/4W
R211	1-216-089-11	RES-CHIP	47K 5% 1/10W
R212	1-216-055-00	METAL CHIP	1.8K 5% 1/10W
R214	1-216-069-00	METAL CHIP	6.8K 5% 1/10W
R216	1-216-295-11	SHORT	0
R217	1-216-059-00	METAL CHIP	2.7K 5% 1/10W
R218	1-216-025-11	RES-CHIP	100 5% 1/10W
R219	1-216-025-11	RES-CHIP	100 5% 1/10W
R220	1-216-025-11	RES-CHIP	100 5% 1/10W (SE610: B, E/SE710: B, D, E, K, N/ SE810: B, D, E, K, N/ SX710/SX717/SX810/X9: B, D, E, N)
R221	1-216-295-11	SHORT	0
R228	1-216-295-11	SHORT	0
R231	1-216-017-91	RES-CHIP	47 5% 1/10W
R232	1-216-017-91	RES-CHIP	47 5% 1/10W (SE810/SX810/X9)
R233	1-216-017-91	RES-CHIP	47 5% 1/10W (SE610: B, E/SE710/SE810/ SX710/SX717/SX810/X9)

Ref. No.	Part No.	Description	Remark
R239	1-216-295-11	SHORT	0 (SE610B/SE710B/SE810B/SX710B/X9B)
R240	1-216-295-11	SHORT	0 (SE610B/SE710B/SE810B/SX710B/X9B)
R281	1-216-069-00	METAL CHIP	6.8K 5% 1/10W
R282	1-216-059-00	METAL CHIP	2.7K 5% 1/10W
R283	1-216-045-00	METAL CHIP	680 5% 1/10W
R284	1-216-045-00	METAL CHIP	680 5% 1/10W
R289	1-216-295-11	SHORT	0
R290	1-216-295-11	SHORT	0
R301	1-216-833-11	METAL CHIP	10K 5% 1/16W
R302	1-216-079-00	METAL CHIP	18K 5% 1/10W
R304	1-216-821-11	METAL CHIP	1K 5% 1/16W
R305	1-216-821-11	METAL CHIP	1K 5% 1/16W
R306	1-216-083-00	METAL CHIP	27K 5% 1/10W
R307	1-216-057-00	METAL CHIP	2.2K 5% 1/10W
R308	1-208-820-11	METAL CHIP	39K 0.5% 1/10W
R309	1-216-079-00	METAL CHIP	18K 5% 1/10W
R310	1-216-079-00	METAL CHIP	18K 5% 1/10W
R311	1-216-057-00	METAL CHIP	2.2K 5% 1/10W
R312	1-216-083-00	METAL CHIP	27K 5% 1/10W
R313	1-216-133-00	METAL CHIP	3.3M 5% 1/10W
R315	1-216-033-00	METAL CHIP	220 5% 1/10W
R316	1-216-033-00	METAL CHIP	220 5% 1/10W
R322	1-216-295-11	SHORT	0
R323	1-216-065-91	RES-CHIP	4.7K 5% 1/10W (SE810/SX810/X9)
R324	1-216-065-91	RES-CHIP	4.7K 5% 1/10W (SE810/SX810/X9)
R325	1-216-079-00	METAL CHIP	18K 5% 1/10W (SE610: B, E/SE710/SE810/ SX710/SX717/SX810/X9)
R326	1-216-079-00	METAL CHIP	18K 5% 1/10W (SE610: B, E/SE710/SE810/ SX710/SX717/SX810/X9)
R329	1-216-817-11	METAL CHIP	470 5% 1/16W
R351	1-216-017-91	RES-CHIP	47 5% 1/10W
R352	1-216-063-91	RES-CHIP	3.9K 5% 1/10W (SE610/SE710/SX710/SX717)
R352	1-216-067-00	METAL CHIP	5.6K 5% 1/10W (SE810/SX810/X9)
R353	1-217-671-11	METAL CHIP	1 5% 1/10W
R354	1-216-031-00	METAL CHIP	180 5% 1/10W
R355	1-216-075-00	METAL CHIP	12K 5% 1/10W
R356	1-216-079-00	METAL CHIP	18K 5% 1/10W
R357	1-216-051-00	METAL CHIP	1.2K 5% 1/10W
R358	1-216-079-00	METAL CHIP	18K 5% 1/10W
R359	1-216-035-00	METAL CHIP	270 5% 1/10W
R360	1-216-109-00	METAL CHIP	330K 5% 1/10W
R361	1-216-833-11	METAL CHIP	10K 5% 1/16W
R362	1-216-069-00	METAL CHIP	6.8K 5% 1/10W
R369	1-216-091-00	METAL CHIP	56K 5% 1/10W
R370	1-216-047-91	RES-CHIP	820 5% 1/10W
R390	1-216-083-00	METAL CHIP	27K 5% 1/10W (SE810/SX810/X9)
R391	1-249-394-11	CARBON	12 5% 1/4W F (SE810/SX810/X9)
R392	1-216-833-11	METAL CHIP	10K 5% 1/16W (SE810/SX810/X9)
R420	1-216-295-11	SHORT	0
R421	1-216-295-11	SHORT	0
R422	1-216-295-11	SHORT	0
R423	1-216-095-00	METAL CHIP	82K 5% 1/10W

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
R427	1-216-017-91	RES-CHIP	47 5% 1/10W	R572	1-216-817-11	METAL CHIP 470 5% 1/16W (SE610: B, E/SE710: B, D, E, K, N/ SE810: B, D, E, K, N/ SX710/SX717/SX810/X9: B, D, E, N)	
R460	1-216-833-11	METAL CHIP	10K 5% 1/16W	R573	1-216-817-11	METAL CHIP 470 5% 1/16W (SE610: B, E/SE710: B, D, E, K, N/ SE810: B, D, E, K, N/ SX710/SX717/SX810/X9: B, D, E, N)	
R461	1-216-037-00	METAL CHIP	330 5% 1/10W	R574	1-216-097-11	RES-CHIP 100K 5% 1/10W (SE610: B, E/SE710: B, D, E, K, N/ SE810: B, D, E, K, N/ SX710/SX717/SX810/X9: B, D, E, N)	
R464	1-216-089-11	RES-CHIP	47K 5% 1/10W	R575	1-216-097-11	RES-CHIP 100K 5% 1/10W (SE610: B, E/SE710: B, D, E, K, N/ SE810: B, D, E, K, N/ SX710/SX717/SX810/X9: B, D, E, N)	
R465	1-216-061-00	METAL CHIP	3.3K 5% 1/10W	R590	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R466	1-216-065-91	RES-CHIP	4.7K 5% 1/10W	R591	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R467	1-216-069-00	METAL CHIP	6.8K 5% 1/10W	R592	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R468	1-216-077-91	RES-CHIP	15K 5% 1/10W	R611	1-216-821-11	METAL CHIP 1K 5% 1/16W (SE610: B, E/SE710/SE810/ SX710/SX717/SX810/X9)	
R470	1-216-833-11	METAL CHIP	10K 5% 1/16W	R615	1-216-047-91	RES-CHIP 820 5% 1/10W (SE610: B, E/SE710/SE810/ SX710/SX717/SX810/X9)	
R471	1-216-037-00	METAL CHIP	330 5% 1/10W	R617	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R477	1-216-069-00	METAL CHIP	6.8K 5% 1/10W	R618	1-216-055-00	METAL CHIP 1.8K 5% 1/10W	
R478	1-216-077-91	RES-CHIP	15K 5% 1/10W	R624	1-216-833-11	METAL CHIP 10K 5% 1/16W	
R479	1-216-089-11	RES-CHIP	47K 5% 1/10W (SE710/SE810/SX710/SX717/SX810/X9)	R625	1-216-065-91	RES-CHIP 4.7K 5% 1/10W	
R500	1-216-817-11	METAL CHIP	470 5% 1/16W	R626	1-249-417-11	CARBON 1K 5% 1/4W F	
R501	1-216-817-11	METAL CHIP	470 5% 1/16W	R627	1-216-121-11	RES-CHIP 1M 5% 1/10W	
R502	1-216-817-11	METAL CHIP	470 5% 1/16W	R660	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R503	1-216-817-11	METAL CHIP	470 5% 1/16W	R661	1-216-121-11	RES-CHIP 1M 5% 1/10W	
R509	1-216-065-91	RES-CHIP	4.7K 5% 1/10W (SE710/SE810/SX710/SX717/SX810/X9)	R662	1-216-817-11	METAL CHIP 470 5% 1/16W	
R510	1-249-408-11	CARBON	180 5% 1/4W F	R663	1-216-053-00	METAL CHIP 1.5K 5% 1/10W	
R511	1-249-407-11	CARBON	150 5% 1/4W F	R664	1-216-295-11	SHORT 0	
R512	1-216-021-00	METAL CHIP	68 5% 1/10W	R666	1-216-295-11	SHORT 0	
R514	1-216-037-00	METAL CHIP	330 5% 1/10W	R667	1-216-037-00	METAL CHIP 330 5% 1/10W	
R515	1-216-821-11	METAL CHIP	1K 5% 1/16W	R668	1-216-025-11	RES-CHIP 100 5% 1/10W	
R516	1-216-065-91	RES-CHIP	4.7K 5% 1/10W	R669	1-216-025-11	RES-CHIP 100 5% 1/10W	
R517	1-216-022-00	METAL CHIP	75 5% 1/10W	R670	1-216-817-11	METAL CHIP 470 5% 1/16W	
R518	1-216-065-91	RES-CHIP	4.7K 5% 1/10W (SE710/SE810/SX710/SX717/SX810/X9)	R671	1-216-295-11	SHORT 0	
R541	1-216-025-11	RES-CHIP	100 5% 1/10W (SE610: B, E/SE710: B, D, E, K, N/ SE810: B, D, E, K, N/ SX710/SX717/SX810/X9: B, D, E, N)	R672	1-216-821-11	METAL CHIP 1K 5% 1/16W (SE610: B, K, N/SE710: B, K, N/SE810: B, K, N/ SX710: B, K, N/X9: B, N)	
R542	1-249-408-11	CARBON	180 5% 1/4W F (SE610: B, E/SE710: B, D, E, K, N/ SE810: B, D, E, K, N/ SX710/SX717/SX810/X9: B, D, E, N)	R702	1-216-295-11	SHORT 0	
R543	1-249-407-11	CARBON	150 5% 1/4W F (SE610: B, E/SE710: B, D, E, K, N/ SE810: B, D, E, K, N/ SX710/SX717/SX810/X9: B, D, E, N)	R704	1-216-025-11	RES-CHIP 100 5% 1/10W	
R545	1-216-085-00	METAL CHIP	33K 5% 1/10W (SE610: B, E/SE710/SE810/ SX710/SX717/SX810/X9)	R705	1-216-033-00	METAL CHIP 220 5% 1/10W	
R546	1-216-089-11	RES-CHIP	47K 5% 1/10W (SE610: B, E/SE710/SE810/ SX710/SX717/SX810/X9)	R713	1-216-025-11	RES-CHIP 100 5% 1/10W	
R547	1-216-821-11	METAL CHIP	1K 5% 1/16W (SE610: B, E/SE710: B, D, E, K, N/ SE810: B, D, E, K, N/ SX710/SX717/SX810/X9: B, D, E, N)	R714	1-216-113-00	METAL CHIP 470K 5% 1/10W	
R548	1-216-022-00	METAL CHIP	75 5% 1/10W (SE610: B, E/SE710/SE810/ SX710/SX717/SX810/X9)	R723	1-216-025-11	RES-CHIP 100 5% 1/10W	
R549	1-216-021-00	METAL CHIP	68 5% 1/10W (SE610: B, E/SE710: B, D, E, K, N/ SE810: B, D, E, K, N/ SX710/SX717/SX810/X9: B, D, E, N)	R724	1-216-089-11	RES-CHIP 47K 5% 1/10W	
R570	1-216-817-11	METAL CHIP	470 5% 1/16W (SE610: B, E/SE710/SE810/ SX710/SX717/SX810/X9)	R730	1-216-817-11	METAL CHIP 470 5% 1/16W	
R571	1-216-817-11	METAL CHIP	470 5% 1/16W (SE610: B, E/SE710/SE810/ SX710/SX717/SX810/X9)	R731	1-216-817-11	METAL CHIP 470 5% 1/16W (SE610: A, B, E, K, N/SE710: B, D, E, I, K, N/ SE810: B, D, E, K, N/ SX710/SX717/SX810/X9: B, D, E, N)	
				R732	1-216-817-11	METAL CHIP 470 5% 1/16W	
				R733	1-216-817-11	METAL CHIP 470 5% 1/16W (SE610: A, B, E, K, N/SE710: B, D, E, I, K, N/ SE810: B, D, E, K, N/ SX710/SX717/SX810/X9: B, D, E, N)	
				R736	1-216-295-11	SHORT 0	
				R754	1-216-025-11	RES-CHIP 100 5% 1/10W	

MA-400

Ref. No.	Part No.	Description	Remark
R755	1-216-025-11	RES-CHIP 100 5%	1/10W
R756	1-216-833-11	METAL CHIP 10K 5%	1/16W
R757	1-216-821-11	METAL CHIP 1K 5%	1/16W
R800	1-216-101-00	METAL CHIP 150K 5%	1/10W (SE710/SE810/SX710/SX717/SX810/X9)
R801	1-216-833-11	METAL CHIP 10K 5%	1/16W (SE710/SE810/SX710/SX717/SX810/X9)
R802	1-216-833-11	METAL CHIP 10K 5%	1/16W (SE710/SE810/SX710/SX717/SX810/X9)
R803	1-216-081-00	METAL CHIP 22K 5%	1/10W (SE710/SE810/SX710/SX717/SX810/X9)
R804	1-216-833-11	METAL CHIP 10K 5%	1/16W (SE710/SE810/SX710/SX717/SX810/X9)
R805	1-216-833-11	METAL CHIP 10K 5%	1/16W (SE710/SE810/SX710/SX717/SX810/X9)
R806	1-216-833-11	METAL CHIP 10K 5%	1/16W (SE710/SE810/SX710/SX717/SX810/X9)
R807	1-216-085-00	METAL CHIP 33K 5%	1/10W (SE710/SE810/SX710/SX717/SX810/X9)
R813	1-216-833-11	METAL CHIP 10K 5%	1/16W
R850	1-216-025-11	RES-CHIP 100 5%	1/10W (SE710/SE810/SX710/SX717/SX810/X9)
R851	1-216-077-91	RES-CHIP 15K 5%	1/10W (SE710/SE810/SX710/SX717/SX810/X9)
R852	1-216-081-00	METAL CHIP 22K 5%	1/10W (SE710/SE810/SX710/SX717/SX810/X9)
R853	1-216-821-11	METAL CHIP 1K 5%	1/16W (SE710/SE810/SX710/SX717/SX810/X9)
R856	1-216-097-11	RES-CHIP 100K 5%	1/10W (SE710/SE810/SX710/SX717/SX810/X9)
R857	1-216-069-00	METAL CHIP 6.8K 5%	1/10W (SE710/SE810/SX710/SX717/SX810/X9)
R858	1-216-069-00	METAL CHIP 6.8K 5%	1/10W (SE710/SE810/SX710/SX717/SX810/X9)
R859	1-216-123-11	METAL CHIP 1.2M 5%	1/10W (SE710/SE810/SX710/SX717/SX810/X9)
R860	1-216-123-11	METAL CHIP 1.2M 5%	1/10W (SE710/SE810/SX710/SX717/SX810/X9)
R861	1-216-117-00	METAL CHIP 680K 5%	1/10W (SE710/SE810/SX710/SX717/SX810/X9)
R862	1-216-057-00	METAL CHIP 2.2K 5%	1/10W (SE710/SE810/SX710/SX717/SX810/X9)
R871	1-216-065-91	RES-CHIP 4.7K 5%	1/10W (X9: B, D, E, G)
R872	1-216-105-91	RES-CHIP 220K 5%	1/10W (X9: B, D, E, G)
R873	1-216-057-00	METAL CHIP 2.2K 5%	1/10W (X9: B, D, E, G)
R874	1-216-821-11	METAL CHIP 1K 5%	1/16W (X9: B, D, E, G)
R875	1-216-821-11	METAL CHIP 1K 5%	1/16W (X9: B, D, E, G)
R876	1-216-001-00	METAL CHIP 10 5%	1/10W (X9: B, D, E, G)
R968	1-216-101-00	METAL CHIP 150K 5%	1/10W (SE610B/SE710B/SE810B/SX710B/X9B)
R969	1-216-069-00	METAL CHIP 6.8K 5%	1/10W (SE610B/SE710B/SE810B/SX710B/X9B)
R970	1-216-085-00	METAL CHIP 33K 5%	1/10W (SE610B/SE710B/SE810B/SX710B/X9B)
R971	1-216-085-00	METAL CHIP 33K 5%	1/10W (SE610B/SE710B/SE810B/SX710B/X9B)
R972	1-216-083-00	METAL CHIP 27K 5%	1/10W (SE610B/SE710B/SE810B/SX710B/X9B)

Ref. No.	Part No.	Description	Remark
R973	1-216-105-91	RES-CHIP 220K 5%	1/10W (SE610B/SE710B/SE810B/SX710B/X9B)
R974	1-216-081-00	METAL CHIP 22K 5%	1/10W (SE610B/SE710B/SE810B/SX710B/X9B)
R975	1-216-295-11	SHORT 0	(SE610B/SE710B/SE810B/SX710B/X9B)
R976	1-216-059-00	METAL CHIP 2.7K 5%	1/10W (SE610B/SE710B/SE810B/SX710B/X9B)
R977	1-216-089-11	RES-CHIP 47K 5%	1/10W (SE610B/SE710B/SE810B/SX710B/X9B)
R978	1-216-071-00	METAL CHIP 8.2K 5%	1/10W (SE610B/SE710B/SE810B/SX710B/X9B)
R979	1-216-833-11	METAL CHIP 10K 5%	1/16W (SE610B/SE710B/SE810B/SX710B/X9B)
R980	1-216-097-11	RES-CHIP 100K 5%	1/10W (SE610B/SE710B/SE810B/SX710B/X9B)
R981	1-216-083-00	METAL CHIP 27K 5%	1/10W (SE610B/SE710B/SE810B/SX710B/X9B)
R982	1-216-089-11	RES-CHIP 47K 5%	1/10W (SE610B/SE710B/SE810B/SX710B/X9B)
R983	1-216-067-00	METAL CHIP 5.6K 5%	1/10W (SE610B/SE710B/SE810B/SX710B/X9B)
R985	1-216-817-11	METAL CHIP 470 5%	1/16W (SE610B/SE710B/SE810B/SX710B/X9B)
R986	1-216-089-11	RES-CHIP 47K 5%	1/10W (SE610B/SE710B/SE810B/SX710B/X9B)
R988	1-216-077-91	RES-CHIP 15K 5%	1/10W (SE610B/SE710B/SE810B/SX710B/X9B)
R989	1-216-821-11	METAL CHIP 1K 5%	1/16W (SE610B/SE710B/SE810B/SX710B/X9B)
R990	1-216-295-11	SHORT 0	(SE610B/SE710B/SE810B/SX710B/X9B)
R993	1-216-085-00	METAL CHIP 33K 5%	1/10W (SE610B/SE710B/SE810B/SX710B/X9B)
R994	1-208-820-11	METAL CHIP 39K 0.5%	1/10W (SE610B/SE710B/SE810B/SX710B/X9B)
R995	1-216-085-00	METAL CHIP 33K 5%	1/10W (SE610B/SE710B/SE810B/SX710B/X9B)
R996	1-208-820-11	METAL CHIP 39K 0.5%	1/10W (SE610B/SE710B/SE810B/SX710B/X9B)
R997	1-216-833-11	METAL CHIP 10K 5%	1/16W (SE610B/SE710B/SE810B/SX710B/X9B)
R998	1-216-833-11	METAL CHIP 10K 5%	1/16W (SE610B/SE710B/SE810B/SX710B/X9B)
R999	1-216-295-11	SHORT 0	(SE610B/SE710B/SE810B/SX710B/X9B)
< SWITCH >			
S100	1-771-155-11	SWITCH, ROTARY (CAM ENCODER)	
S101	1-571-958-11	SWITCH, PUSH (1 KEY) (REC PROOF)	
S460	1-786-097-21	SWITCH, TACT (I/⏏)	
S463	1-786-097-21	SWITCH, TACT (PROGRAM +)	
S464	1-786-097-21	SWITCH, TACT (AUDIO DUB)	(SE810/SX810/X9)
S476	1-786-097-21	SWITCH, TACT (PROGRAM -)	
S477	1-786-097-21	SWITCH, TACT (AUTO SET UP/RF CHANNEL)	
S478	1-786-097-21	SWITCH, TACT (SYNCHRO REC)	(SE710/SE810/SX710/SX717/SX810/X9)
< TRANSFORMER >			
T350	1-431-097-11	TRANSFORMER, BIAS OSCILLATION	(SE610/SE710/SX710/SX717)
T350	1-435-728-11	TRANSFORMER, BIAS OSCILLATION	(SE810/SX810/X9)

Ref. No.	Part No.	Description	Remark
T390	1-423-415-11	TRANSFORMER, BIAS OSCILLATION (SE810/SX810/X9)	
< TUNER >			
TU702	1-693-436-81	TUNER, IF (BTF-3WC428) (SE610: E, N/SE710 :E, N, I/SE810: E, N/ SX710: E, N/SX717E/X9E)	
TU702	1-693-437-81	TUNER, IF (BTF-3WU604) (SE610G/SE710G/SE810G/X9G)	
TU702	1-693-438-81	TUNER, IF (BTF-3WC446) (SE610B/SE710B/SE810B/SX710B/X9B)	
TU702	1-693-439-81	TUNER, IF (BTF-3WC429) (SE610: A, K/SE710: D, K/SE810: D, K/ SX710: D, K/SX717D/SX810/X9D)	
TU703	1-693-521-11	TUNER, IF (BTF-2WC421) (SE610: E, N/SE710 :E, N, I/SE810: E, N/ SX710: E, N/SX717E/X9E)	
< VIBRATOR >			
X160	1-579-463-11	VIBRATOR, CRYSTAL (32.768kHz)	
X161	1-781-717-21	VIBRATOR, CRYSTAL (17.734475MHz)	
X200	1-579-608-21	VIBRATOR, CRYSTAL (4.433619MHz)	
*	1-468-458-14	POWER BLOCK (SRV938EK) ***** (Ref.No. 2,000 Series)	
< CAPACITOR >			
△C101	9-885-001-69	METAL 0.1uF	
△C102	9-885-001-69	METAL 0.1uF	
△C103	9-885-001-70	CERAMIC 1000PF	250V
△C104	9-885-001-70	CERAMIC 1000PF	250V
△C105	9-885-001-70	CERAMIC 1000PF	250V
△C108	1-113-937-91	CERAMIC 2200PF	250V
△C109	1-113-937-91	CERAMIC 2200PF	250V
△C151	9-885-001-81	ELECT 47uF	400V
C153	1-163-015-91	CERAMIC CHIP 3300PF	
C155	1-126-965-91	ELECT 22uF	50V
C156	1-126-960-91	ELECT 1uF	50V
C157	1-163-009-91	CERAMIC CHIP 1000PF	
C158	1-163-273-91	CERAMIC CHIP 820PF	
C159	1-163-251-91	CERAMIC CHIP 100PF	
C160	1-163-021-91	CERAMIC CHIP 10000PF	
C161	1-163-009-91	CERAMIC CHIP 1000PF	
C201	9-885-001-91	ELECT 220uF	25V
C202	1-126-925-91	ELECT 470uF	10V
C203	1-126-934-91	ELECT 220uF	16V
C206	1-126-947-91	ELECT 47uF	35V
C207	1-126-964-91	ELECT 10uF	50V
C208	1-126-925-91	ELECT 470uF	10V
C209	1-163-021-91	CERAMIC 0.01uF	50V
C212	1-163-021-91	CERAMIC 0.01uF	50V
C213	1-126-956-91	ELECT 0.1uF	50V
C251	1-126-967-91	ELECT 47uF	50V
C252	1-111-065-11	ELECT 680uF	25V
C253	1-111-016-91	ELECT 1200uF	10V
C254	9-885-001-92	ELECT 470uF	25V
C261	1-164-489-91	CERAMIC CHIP 0.22uF	16V
C301	1-111-118-91	ELECT 220uF	50V

Ref. No.	Part No.	Description	Remark
C303	1-126-965-91	ELECT 22uF	50V
< CONNECTOR >			
△CN101	1-580-230-11	CONNECTOR	
CN201	1-778-675-21	CONNECTOR 19P	
CN202	1-793-674-21	CONNECTOR 7P	
< DIODE >			
△D101	9-880-927-01	DIODE 1N4005	
△D102	9-880-927-01	DIODE 1N4005	
△D103	9-880-927-01	DIODE 1N4005	
△D104	9-880-927-01	DIODE 1N4005	
D151	8-719-084-75	DIODE P6KE300 ARL	
D152	9-885-001-78	DIODE UF4007	
D153	9-885-001-79	DIODE 1SS119	
D154	9-885-001-80	DIODE PR1003	
D158	9-880-991-01	DIODE MA4270	
D203	9-885-001-86	DIODE MTZJ5.1	
D204	9-885-001-79	DIODE 1SS119	
D205	9-885-001-79	DIODE 1SS119	
D251	9-885-001-80	DIODE PR1003	
D252	9-885-001-87	DIODE UF3DL	
D253	9-885-001-88	DIODE SB340L	
D254	9-885-001-80	DIODE PR1003	
D301	9-885-001-87	DIODE UF3DL	
D302	9-885-001-89	DIODE D2S4M	
D303	9-885-001-90	DIODE MTZJ20	
D304	9-885-001-89	DIODE D2S4M	
D307	9-885-001-89	DIODE D2S4M	
< FUSE >			
△F101	9-885-001-72	FUSE (T2AL/250V)	
< IC >			
△IC151	9-885-001-74	IC TDA16846	
IC251	9-885-001-82	IC AN1431T	
< LINE FILTER/COIL >			
△L101	9-885-001-67	LINE FILTER 10uH	
△L102	9-885-001-68	LINE FILTER 33mH	
△L103	9-885-001-68	LINE FILTER 33mH	
L201	9-885-001-93	CHOKE COIL 10uH	
L202	9-885-001-93	CHOKE COIL 10uH	
L205	9-885-001-94	CHOKE COIL 1uH	
< PHOTO COUPLER >			
△PC151	9-885-001-75	COUPLER, PHOTO ON3171	
< IC LINK >			
△PS201	1-533-592-21	LINK, IC (1.6A)	
△PS202	1-533-593-21	LINK, IC (2A)	
△PS251	1-533-589-21	LINK, IC (750mA)	
< TRANSISTOR >			
△Q151	9-885-001-73	TRANSISTOR 2SK3047	
△Q201	8-729-141-01	TRANSISTOR 2SB733	

The components identified by mark
△ or dotted line with mark △ are
critical for safety.
Replace only with part number speci-
fied.

POWER BLOCK

Ref. No.	Part No.	Description	Remark
Q203	8-729-030-98	TRANSISTOR 2PD601A	
Q204	8-729-139-97	TRANSISTOR 2SC2785	
Q205	8-729-018-99	TRANSISTOR 2SD2394	
Q206	8-729-139-97	TRANSISTOR 2SC2785	
Q207	9-885-001-83	TRANSISTOR 2SD1862	
Q210	8-729-043-32	TRANSISTOR DTA114EKA	
Q211	8-729-043-29	TRANSISTOR DTC114EKA	
Q301	8-729-018-99	TRANSISTOR 2SD2394	
Q302	9-885-001-84	TRANSISTOR DTC143EKA	
Q303	8-729-018-99	TRANSISTOR 2SD2394	
Q304	8-729-139-97	TRANSISTOR 2SC2785	
Q305	8-729-141-01	TRANSISTOR 2SB733	
Q306	9-885-001-84	TRANSISTOR DTC143EKA	
Q307	9-885-001-85	TRANSISTOR 2SA1015	
< RESISTOR >			
R101	9-885-001-71	CARBON 1M	1/2W
R151	1-247-903-91	CARBON 1M	1/4W
R152	1-247-903-91	CARBON 1M	1/4W
R155	1-216-073-21	RES, CHIP 10K	1/10W
R156	1-259-880-91	CARBON 2.2M	1/4W
R157	1-259-880-91	CARBON 2.2M	1/4W
R158	1-247-805-91	CARBON 82	1/4W
R159	1-249-397-11	CARBON 22	1/4WF
R160	1-247-795-91	CARBON 33	1/4W
R161	1-216-085-21	RES, CHIP 33K	1/10W
R162	1-216-085-21	RES, CHIP 33K	1/10W
R163	1-216-063-21	RES, CHIP 3.9K	1/10W
R164	1-247-861-91	CARBON 18K	1/4W
R201	1-216-049-21	RES, CHIP 1K	1/10W
R203	1-216-452-21	METAL 180	2W
R206	1-216-053-21	RES, CHIP 1.5K	1/10W
R207	1-247-615-91	CARBON 220	1/4W
R208	1-247-615-91	CARBON 220	1/4W
R209	1-247-615-91	CARBON 220	1/4W
R210	1-216-049-21	RES, CHIP 1K	1/10W
R213	1-216-089-21	RES, CHIP 47K	1/10W
R216	1-216-065-21	RES, CHIP 4.7K	1/10W
R217	1-215-857-81	METAL 10	1W
R218	1-215-908-81	METAL 33	3W
R219	1-247-847-91	CARBON 4.7K	1/4W
R220	1-216-065-21	RES, CHIP 4.7K	1/10W
R222	1-247-615-91	CARBON 220	1/4W
R251	1-249-402-11	CARBON 56	1/4W F
R261	1-216-049-21	RES, CHIP 1K	1/10W
R263	1-216-079-21	RES, CHIP 18K	1/10W
R264	1-216-077-21	RES, CHIP 15K	1/10W
R265	1-216-073-21	RES, CHIP 10K	1/10W
R266	1-216-061-21	RES, CHIP 3.3K	1/10W
R301	1-216-073-21	RES, CHIP 10K	1/10W
R302	1-215-869-81	METAL 1K	1W
R306	1-216-073-21	RES, CHIP 10K	1/10W
R307	1-215-869-81	METAL 1K	1W
R308	1-216-049-21	RES, CHIP 1K	1/10W
R311	1-247-885-91	CARBON 10K	1/4W
R312	1-215-880-81	METAL 10	2W
R313	1-215-880-81	METAL 10	2W

Ref. No.	Part No.	Description	Remark
R314	1-215-892-81	METAL 1K	2W
R315	1-215-892-81	METAL 1K	2W
R316	1-247-879-91	CARBON 100K	1/4W
< TRANSFORMER >			
△T151	9-885-001-76	TRANSFORMER, POWER	
< VARIABLE RESISTOR >			
VR251	1-241-629-11	VARIABLE RESISTOR 5K	
< VARISTOR >			
△Z101	9-880-928-01	VARISTOR ERZV10D751	
MISCELLANEOUS			

4	1-757-593-11	CABLE, FLAT (FDS-10) (SE610/SE710/SX710/SX717)	
4	1-757-594-11	CABLE, FLAT (FDS-9) (SE810/SX810/X9)	
5	1-762-844-31	SWITCH, ROTARY (SE810/SX810/X9)	
53	1-757-537-11	CABLE, FLAT (FAC-9)	
54	1-792-022-11	CABLE, FLAT (FFM-001)	
△55	1-782-012-11	CORD, POWER	
704	1-500-471-11	HEAD, FE	
721	A-6775-791-A	ACE BLOCK ASSY (ALPS) (EURO 3)	
770	1-772-364-11	DRUM ASSY, DZH-0B5A-R (EXCEPT SE610B/ SE710B/SE810B/SX710B/X9B)	
770	1-772-365-11	DRUM ASSY, DZH-0B6A-R (SE610B/SE710B/SE810B/SX710B/X9B)	
M902	1-698-971-11	MOTOR, DC (CAPSTAN)	
M903	X-3947-577-1	MOTOR ASSY, CAM	

HARDWARE LIST			

#1	7-685-648-79	SCREW +BVTP 3X12 TYPE2	
#3	7-685-646-79	SCREW +BVTP 3X8 TYPE2	
#4	7-682-147-01	SCREW +P 3X6	
#5	7-685-133-19	SCREW (DIA. 2.6) (IT3B)	
ACCESSORIES & PACKING MATERIALS			

1-418-010-11	COMMANDER, STANDARD (RMT-V259) (SX717/SX810)		
1-418-010-31	COMMANDER, STANDARD (RMT-V259B) (X9N)		
1-418-780-11	COMMANDER, STANDARD (RMT-V288) (SX710: D, E, K, N)		
1-418-780-21	COMMANDER, STANDARD (RMT-V288A) (SX710B)		
1-418-782-11	COMMANDER, STANDARD (RMT-V259K) (SE810: D, E, G, K, N)		
1-418-782-21	COMMANDER, STANDARD (RMT-V259L) (SE810B)		
1-476-070-11	CONTROLLER, STB/SAT (RMT-CM103) (X9: B, D, E)		
1-476-070-21	CONTROLLER, STB/SAT (RMT-CM103) (X9G)		

The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
	1-476-369-11	COMMANDER, STANDARD (RMT-V259R) (X9: D, E, G)			3-067-103-11	MANUAL, INSTRUCTION (FRENCH) (X9B)	
	1-476-370-11	COMMANDER, STANDARD (RMT-V259S) (X9B)			3-067-104-11	MANUAL, INSTRUCTION (ENGLISH) (X9G)	
					3-067-105-11	INSTRUCTION (QUICK START GUIDE) (X9G)	
	1-476-406-11	COMMANDER, STANDARD (RMT-V288B) (SE610: A, E, G, K, N/SE710: D, E, G, I, K, N)			3-068-372-11	MANUAL, INSTRUCTION (ENGLISH) (X9N)	
	1-476-406-21	COMMANDER, STANDARD (RMT-V288C) (SE610B/SE710B)			3-068-372-21	MANUAL, INSTRUCTION (CZECH) (X9N)	
△	1-770-019-11	ADAPTOR, CONVERSION PLUG 3P (SE610G/SE710: G, I/SE810G/X9G)			3-068-372-31	MANUAL, INSTRUCTION (POLISH) (X9N)	
	1-790-419-11	CORD, CONNECTION (PAL)			3-068-372-41	MANUAL, INSTRUCTION (HUNGALIAN) (X9N)	
	3-065-674-11	MANUAL, INSTRUCTION (FRENCH) (SE610E/SE710: D, E/SE810: D, E/SX710: D, E/ SX810)			3-068-372-51	MANUAL, INSTRUCTION (RUSSIAN) (X9N)	
	3-065-674-21	MANUAL, INSTRUCTION (SPANISH) (SE610E/SE710E/SE810E/SX710E/SX717E)			3-709-430-01	COVER, REMOTE CONTROL (for RMT-V259/V288/V288A/V288B/V288C) (SE610/SE710/SX710/SX717/SX810)	
	3-065-674-31	MANUAL, INSTRUCTION (GERMAN) (SE610: A, E/SE710: D, E/SE810: D, E/ SX710: D, E/SX717D/SX810)			3-709-430-11	COVER, REMOTE CONTROL (for RMT-V259K/V259L) (SE810)	
	3-065-674-41	MANUAL, INSTRUCTION (ITALIAN) (SE610A/SE710D/SE810D/SX710D/SX810)					
	3-065-674-51	MANUAL, INSTRUCTION (DUTCH) (SE610: A, E/SE710: D, E/SE810: D, E/ SX710: D, E/SX810)					
	3-065-674-61	MANUAL, INSTRUCTION (PORTUGUESE) (SE610E/SE710E/SE810E/SX710E)					
	3-065-674-71	MANUAL, INSTRUCTION (GREEK) (SE610A/SE710D/SE810D)					
	3-065-675-11	MANUAL, INSTRUCTION (SWEDISH) (SE610E/SE710E/SE810E/SX710E/SX717E)					
	3-065-675-21	MANUAL, INSTRUCTION (DANISH) (SE610E/SE710E/SE810E/SX710E/SX717E)					
	3-065-675-31	MANUAL, INSTRUCTION (FINNISH) (SE610E/SE710E/SE810E/SX710E/SX717E)					
	3-065-676-11	MANUAL, INSTRUCTION (FRENCH) (SE610B/SE710B/SE810B/SX710B)					
	3-065-677-11	MANUAL, INSTRUCTION (ENGLISH) (SE610G/SE710: G, I/SE810G)					
	3-065-678-11	MANUAL, INSTRUCTION (ENGLISH) (SE610: K, N/SE710: K, N/SE810: K, N/ SX710: K, N)					
	3-065-678-21	MANUAL, INSTRUCTION (CZECH) (SE610K/SE710K/SE810K/SX710K)					
	3-065-678-31	MANUAL, INSTRUCTION (POLISH) (SE610N/SE710N/SE810N/SX710N)					
	3-065-678-41	MANUAL, INSTRUCTION (HUNGALIAN) (SE610N/SE710N/SE810N/SX710N)					
	3-065-678-51	MANUAL, INSTRUCTION (RUSSIAN) (SE610K/SE810K)					
	3-065-680-11	INSTRUCTION (QUICK START GUIDE) (SE610G/SE710G/SE810G)					
	3-067-100-11	MANUAL, INSTRUCTION (FRENCH) (X9: D, E)					
	3-067-100-21	MANUAL, INSTRUCTION (SPANISH) (X9E)					
	3-067-100-31	MANUAL, INSTRUCTION (GERMAN) (X9: D, E)					
	3-067-100-41	MANUAL, INSTRUCTION (ITALIAN) (X9D)					
	3-067-100-51	MANUAL, INSTRUCTION (DUTCH) (X9: D, E)					
	3-067-100-61	MANUAL, INSTRUCTION (PORTUGUESE) (X9E)					
	3-067-100-71	MANUAL, INSTRUCTION (GREEK) (X9D)					
	3-067-101-11	MANUAL, INSTRUCTION (SWEDISH) (X9E)					
	3-067-101-21	MANUAL, INSTRUCTION (DANISH) (X9E)					
	3-067-101-31	MANUAL, INSTRUCTION (FINNISH) (X9E)					

The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.