

SLV-SE610/SE710/SE810/SX710/SX717/SX810/X9 RMT-V259/V259B/V259K/V259L/V259R/V259S/V288/V288A/V288B/V288C

SERVICE MANUAL

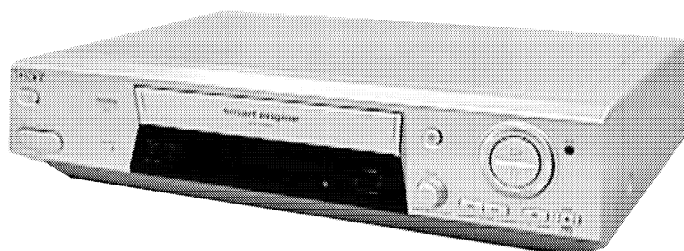
 


Photo: SLV-SE810

SR MECHANISM

Hi-Fi

- Refer to the SERVICE MANUAL of VHS MECHANICAL ADJUSTMENTS VI for MECHANICAL ADJUSTMENTS. (9-921-647-11)

French Model

SLV-SE610B/SE710B/SE810B/
SX710B/X9B

German Model

SLV-SE710D/SE810D/SX710D/
SX717D/SX810D/X9D

Italian Model

SLV-SE610A

East European Model

Russian Model

SLV-SE610K/SE610N/SE710K/SE710N/
SE810K/SE810N/SX710K/SX710N/X9N

North European Model

SLV-SE610E/SE710E/SE810E/
SX710E/SX717E/X9E

UK Model

SLV-SE610G/SE710G/
SE710I/SE810G/X9G

* The abbreviations of SE610, SE710, SE810, SX710, SX717, SX810 and X9 contained in this service manual are indicated when these models are common to all their corresponding models as given below.

Abbreviated model name	SE610	SE710	SE810	SX710	SX717	SX810	X9
All model names	SE610A SE610B SE610E SE610G	SE710B SE710D SE710E SE710G	SE810B SE810D SE810E SE810G	SX710B SX710D SX710E SX710K	SX717D SX717E	SX810D	X9B X9D X9E X9G
SLV-	SE610K SE610N	SE710I SE710K SE710N	SE810K SE810N	SX710N			X9N

VHS VIDEO CASSETTE RECORDER

SONY®