

Service Service Service



Service Manual



TABLE OF CONTENTS

Location of PC Boards	1-1	Power Board	9
Specification	1-2	Circuit diagram	9-1...9-2
Measurement Setup	1-3	Layout diagram	9-3
Service Aids	1-4	Decoder Board	10
Instruction On CD Playability	1-5...1-6	Circuit diagram	10-1...10-4
Software Version Check & Upgrade	2-1	Layout diagram	10-5...10-6
Malfuction Check Chart	2-2	Explode View	11-1...11-2
Disassembly Diagram	3-1...3-2	Service Partlist	12-1
Block Diagram	4-1	Factory Partlist	13-1...13-6
Wiring Diagram	4-2		
Volume Board	5-1		
Display Board	6		
Circuit diagram	6-1		
Layout diagram	6-2		
M-boy,USB&Headphone Board	7		
TUNER Board	8		
Circuit diagram	8-1		
Layout diagram	8-2		

**CLASS 1
LASER PRODUCT**

© Copyright 2008 Philips Consumer Electronics B.V. Eindhoven, The Netherlands
All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise without the prior permission of Philips.

Published by DB 0830 Service Audio Printed in The Netherlands Subject to modification



© 3141 785 33060

Version 1.0



PHILIPS

Location of PC Boards

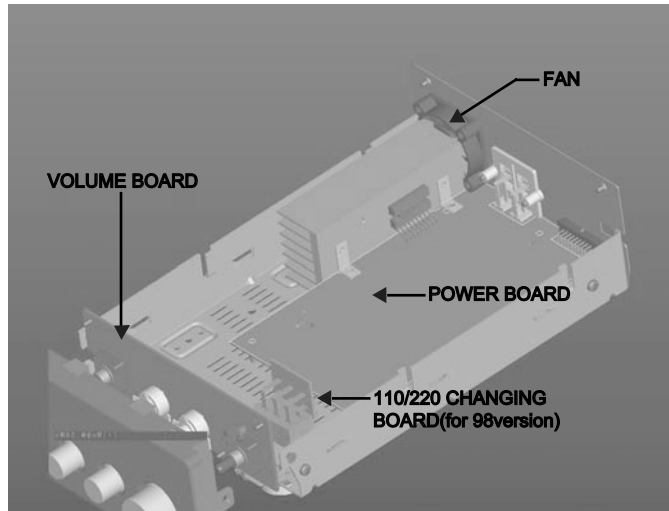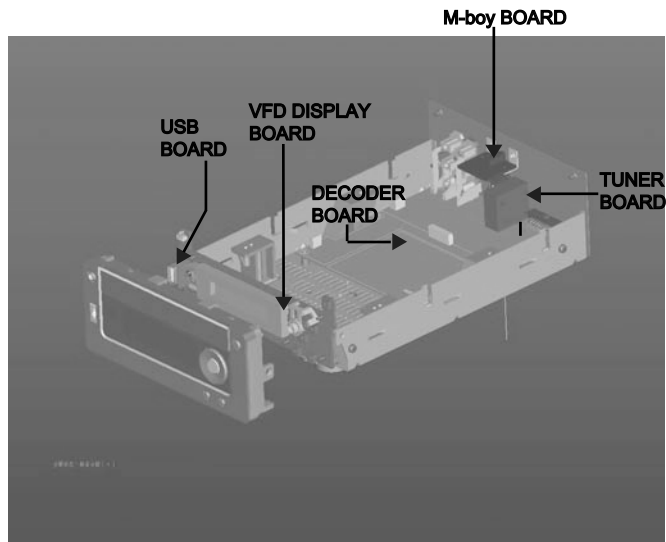

VERSION VARIATIONS :

Type /Versions:		MCM772										
Board in used:	Service policy	/05	/12	/37	/55	/58	/61	/79	/93	/94	/96	/98
DISPLAY BOARD			C									
USB BOARD			M									
M-boy BOARD			M									
TUNER BOARD			M									
HEADPHONE BOARD			M									
DECODER BOARD			M									
VOLUME BOARD			M									
POWER BOARD			M									

Type /Versions:		MCM772										
Features	Feature difference	/05	/12	/37	/55	/58	/61	/79	/93	/94	/96	/98
RDS			√									
VOLTAGE SELECTOR												
ECO STANDBY - DARK												
TDS												

* TIPS : C -- Component Lever Repair.
M -- Module Lever Repair
√ -- Used

Specification

AMPLIFIER

Rated Output Power45Wx2 RMS
 Signal-to-noise ratio ≥ 65 dBA
 Frequency response50Hz - 3 dB+/-3 20KHz
 Aux Input0.5V RMS 47kohm

DISC

Laser Type Semiconductor
 Disc Diameter 12cm/8cm
 Support Disc
 CD-DA,MP3,CD-RW,CD-R
 Audio DAC 24Bits / 44.1kHz
 Total Harmonic Distortion <0.1%(1kHz)
 Frequency Response 20Hz - 3dB+/-3 20KHz
 S/N Ration ≥ 65 dBA

TUNER

FM Tuning Range 87.5 – 108 MHz
 Tuning grid 100KHz/50KHz

Sensitivity

– Mono, 50dB S/N Ratio 5u V
 – Stereo, 46dB S/N Ratio 100uV
 Selectivity >26dB
 Image Rejection >26dB
 Total Harmonic Distortion <1%
 Signal to Noise Ration >65dBA

SPEAKERS

Speaker Impedance 4ohm
 Speaker Driver, base 4.5"
 Speaker Driver, tweeter 3"
 Frequency Response 50Hz -3dB+/-3 20KHz

GENERAL INFORMATION

Total Output power 45Wx2 RMS
 AC Power 220-230 V / 50Hz
 Operation Power Consumption 52W
 Standby Power Consumption <4W
 Eco Standby Power Consumption <1W
 Headphone Output 2X15mW 32ohm
 USB Direct Version 1.1

Dimensions

– Main unit (w x h x d) 248x280x105mm
 – Speaker box (w x h x d) 140x210x250mm


Weight

– With Packing 9.7 KG
 – Main Unit 2.8 KG
 – Speaker box 4.9 KG/SET

Specifications and external appearance are subject to change without notice.


MEASUREMENT SETUP

Tuner FM

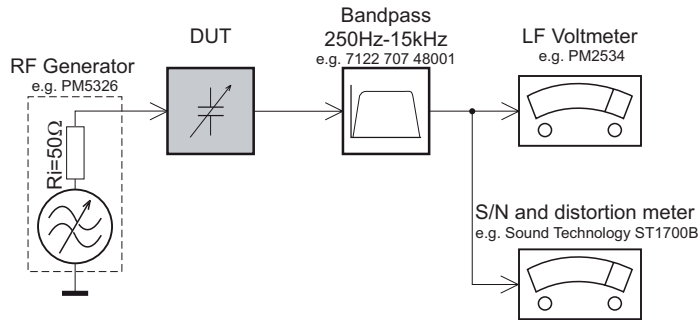

Use a bandpass filter to eliminate hum (50Hz, 100Hz) and disturbance from the pilotone (19kHz, 38kHz).


Tuner AM (MW,LW)

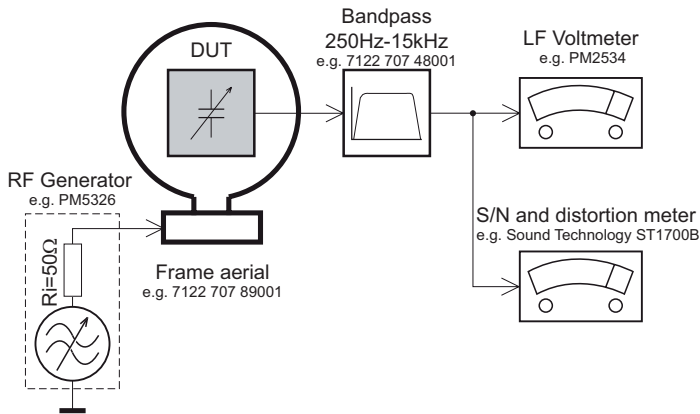

To avoid atmospheric interference all AM-measurements have to be carried out in a Faraday's cage.
Use a bandpass filter (or at least a high pass filter with 250Hz) to eliminate hum (50Hz, 100Hz).


CD

Use Audio Signal Disc SBC429 4822 397 30184
(replaces test disc 3)

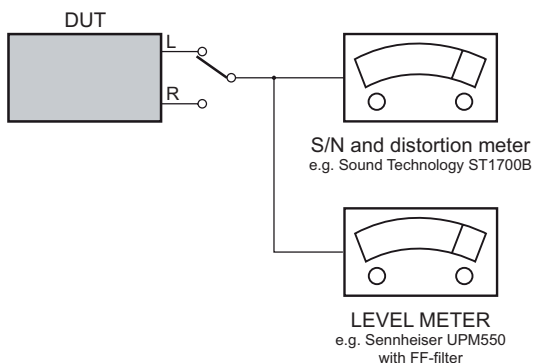

Recorder

Use Universal Test Cassette **Cr02** SBC419 4822 397 30069
or Universal Test Cassette **Fe** SBC420 4822 397 30071

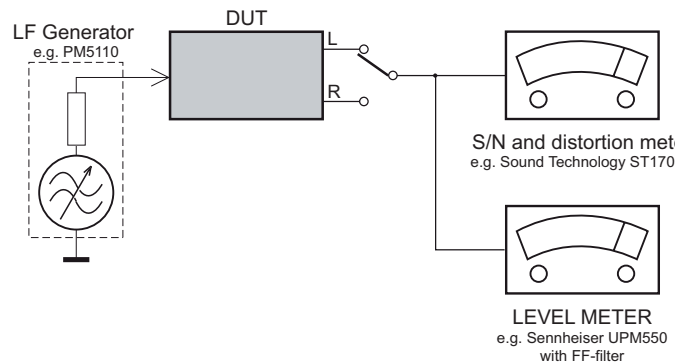

SERVICE AIDS



WARNING

All ICs and many other semi-conductors are susceptible to electrostatic discharges (ESD). Careless handling during repair can reduce life drastically.

When repairing, make sure that you are connected with the same potential as the mass of the set via a wrist wrap with resistance. Keep components and tools also at this potential.

ESD



Safety regulations require that the set be restored to its original condition and that parts which are identical with those specified, be used

Safety components are marked by the symbol .

**CLASS 1
LASER PRODUCT**

INFORMATION ABOUT LEAD-FREE SOLDERING

Philips CE is producing lead-free sets from 1.1.2005 onwards.

IDENTIFICATION:

Regardless of special logo (not always indicated) one must treat all sets from 1 Jan 2005 onwards, according next rules:



- On our website www.atyourservice.ce.Philips.com you find more information to:

- * BGA-de-/soldering (+ baking instructions)
- * Heating-profiles of BGAs and other ICs used in Philips-sets
- * Lead free

You will find this and more technical information within the "magazine", chapter "workshop news".


For additional questions please contact your local repair-helpdesk.

SERVICE INSTRUCTION

Safety regulations require that after a repair, the set must be returned in its original condition. Pay in particular attention to the following points:

- Route the wire trees correctly and fix them with the mounted cable clamps.
- Check the insulation of the AC Power lead for external damage.
- Check the strain relief of the AC Power cord for proper function.
- Check the electrical DC resistance between the AC Power Plug and the secondary side (only for sets which have a AC Power isolated power supply):
 1. Unplug the AC Power cord and connect a wire between the two pins of the AC Power plug.
 2. Set the AC Power switch to the "on" position (keep the AC Power cord unplugged!).
 3. Measure the resistance value between the pins of the AC Power plug and the metal shielding of the tuner or the aerial connection on the set. The reading should be larger than 4.5 Mohm (For U.S. it should be between 4.2 Mohm and 12 Mohm).
 4. Switch "off" the set, and remove the wire between the two pins of the AC Power plug.
- Check the cabinet for defects, to avoid touching of any inner parts by the customer.

INSTRUCTIONS ON CD PLAYABILITY

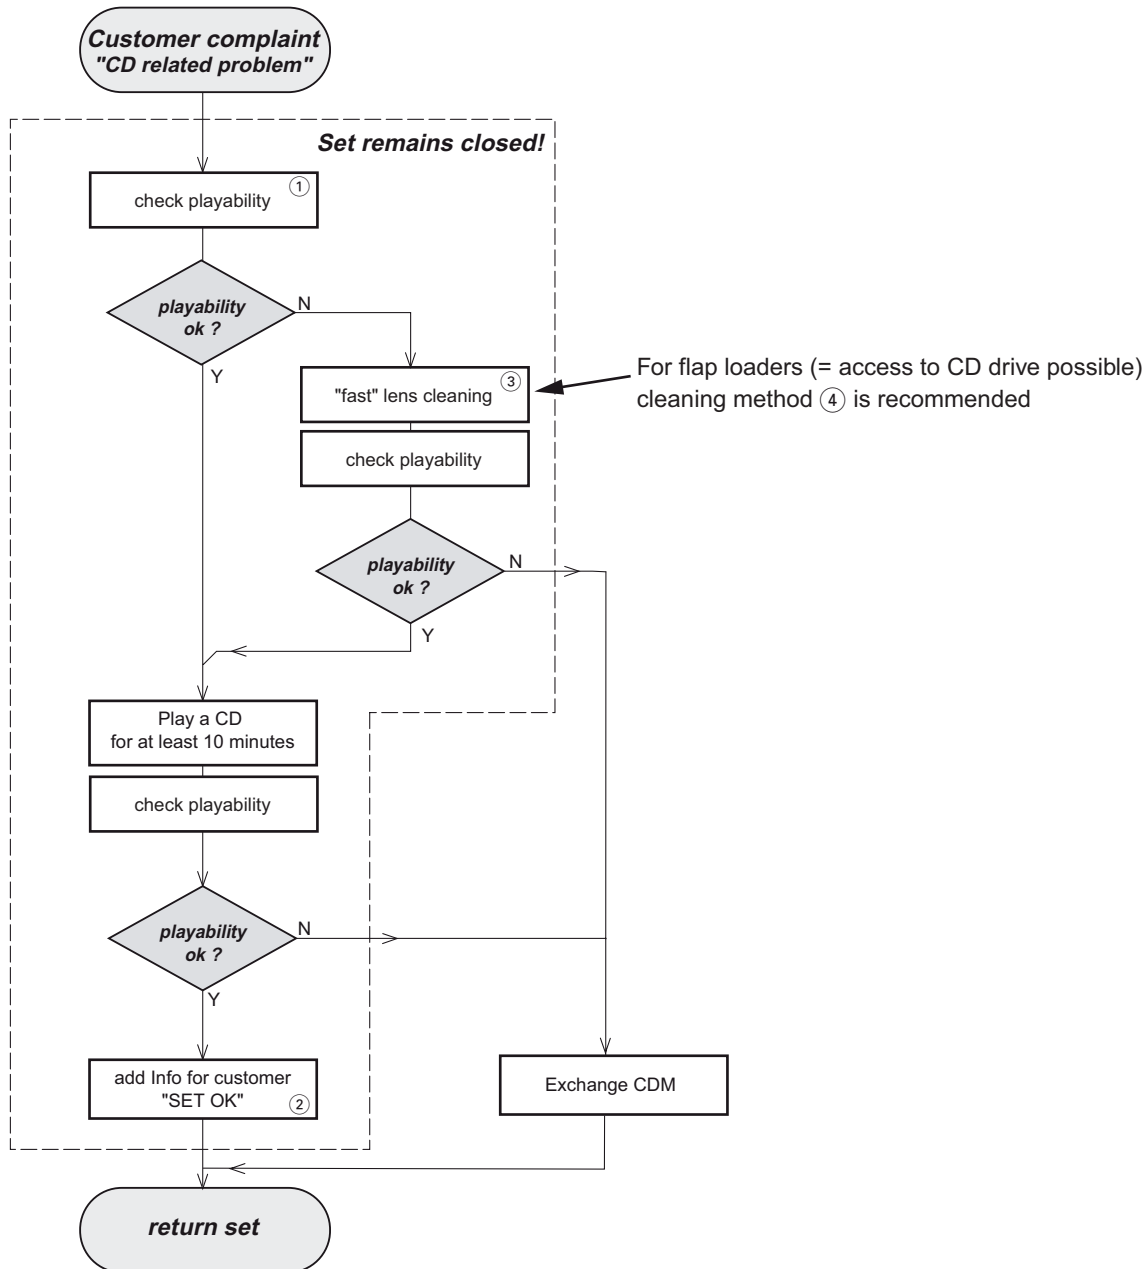

① - ④ For description - see following pages

INSTRUCTIONS ON CD PLAYABILITY

①

PLAYABILITY CHECK

For sets which are compatible with **CD-RW** discs
 use CD-RW Printed Audio Disc7104 099 96611
 TR 3 (Fingerprint)
 TR 8 (600µ Black dot) **maximum at 01:00**

- playback of these two tracks without audible disturbance
 playing time for: Fingerprint ≥ 10 seconds
 Black dot from 00:50 to 01:10
- jump forward/backward (search) within a reasonable time

For all other sets
 use CD-DA SBC 444A4822 397 30245
 TR 14 (600µ Black dot) **maximum at 01:15**
 TR 19 (Fingerprint)
 TR 10 (1000µ wedge)

- playback of all these tracks without audible disturbance
 playing time for: 1000µ wedge ≥ 10 seconds
 Fingerprint ≥ 10 seconds
 Black dot from 01:05 to 01:25
- jump forward/backward (search) within a reasonable time

②

CUSTOMER INFORMATION

It is proposed to add an addendum sheet to the set which informs the customer that the set has been checked carefully - but no fault was found.

The problem was obviously caused by a scratched, dirty or copy-protected CD. In case problems remain, the customer is requested to contact the workshop directly.

The lens cleaning (method ③) should be mentioned in the addendum sheet.

The final wording in national language as well as the printing is under responsibility of the Regional Service Organizations.

④


LIQUID LENS CLEANING

Before touching the lens it is advised to clean the surface of the lens by blowing clean air over it. This to avoid that little particles make scratches on the lens.

Because the material of the lens is synthetic and coated with a special anti-reflectivity layer, cleaning must be done with a non-aggressive cleaning fluid. It is advised to use "Cleaning Solvent

The actuator is a very precise mechanical component and may not be damaged in order to guarantee its full function. Clean the lens gently (don't press too hard) with a soft and clean cotton bud moistened with the special lens cleaner.

The direction of cleaning must be in the way as indicated in the picture below.

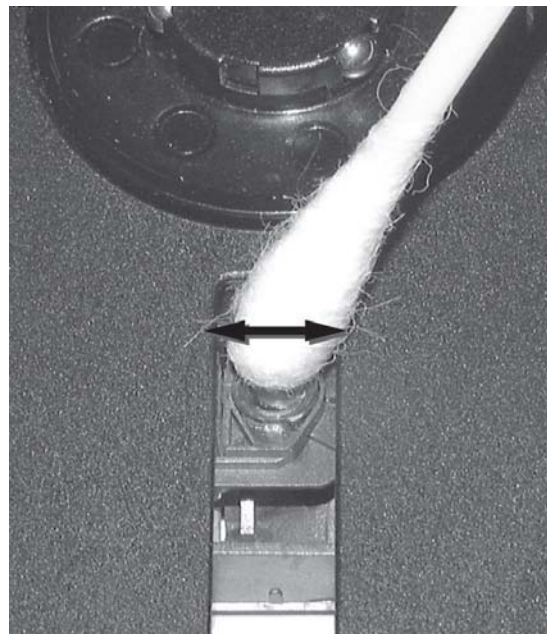


Software Version Check & Upgrade

Upgrade software

1. Downloading the software from Philips support website
<http://www.philips.com/support>
2. Put in the Software CD Disc or USB, when it is loading
Waiting a minute, till hear a long ding voice. Software
upgrade finish.


Software check

Press the “display” button quartic continuously on remote control,
display showing as below:




Vxx dyyyy

Malfunction follow check chart

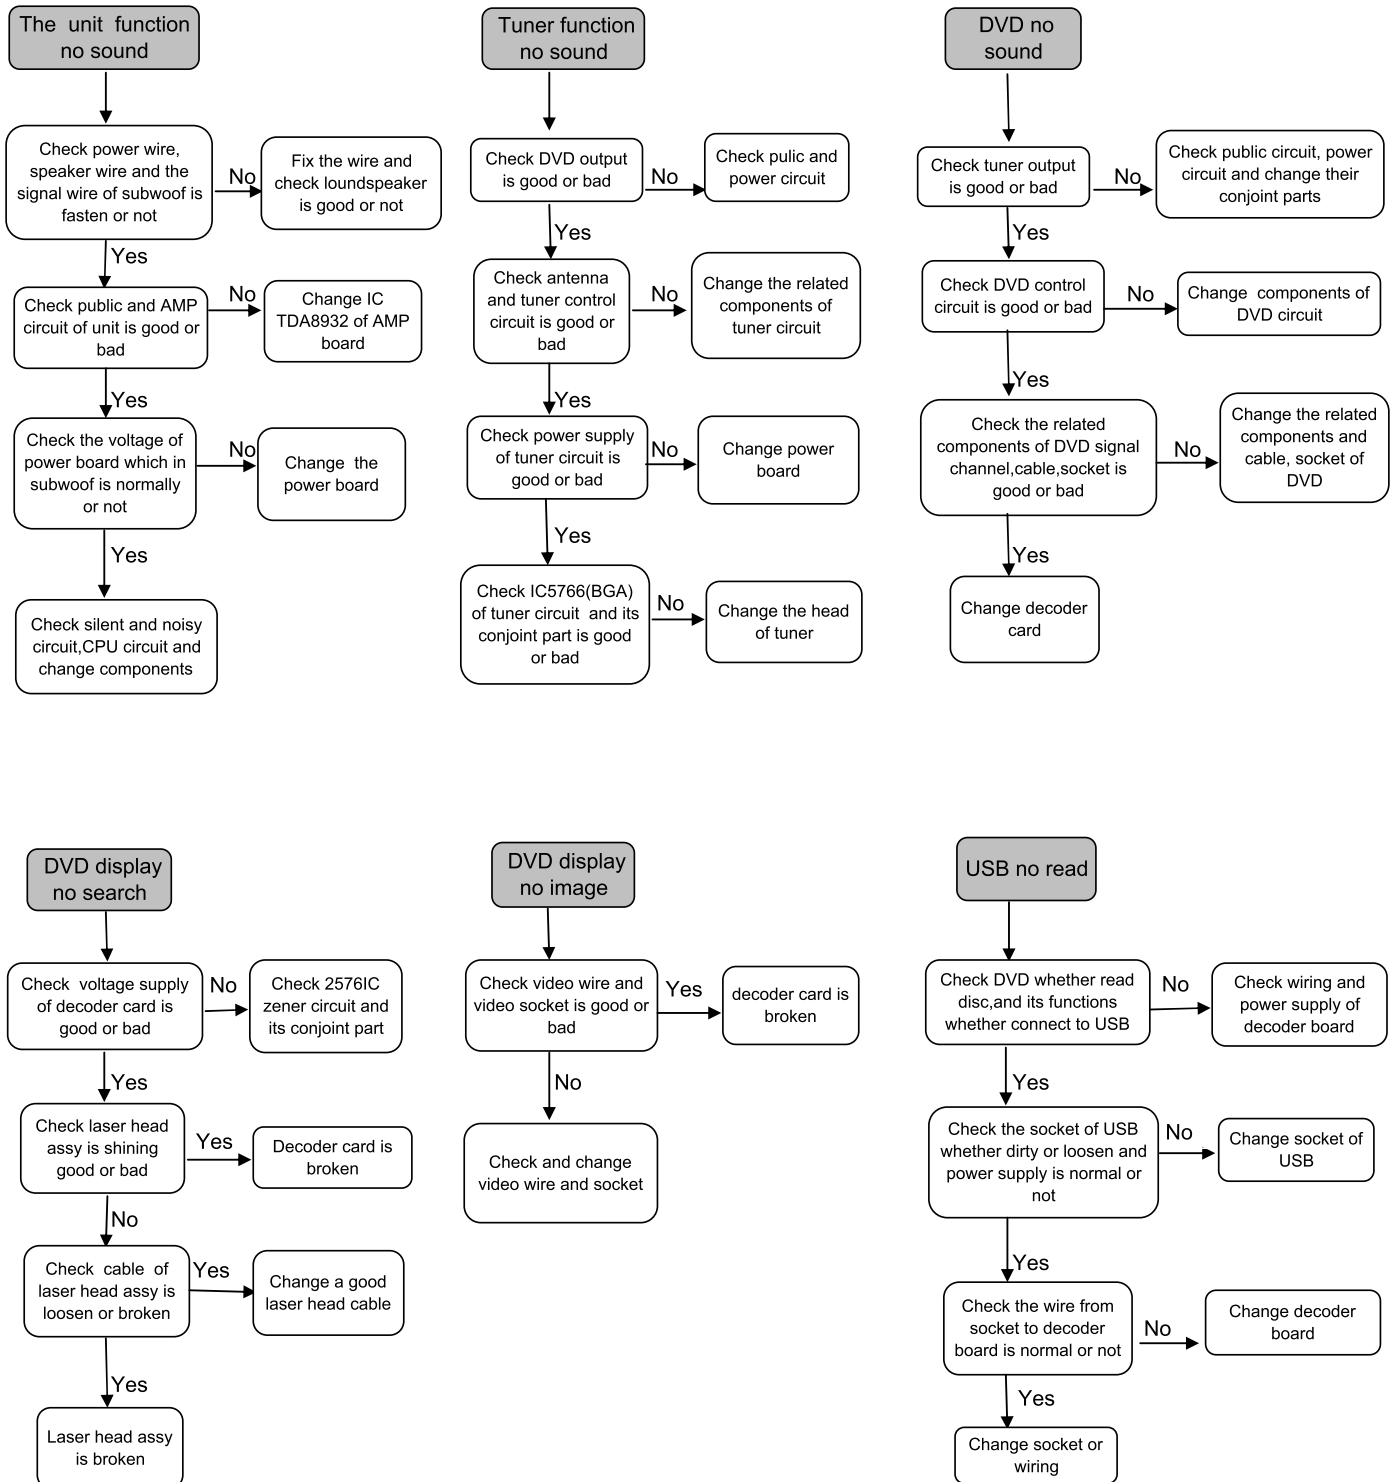


Disassembly Diagram-DVD Part


A. Turn on the power, open DVD door.
And then turn off, prize two place of
lock of rubber feet, remove DVD door.

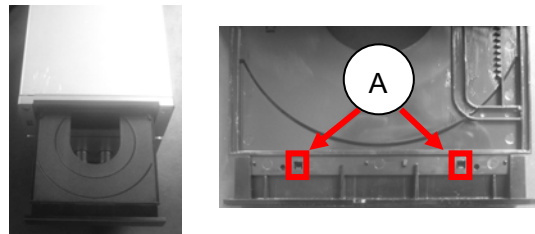


B. Loosen screws which located the
left of cover TORX T-7 STTK 8010
3.0×6.0NI(2PCS)

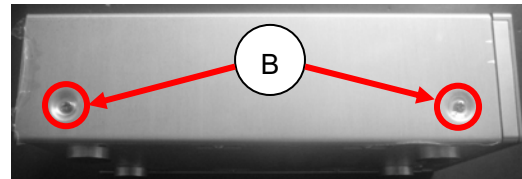


C. Loosen screws which located the
right of cover TORX T-7 STTK 8010 3.0
× 6.0NI(2PCS).

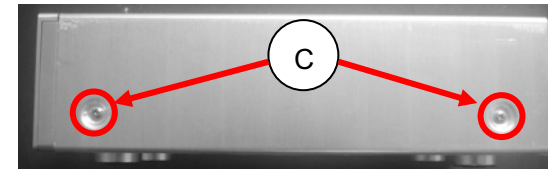


D. Loosen screws which located back of
top cover TORX T-10 STTK 3.0×
6.0NI(2PCS), and then remove top
cover.

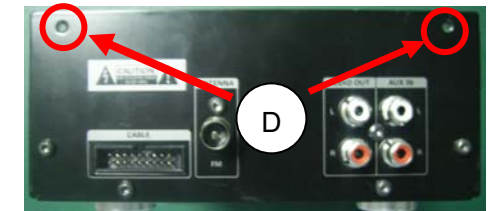


E. Loosen screws 3× 10PWA
(4PCS) to remove DVD loader.

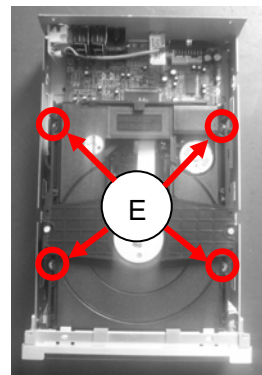


F. Loosen screws PHILIPS TORX
T-10 1.5P 3.0X10.0 AB(4PCS), TORX
STTP T-10 3.0X6.0 AB3(1PCS) to
remove rear panel.

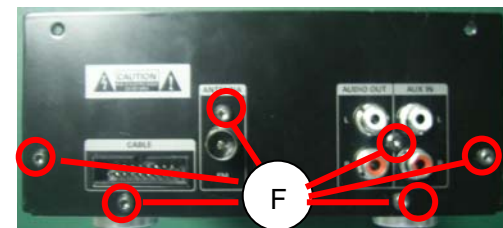


G. Loosen screws 3× 5BM(4PCS)
to remove decoder board.

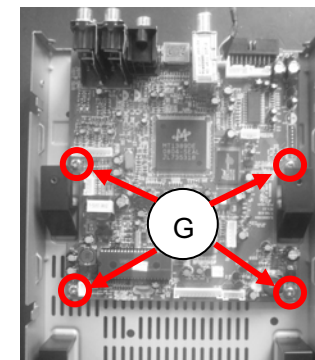


H. Loosen screws 3× 5BMTT(2PCS)
to remove bottom cover.

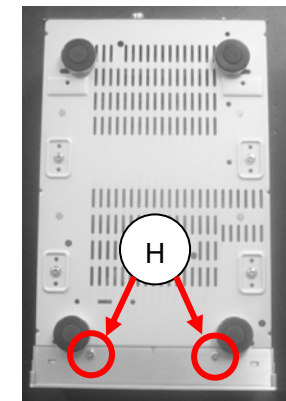

I. Loosen screws which located the
side cabinet 3× 5FMTT(2PCS).

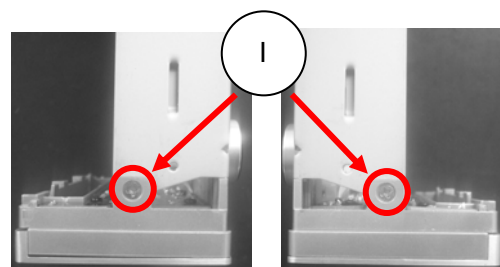


J. Loosen screws 2.6× 8PA(6PCS)
to remove display board.

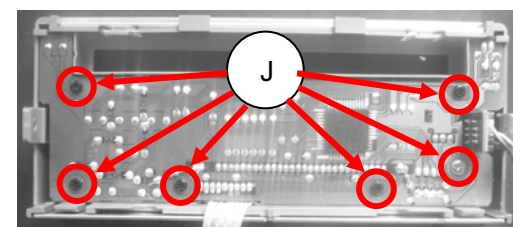


Disassembly Diagram-AMP Part


A. Remove functional knob 4PCS.

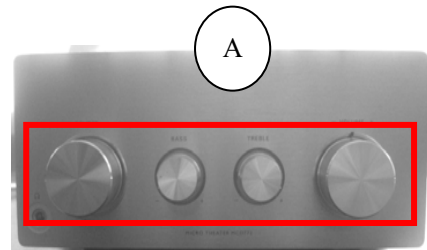


B. Loosen screws which located the right of top cover TORX T-7 STTK 8010 3.0X6.0 NI(2PCS).

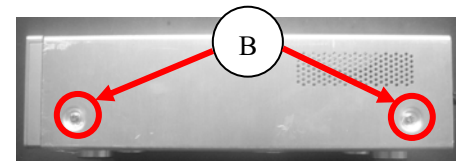


C. Loosen screws which located the left of top cover TORX T-7 STTK 8010 3.0X6.0 NI(2PCS).

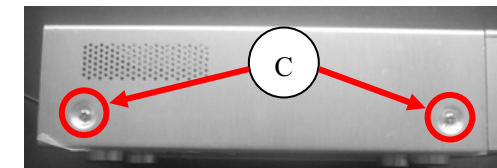


D. Loosen screws which located back of top cover TORX T-10 STTB 3.0X6.0 NI(2PCS).

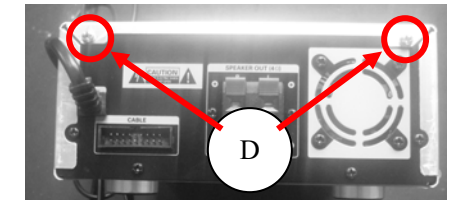


E. Loosen screws PHILIPS TORX T-10 1.5P 3.0X10.0 AB3(2PCS), TORX STTP T-10 3.0X6.0 AB3 (4PCS) to remove rear panel.

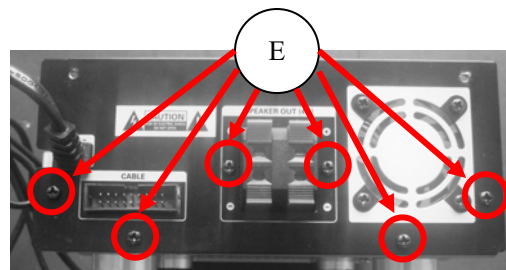


F. Loosen screws 3×5BMTT (2PCS) to remove bottom cover.
F1. Loosen screws 3×6BTH (2PCS) to remove radiator.

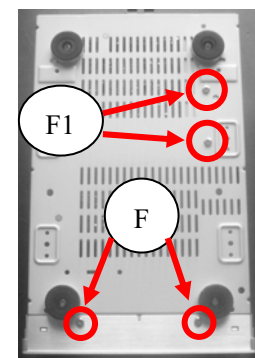

G. Loosen screws which located side cabinet 3×5FMTT (2PCS).

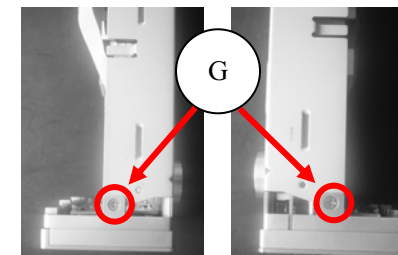


H. Loosen screws 3×5BM (3PCS) to remove AMP board.

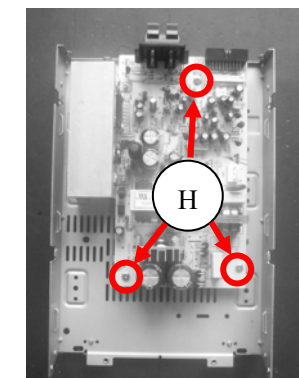



I. Loosen screws 2.6×8PA (4PCS) to remove volume board.

H1. Loosen screws 3×8BA (1PCS) to remove headphone board.

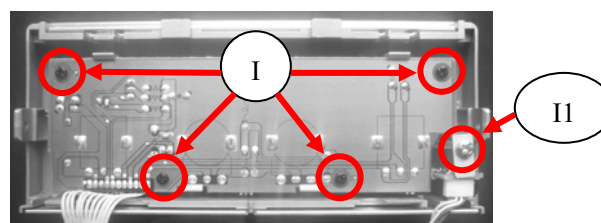


J. Loosen screws of functional knob(4PCS).




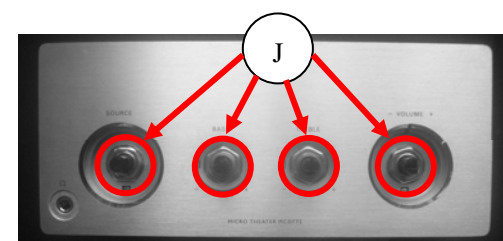


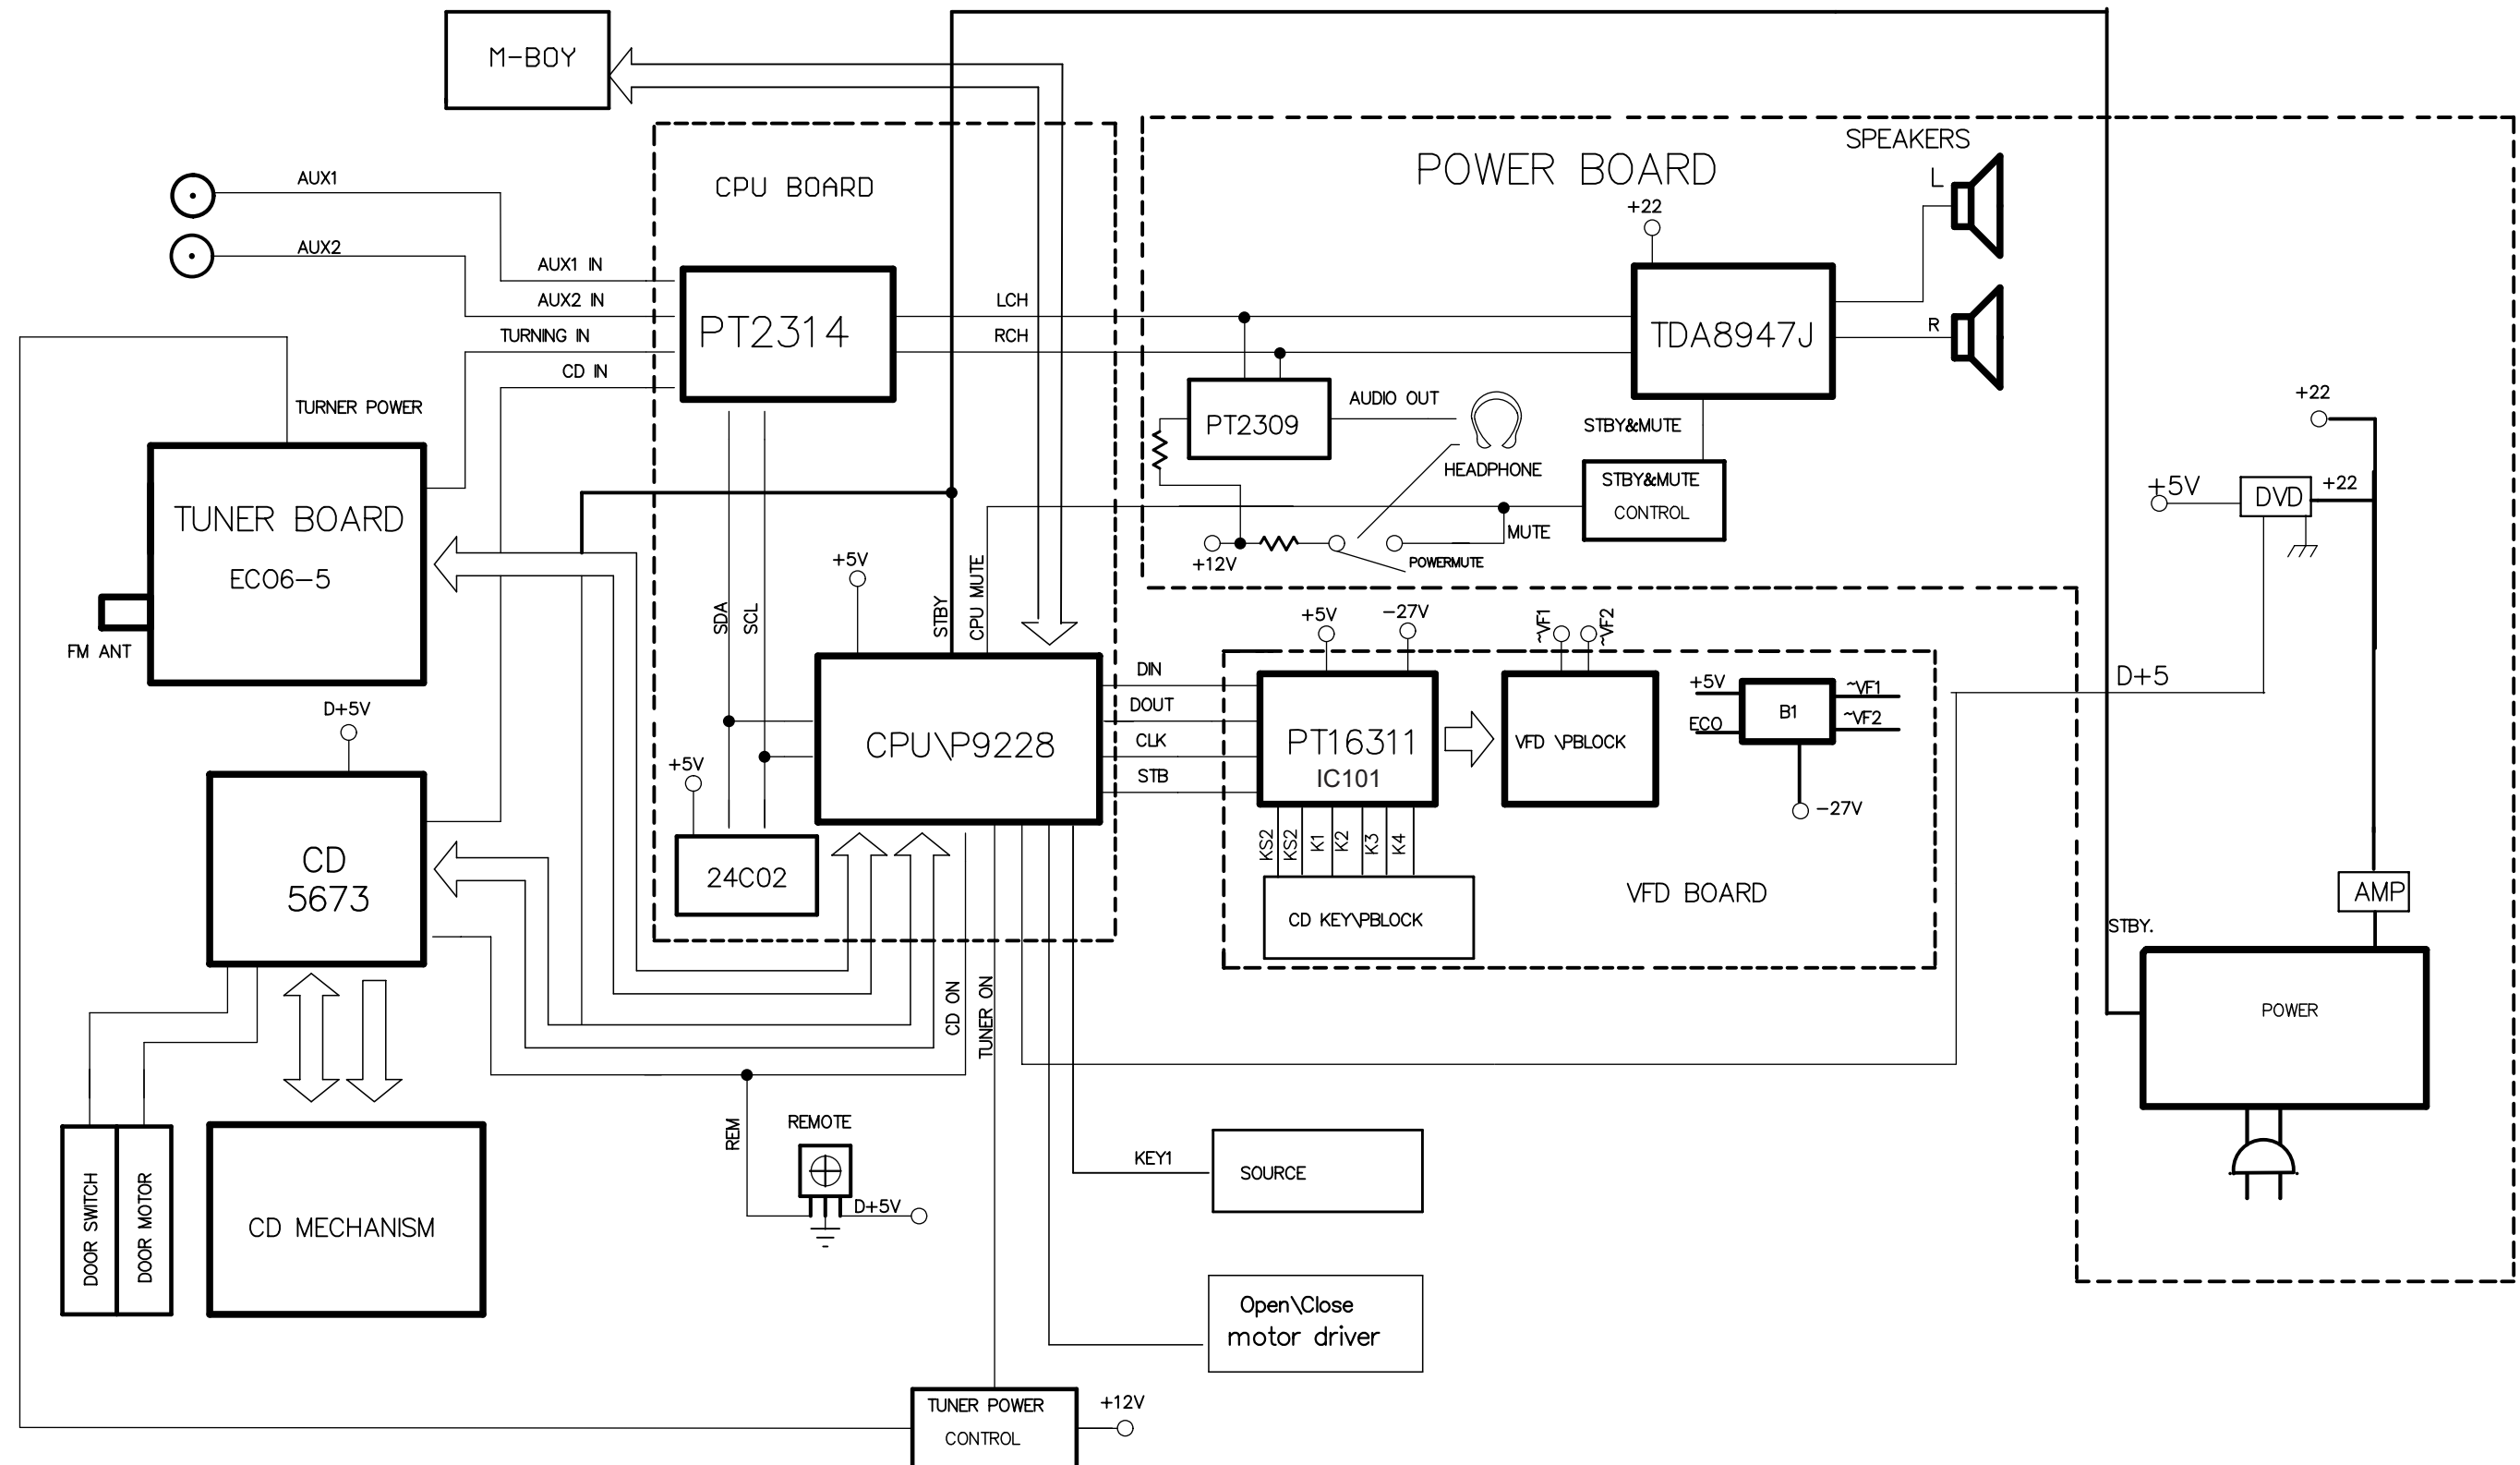

Wiring Diagram

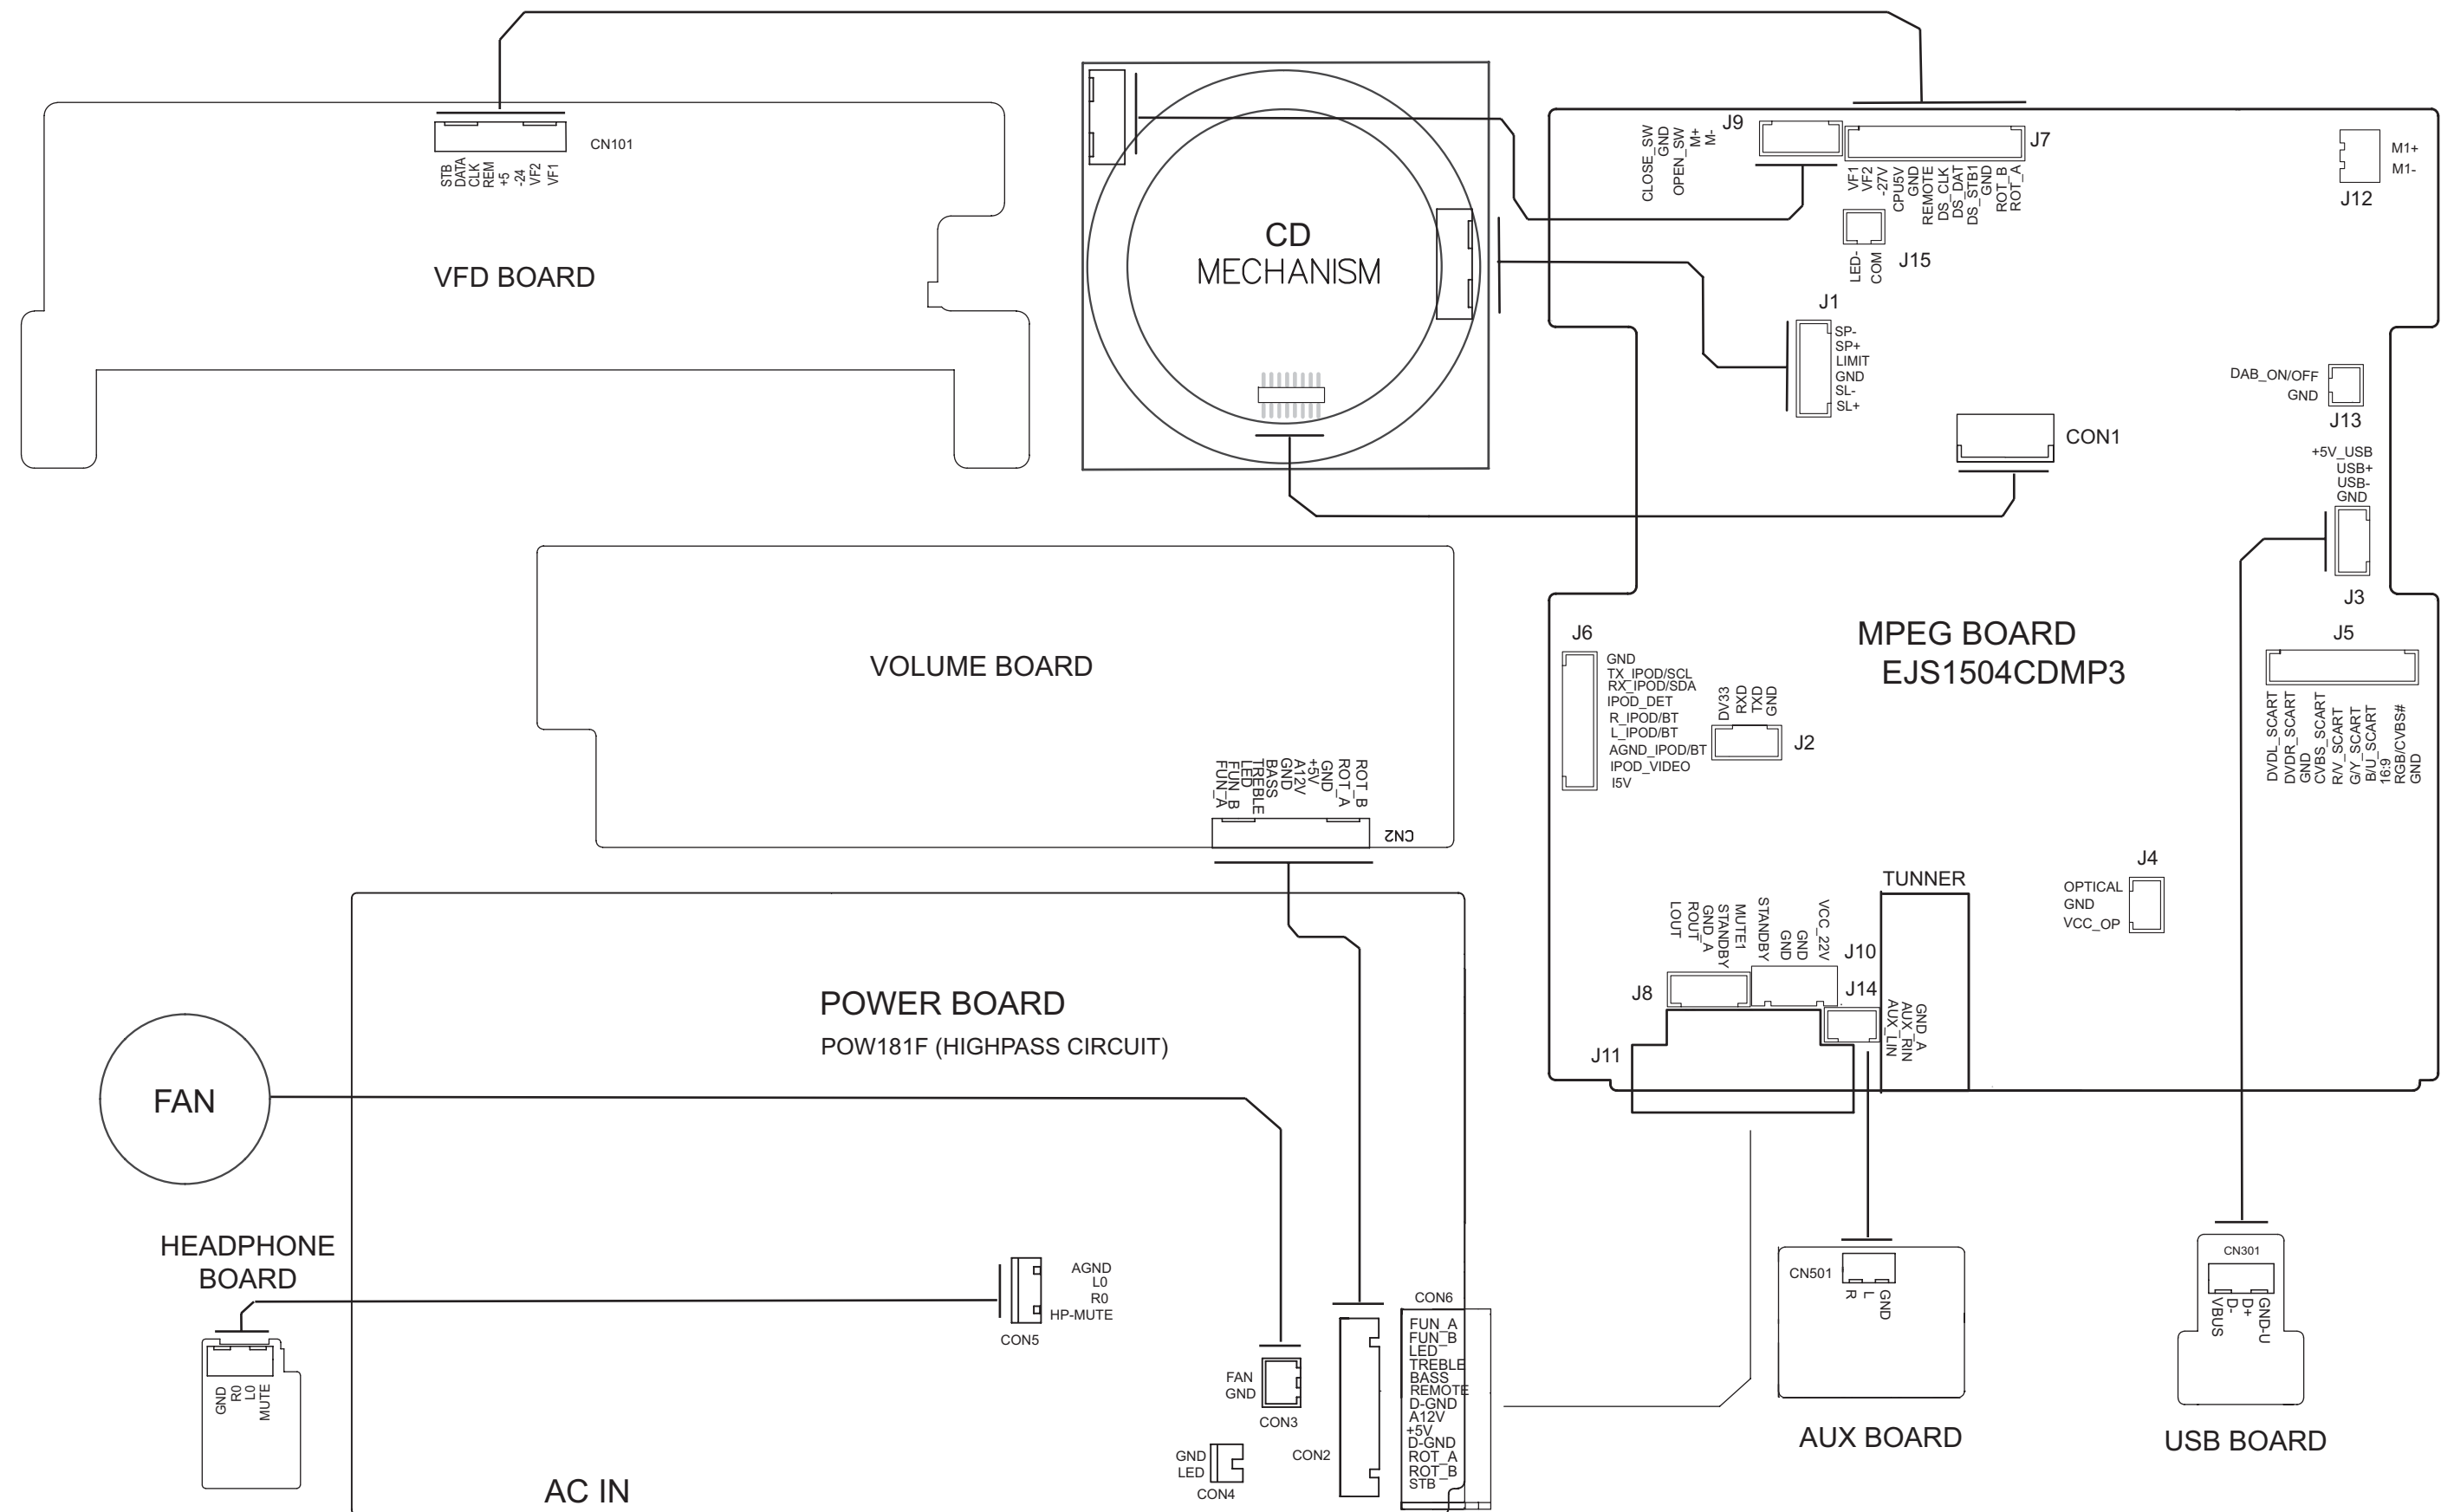


Volume Board--Layout Diagram

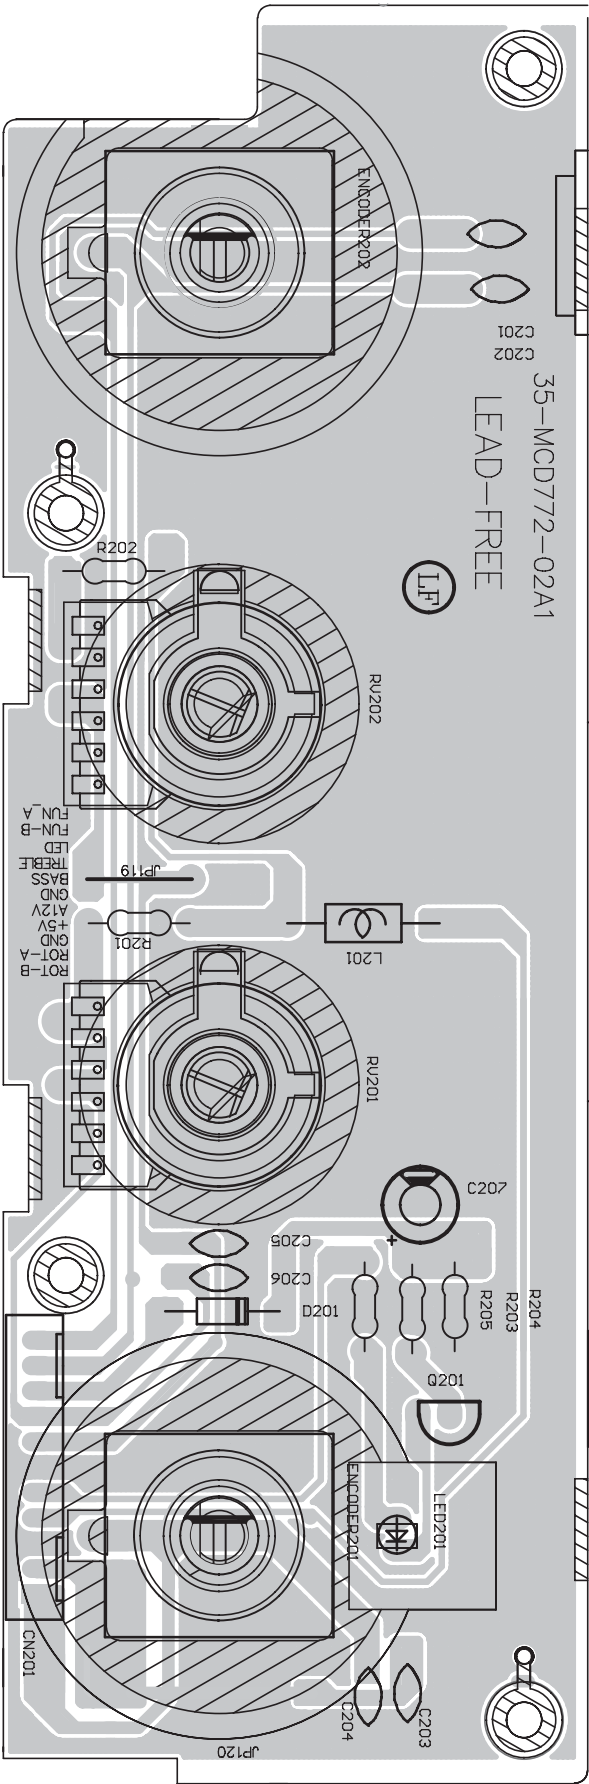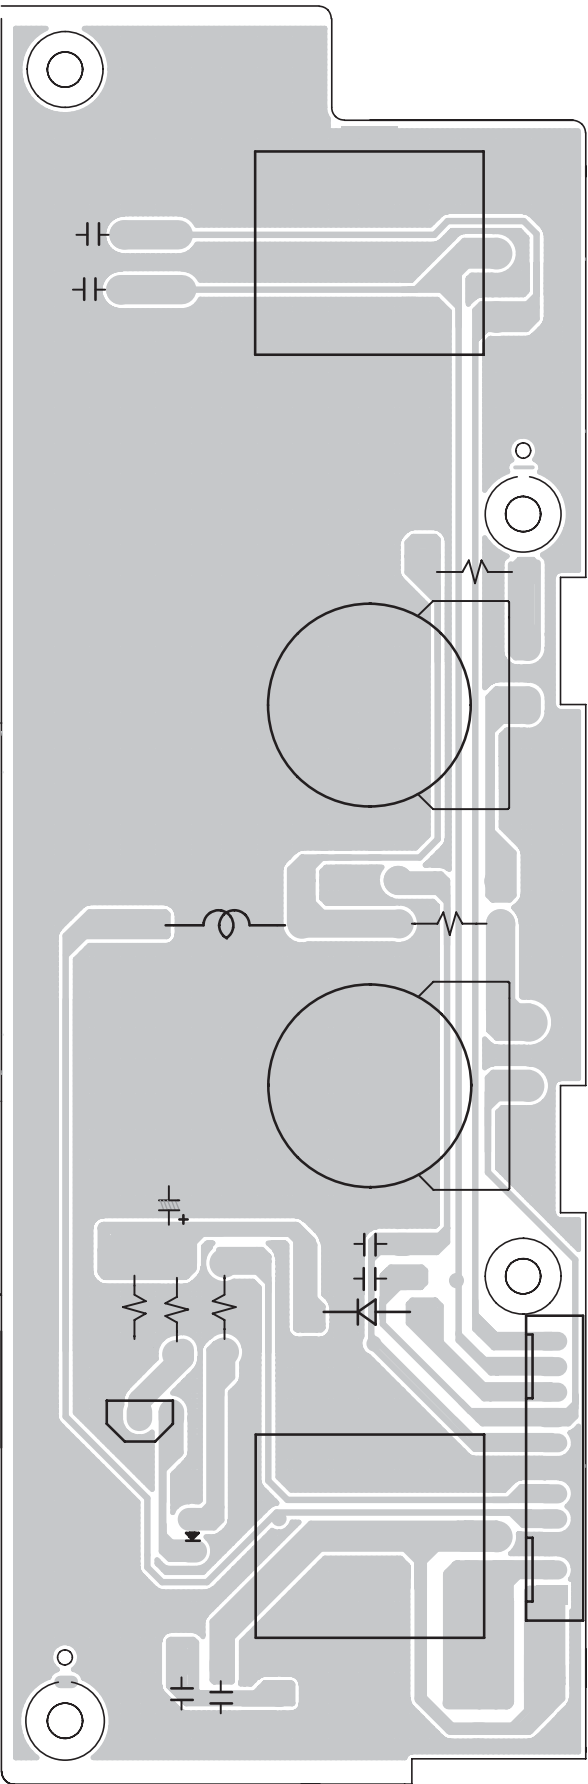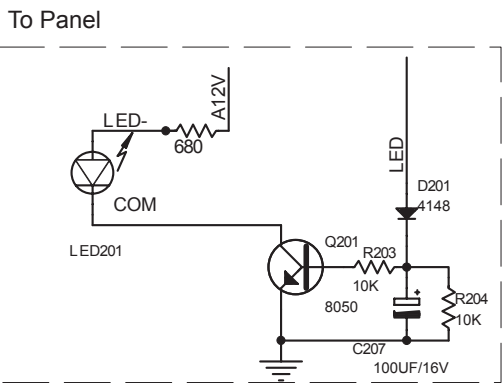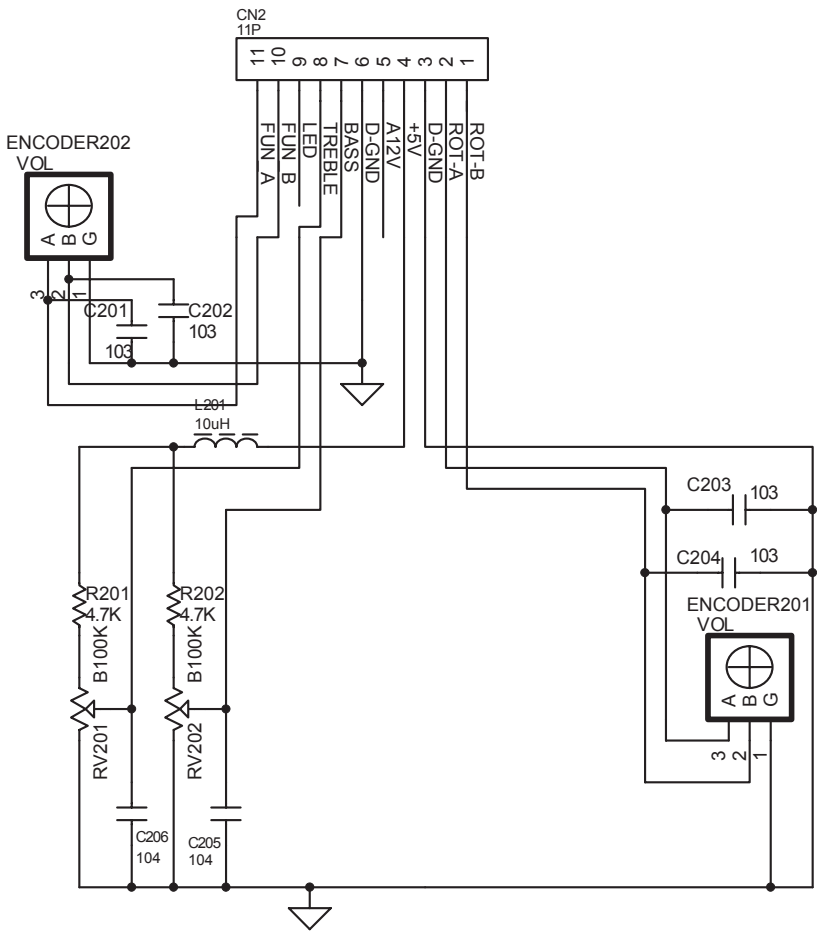

The schematic diagram illustrates the NE1503D-1.GB board, centered around the IC101 (PT6311) microcontroller. The board features a 9P/2.0 connector (CN101) at the bottom, providing power (+5V, V-GND, REM, CLK, STB1, V-VF2, V-VF1, -24V) and data (DATA). The microcontroller (IC101) is connected to various components:


- Power and Grounding:** +5V is supplied to the REM pin and the LED5 pin. V-GND is connected to the GND pin. -24V is connected to the VEE pin. V-VF1 and V-VF2 are connected to the V-VF1 and V-VF2 pins, respectively, with pull-up resistors R102 and R101.
- LEDs:** LED1 (7507RST) is connected to the LED1 pin. LED2 (FANCT) is connected to the LED2 pin. LED3 (POWER) is connected to the LED3 pin. LED4 (BBE) is connected to the LED4 pin. LED5 is connected to the LED5 pin.
- Switches:** SW1 (KEY1) through SW4 (KEY4) are connected to the KEY1 through KEY4 pins. SW101 through SW108 are connected to the TACT pins (TACT(CLOCK), TACT(CH-/PRE), TACT(STOP/BAND), TACT(REPEAT/ST), TACT(OPEN/CLOSE), TACT(PROG/MEM), TACT(PLAY/PRESET), TACT(OPEN/CLOSE)).
- Connectors:** The 9P/2.0 connector (CN101) is at the bottom. The 10-pin connector (CN102) is at the top left, providing power (+5V, V-GND, REM, CLK, STB1, V-VF2, V-VF1, -24V) and data (DATA). The 10-pin connector (CN103) is at the top right, providing power (+5V, V-GND, REM, CLK, STB1, V-VF2, V-VF1, -24V) and data (DATA).
- Other Components:** The board includes a 1K resistor (R103), a 47K resistor (R104), a 47uF capacitor (C101), and a 104 capacitor (C102).

Display Board--Layout Diagram

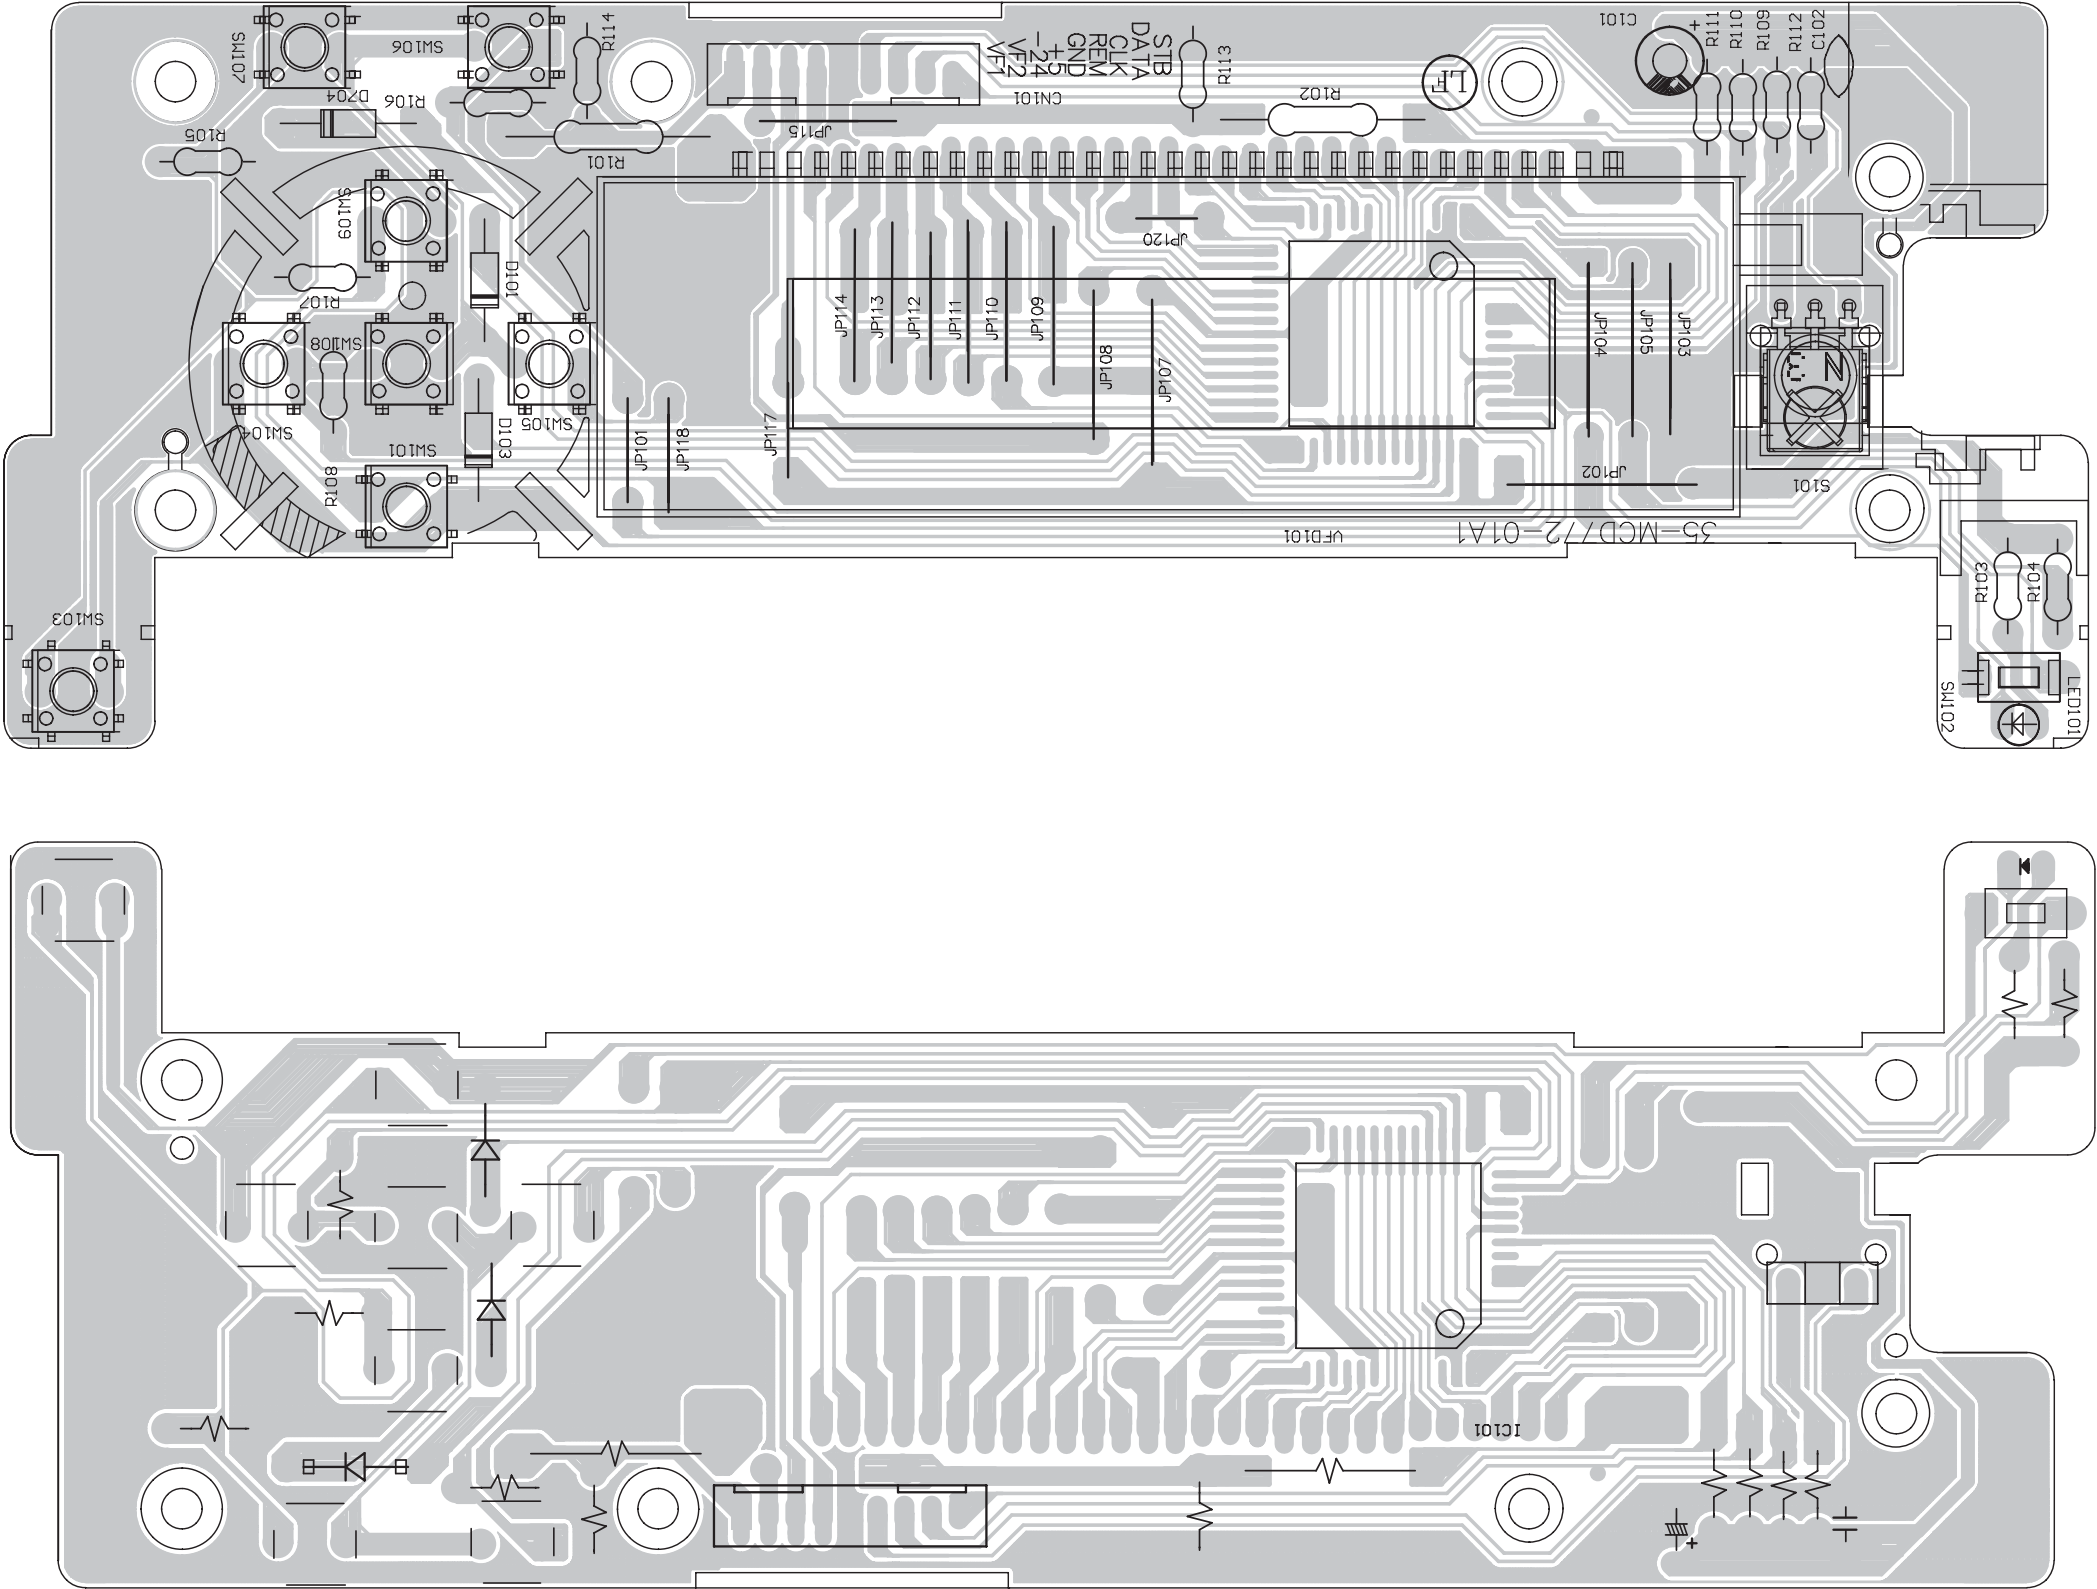


M-boy、USB&Headphone Board








M-boy BOARD

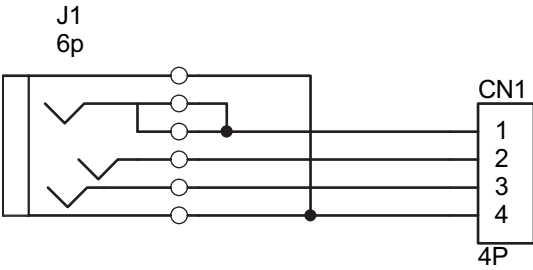


HEADPHONE BOARD

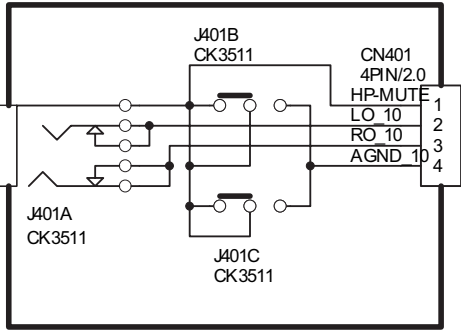



USB BOARD

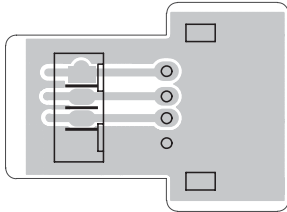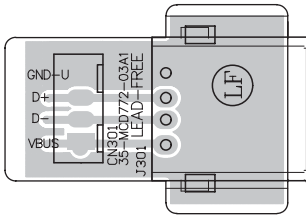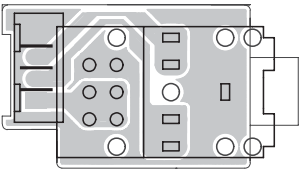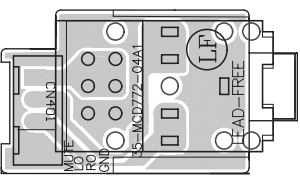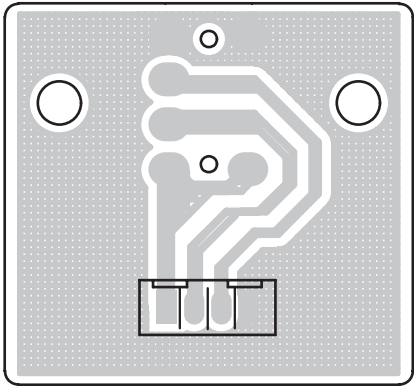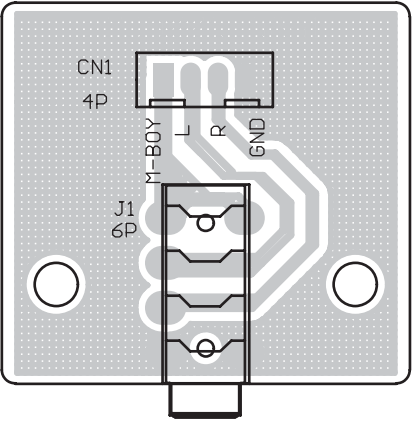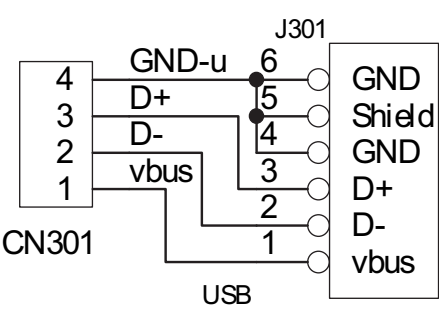




Tuner Board-Circuit Diagram

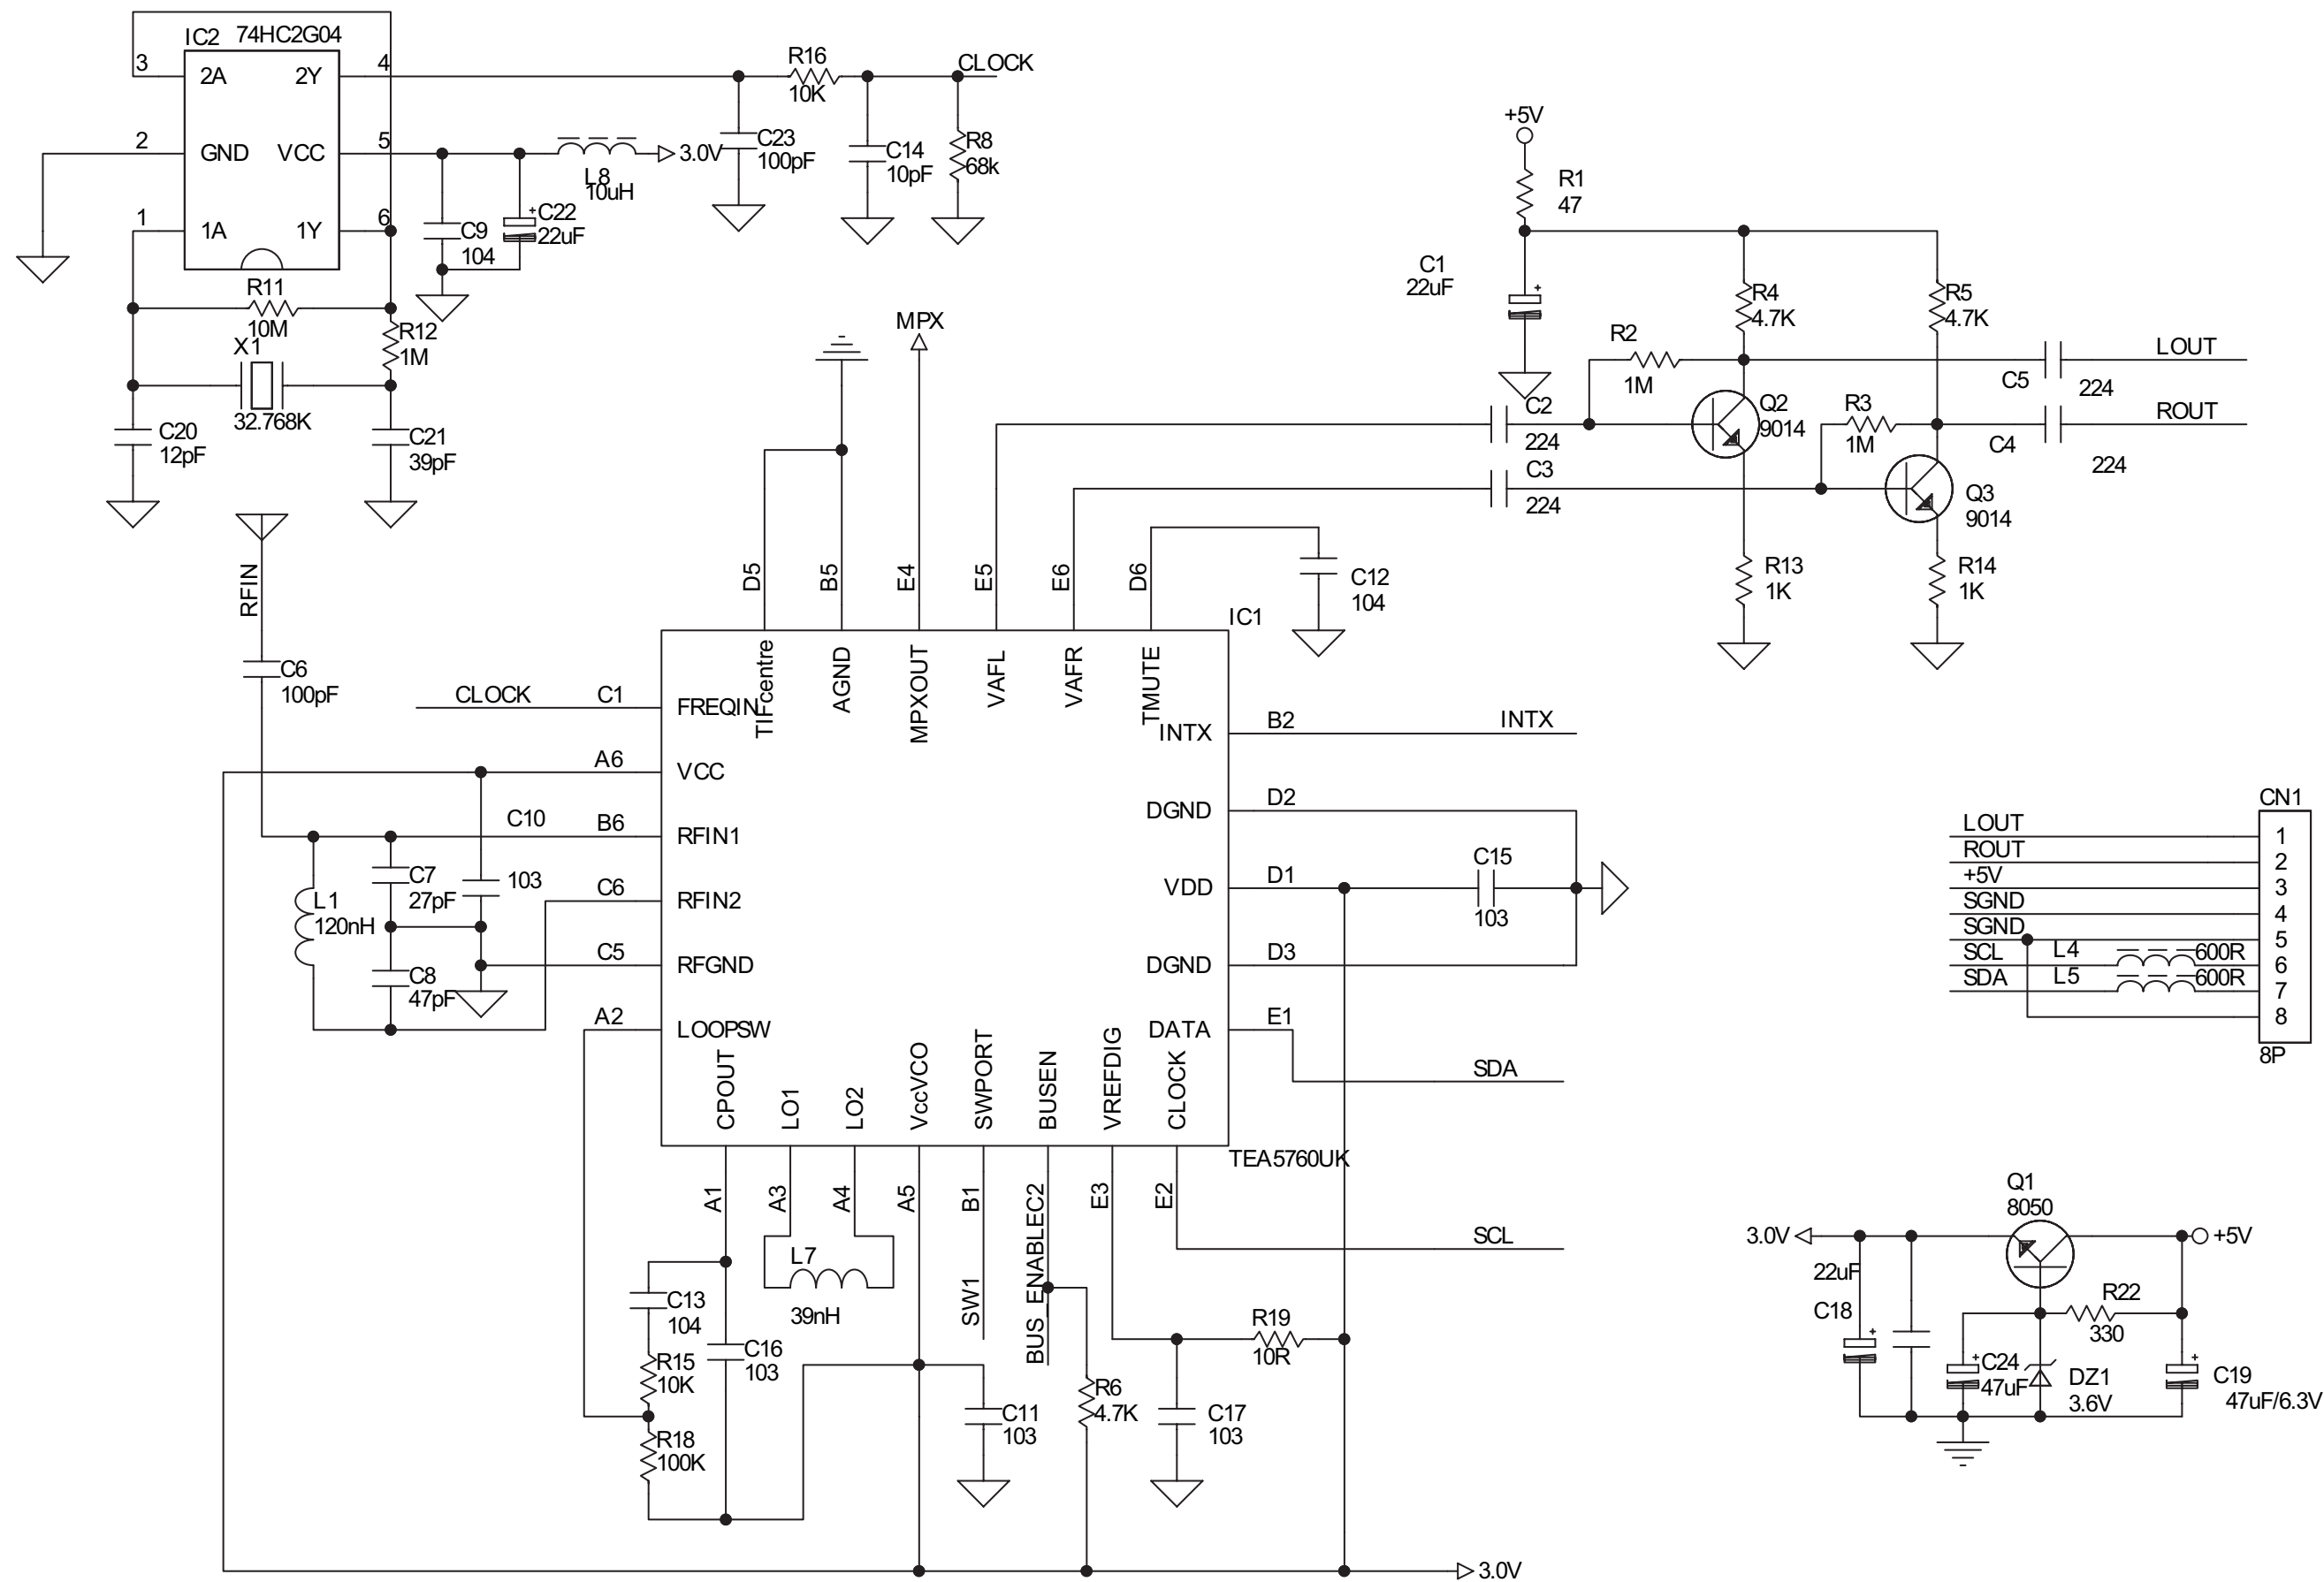



Tuner Board-Layout Diagram

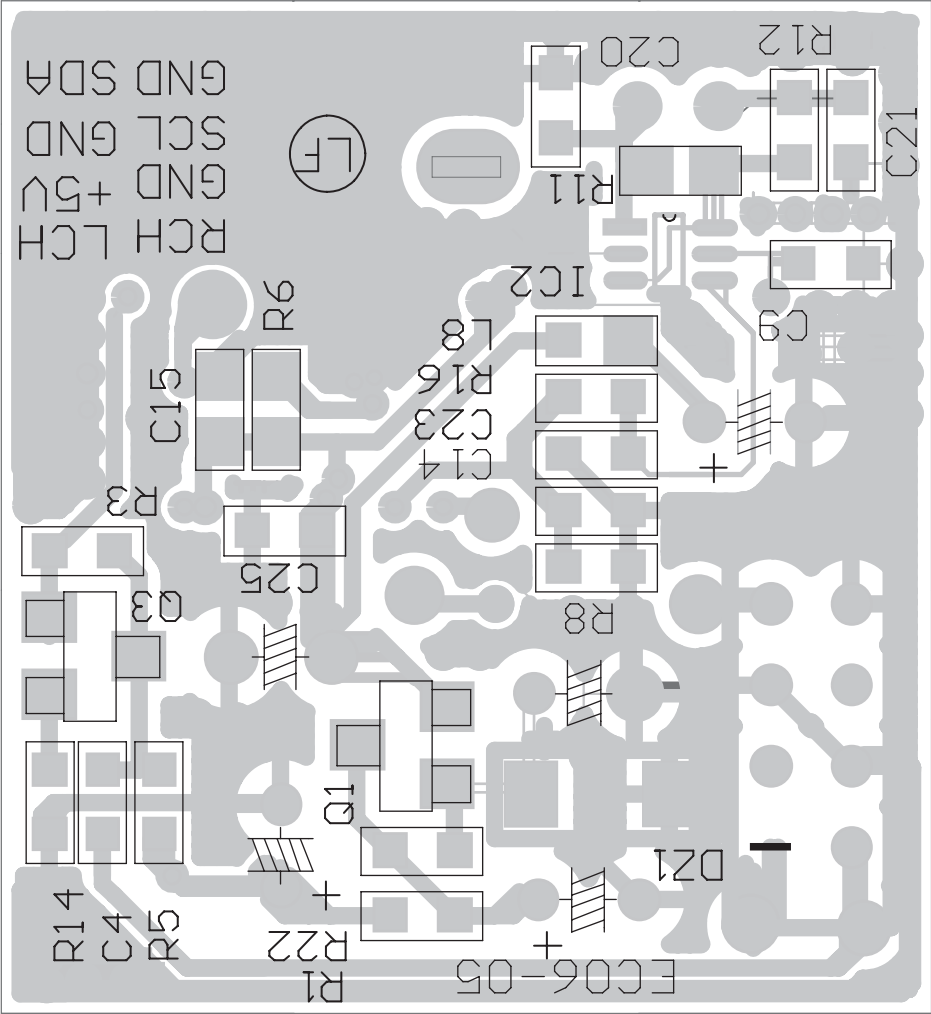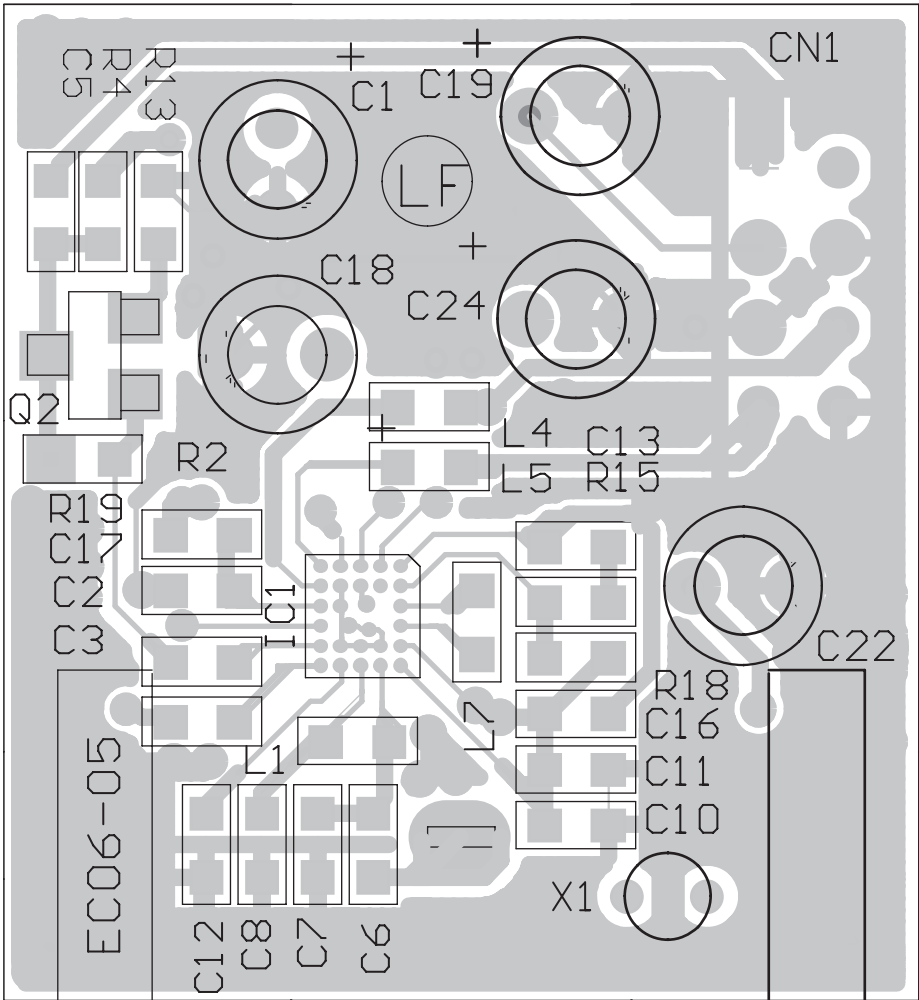

Power Board--Circuit Diagram

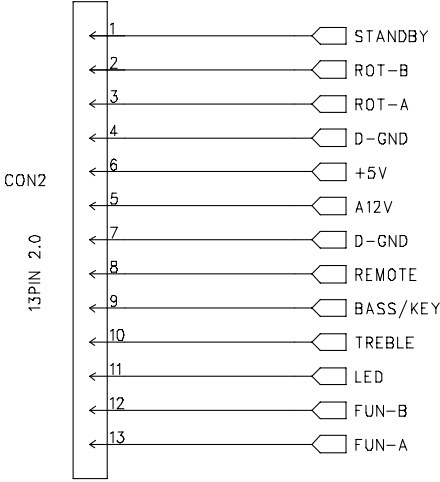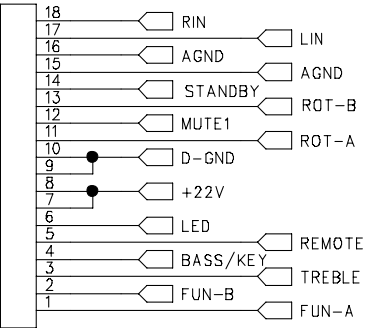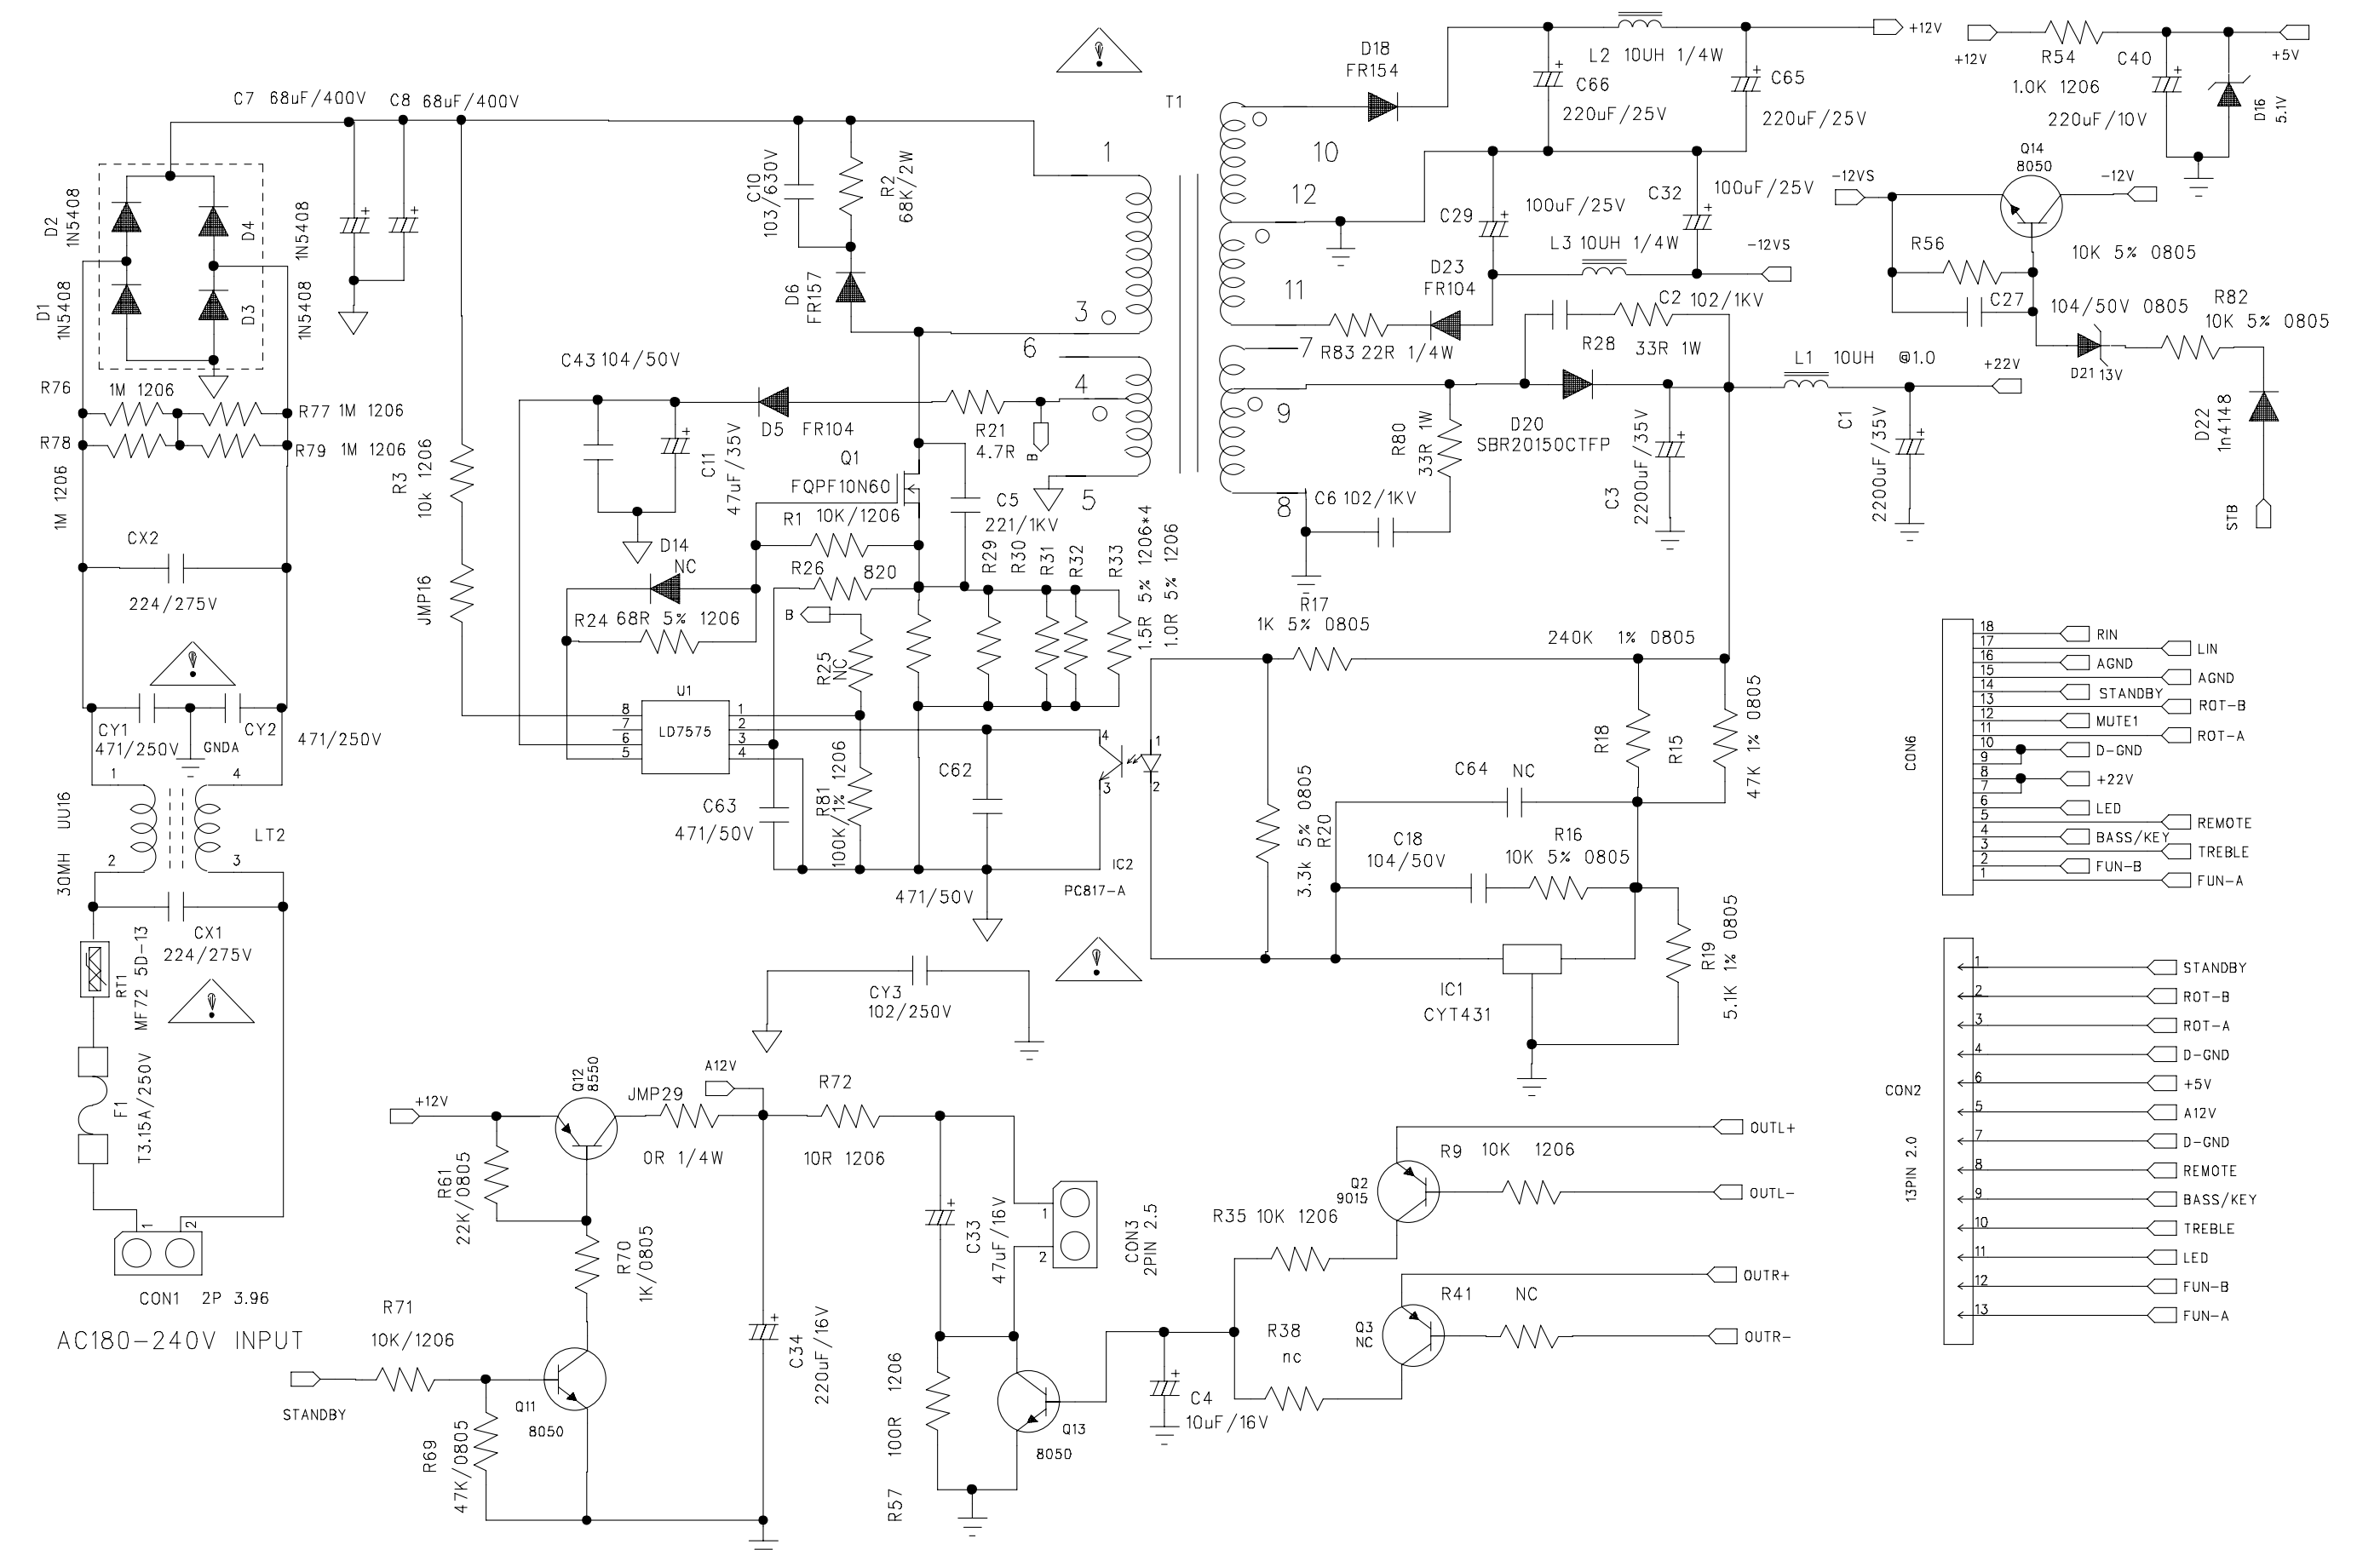

Power Board--Circuit Diagram

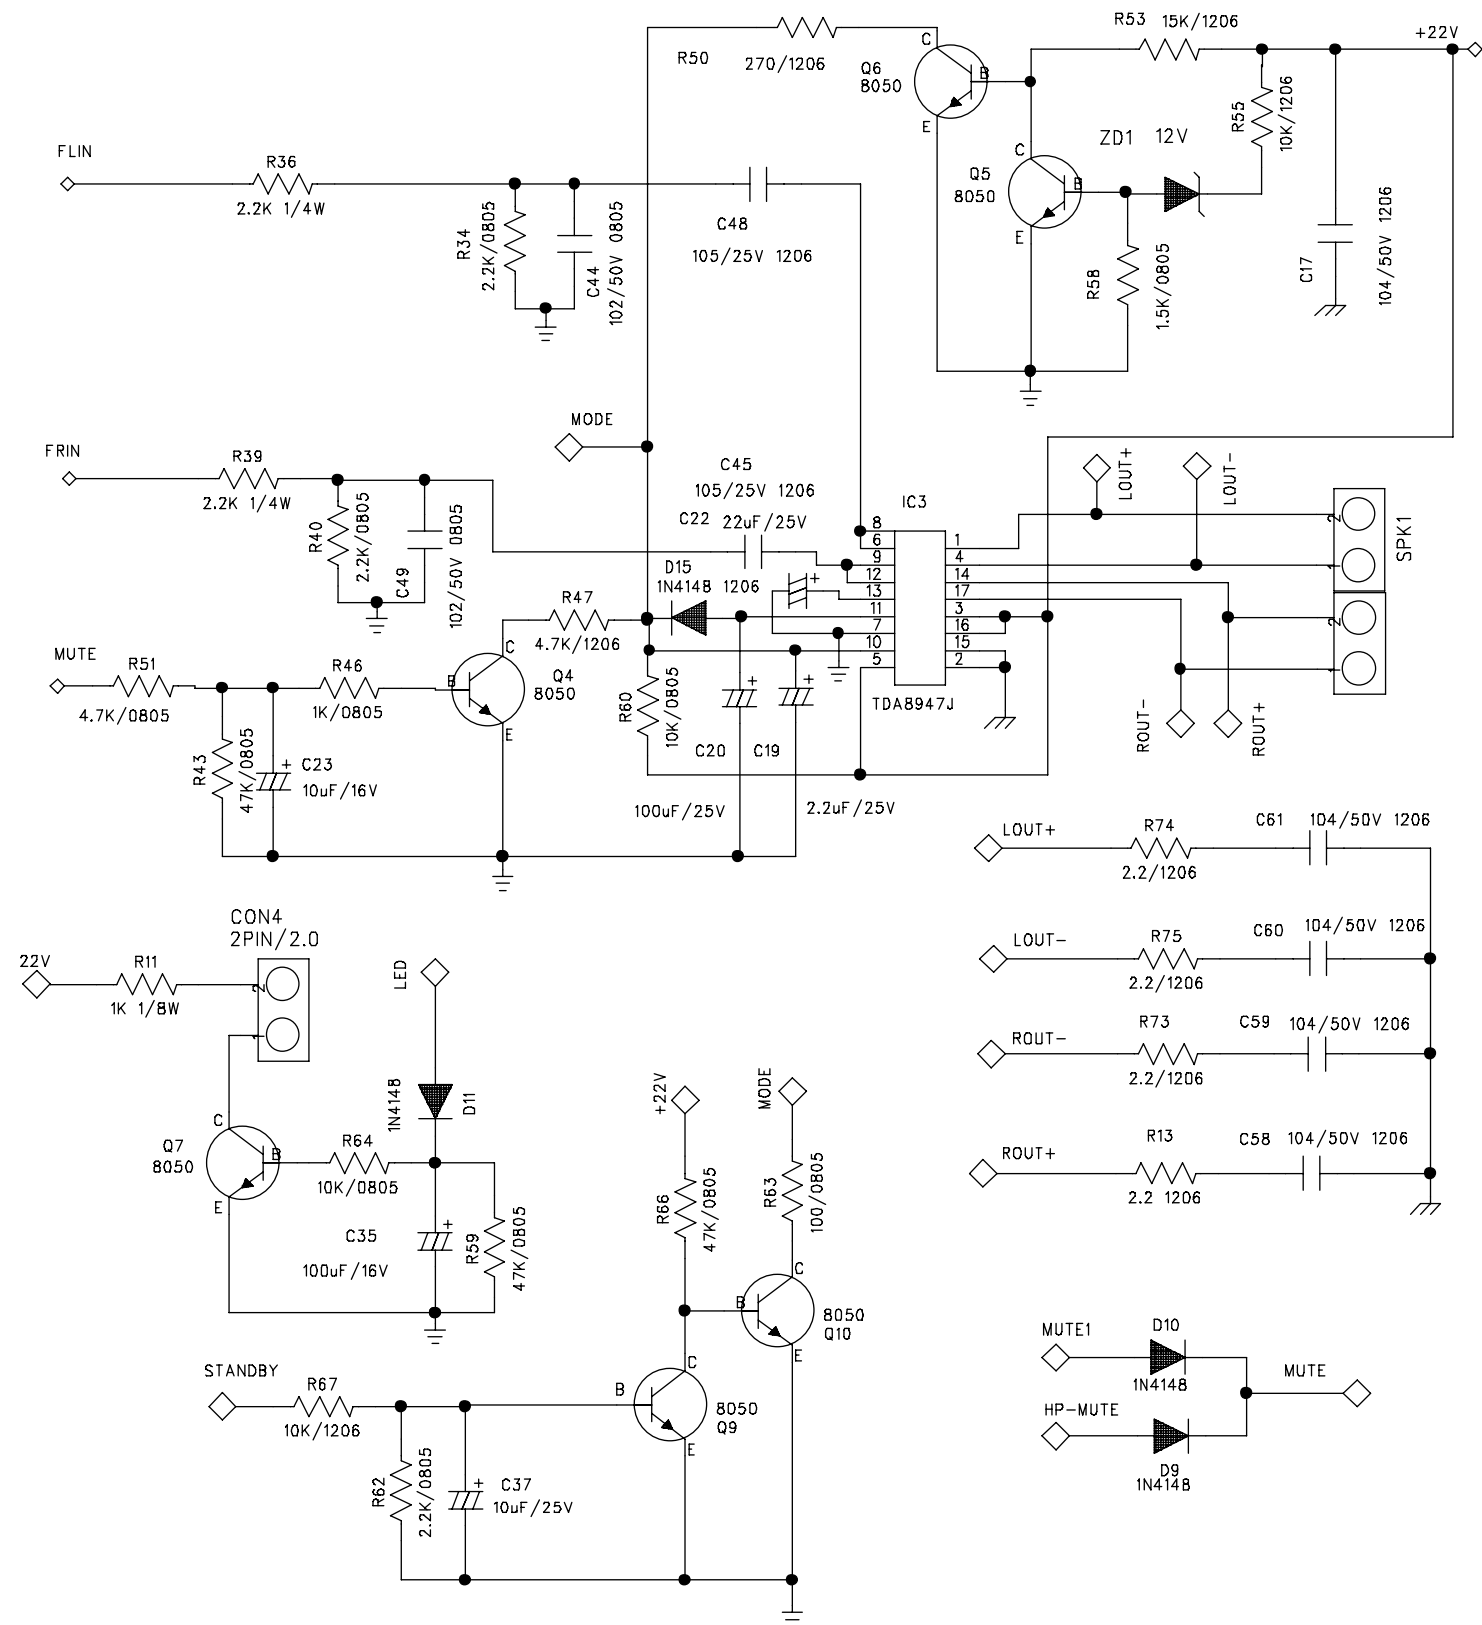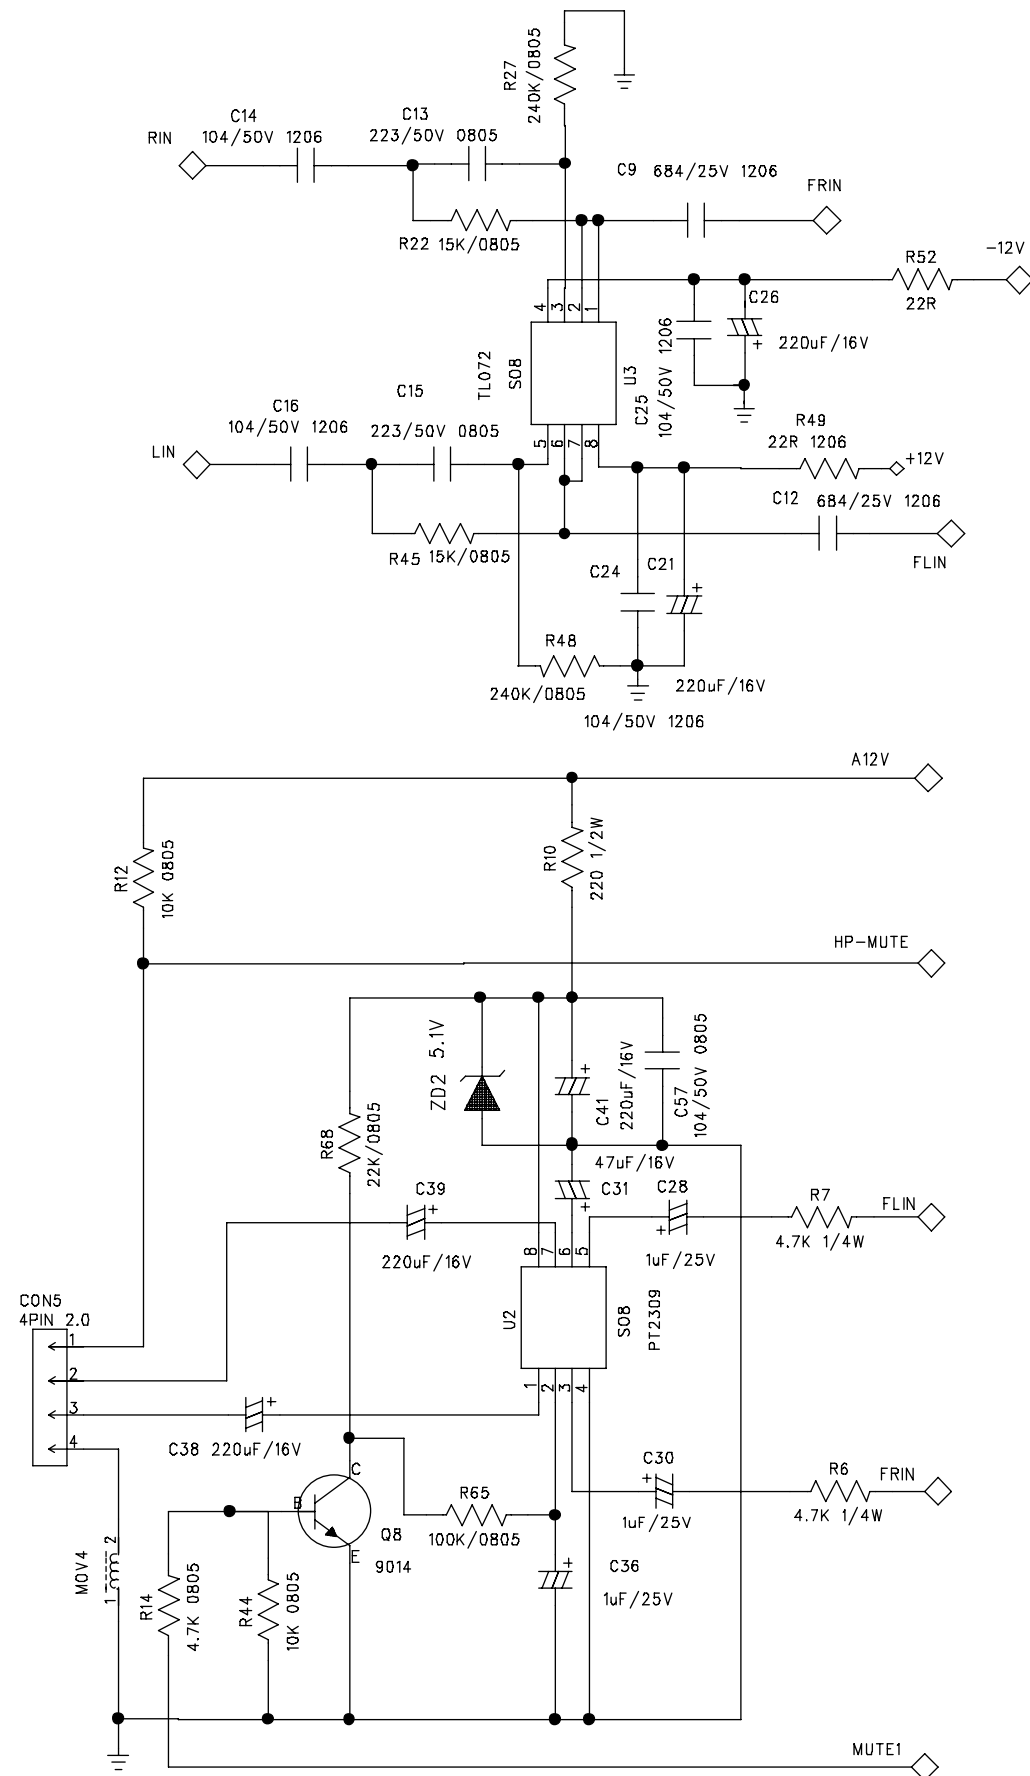

TOP-0W
POW181B
REV:1.1
20080403

WARNING:
REPLACE ONLY WITH SAME
TYPE & RATING OF FUSE
T3.15A/250V

120V:ON
230V:OFF

CON1

CON2

CON3

CON4

CON5

CON6

CON7

CON8

CON9

CON10

CON11

CON12

CON13

CON14

CON15

CON16

CON17

CON18

CON19

CON20

CON21

CON22

CON23

CON24

CON25

CON26

CON27

CON28

CON29

CON30

CON31

CON32

CON33

CON34

CON35

CON36

CON37

CON38

CON39

CON40

CON41

CON42

CON43

CON44

CON45

CON46

CON47

CON48

CON49

CON50

CON51

CON52

CON53

CON54

CON55

CON56

CON57

CON58

CON59

CON60

CON61

CON62

CON63

CON64

CON65

CON66

CON67

CON68

CON69

CON70

CON71

CON72

CON73

CON74

CON75

CON76

CON77

CON78

CON79

CON80

CON81

CON82

CON83

CON84

CON85

CON86

CON87

CON88

CON89

CON90

CON91

CON92

CON93

CON94

CON95

CON96

CON97

CON98

CON99

CON100

CON101

CON102

CON103

CON104

CON105

CON106

CON107

CON108

CON109

CON110

CON111

CON112

CON113

CON114

CON115

CON116

CON117

CON118

CON119

CON120

CON121

CON122

CON123

CON124

CON125

CON126

CON127

CON128

CON129

CON130

CON131

CON132

CON133

CON134

CON135

CON136

CON137

CON138

CON139

CON140

CON141

CON142

CON143

CON144

CON145

CON146

CON147

CON148

CON149

CON150

CON151

CON152

CON153

CON154

CON155

CON156

CON157

CON158

CON159

CON160

CON161

CON162

CON163

CON164

CON165

CON166

CON167

CON168

CON169

CON170

CON171

CON172

CON173

CON174

CON175

CON176

CON177

CON178

CON179

CON180

CON181

CON182

CON183

CON184

CON185

CON186

CON187

CON188

CON189

CON190

CON191

CON192

CON193

CON194

CON195

CON196

CON197

CON198

CON199

CON200

CON201

CON202

CON203

CON204

CON205

CON206

CON207

CON208

CON209

CON210

CON211

CON212

CON213

CON214

CON215

CON216

CON217

CON218

CON219

CON220

CON221

CON222

CON223

CON224

CON225

CON226

CON227

CON228

CON229

CON230

CON231

CON232

CON233

CON234

CON235

CON236

CON237

CON238

CON239

CON240

CON241

CON242

CON243

CON244

CON245

CON246

CON247

CON248

CON249

CON250

CON251

CON252

CON253

CON254

CON255

CON256

CON257

CON258

CON259

CON260

CON261

CON262

CON263

CON264

CON265

CON266

CON267

CON268

CON269

CON270

CON271

CON272

CON273

CON274

CON275

CON276

CON277

CON278

CON279

CON280

CON281

CON282

CON283

CON284

CON285

CON286

CON287

CON288

CON289

CON290

CON291

CON292

CON293

CON294

CON295

CON296

CON297

CON298

CON299

CON300

CON301

CON302

CON303

CON304

CON305

CON306

CON307

CON308

CON309

CON310

CON311

CON312

CON313

CON314

CON315

CON316

CON317

CON318

CON319

CON320

CON321

CON322

CON323

CON324

CON325

CON326

CON327

CON328

CON329

CON330

CON331

CON332

CON333

CON334

CON335

CON336

CON337

CON338

CON339

CON340

CON341

CON342

CON343

CON344

CON345

CON346

CON347

CON348

CON349

CON350

CON351

CON352

CON353

CON354

CON355

CON356

CON357

CON358

CON359

CON360

CON361

CON362

CON363

CON364

CON365

CON366

CON367

CON368

CON369

CON370

CON371

CON372

CON373

CON374

CON375

CON376

CON377

CON378

CON379

CON380

CON381

CON382

CON383

CON384

CON385

CON386

CON387

CON388

CON389

CON390

CON391

CON392

CON393

CON394


CON395

CON396


CON397

CON398


Decoder Board--Circuit Diagram

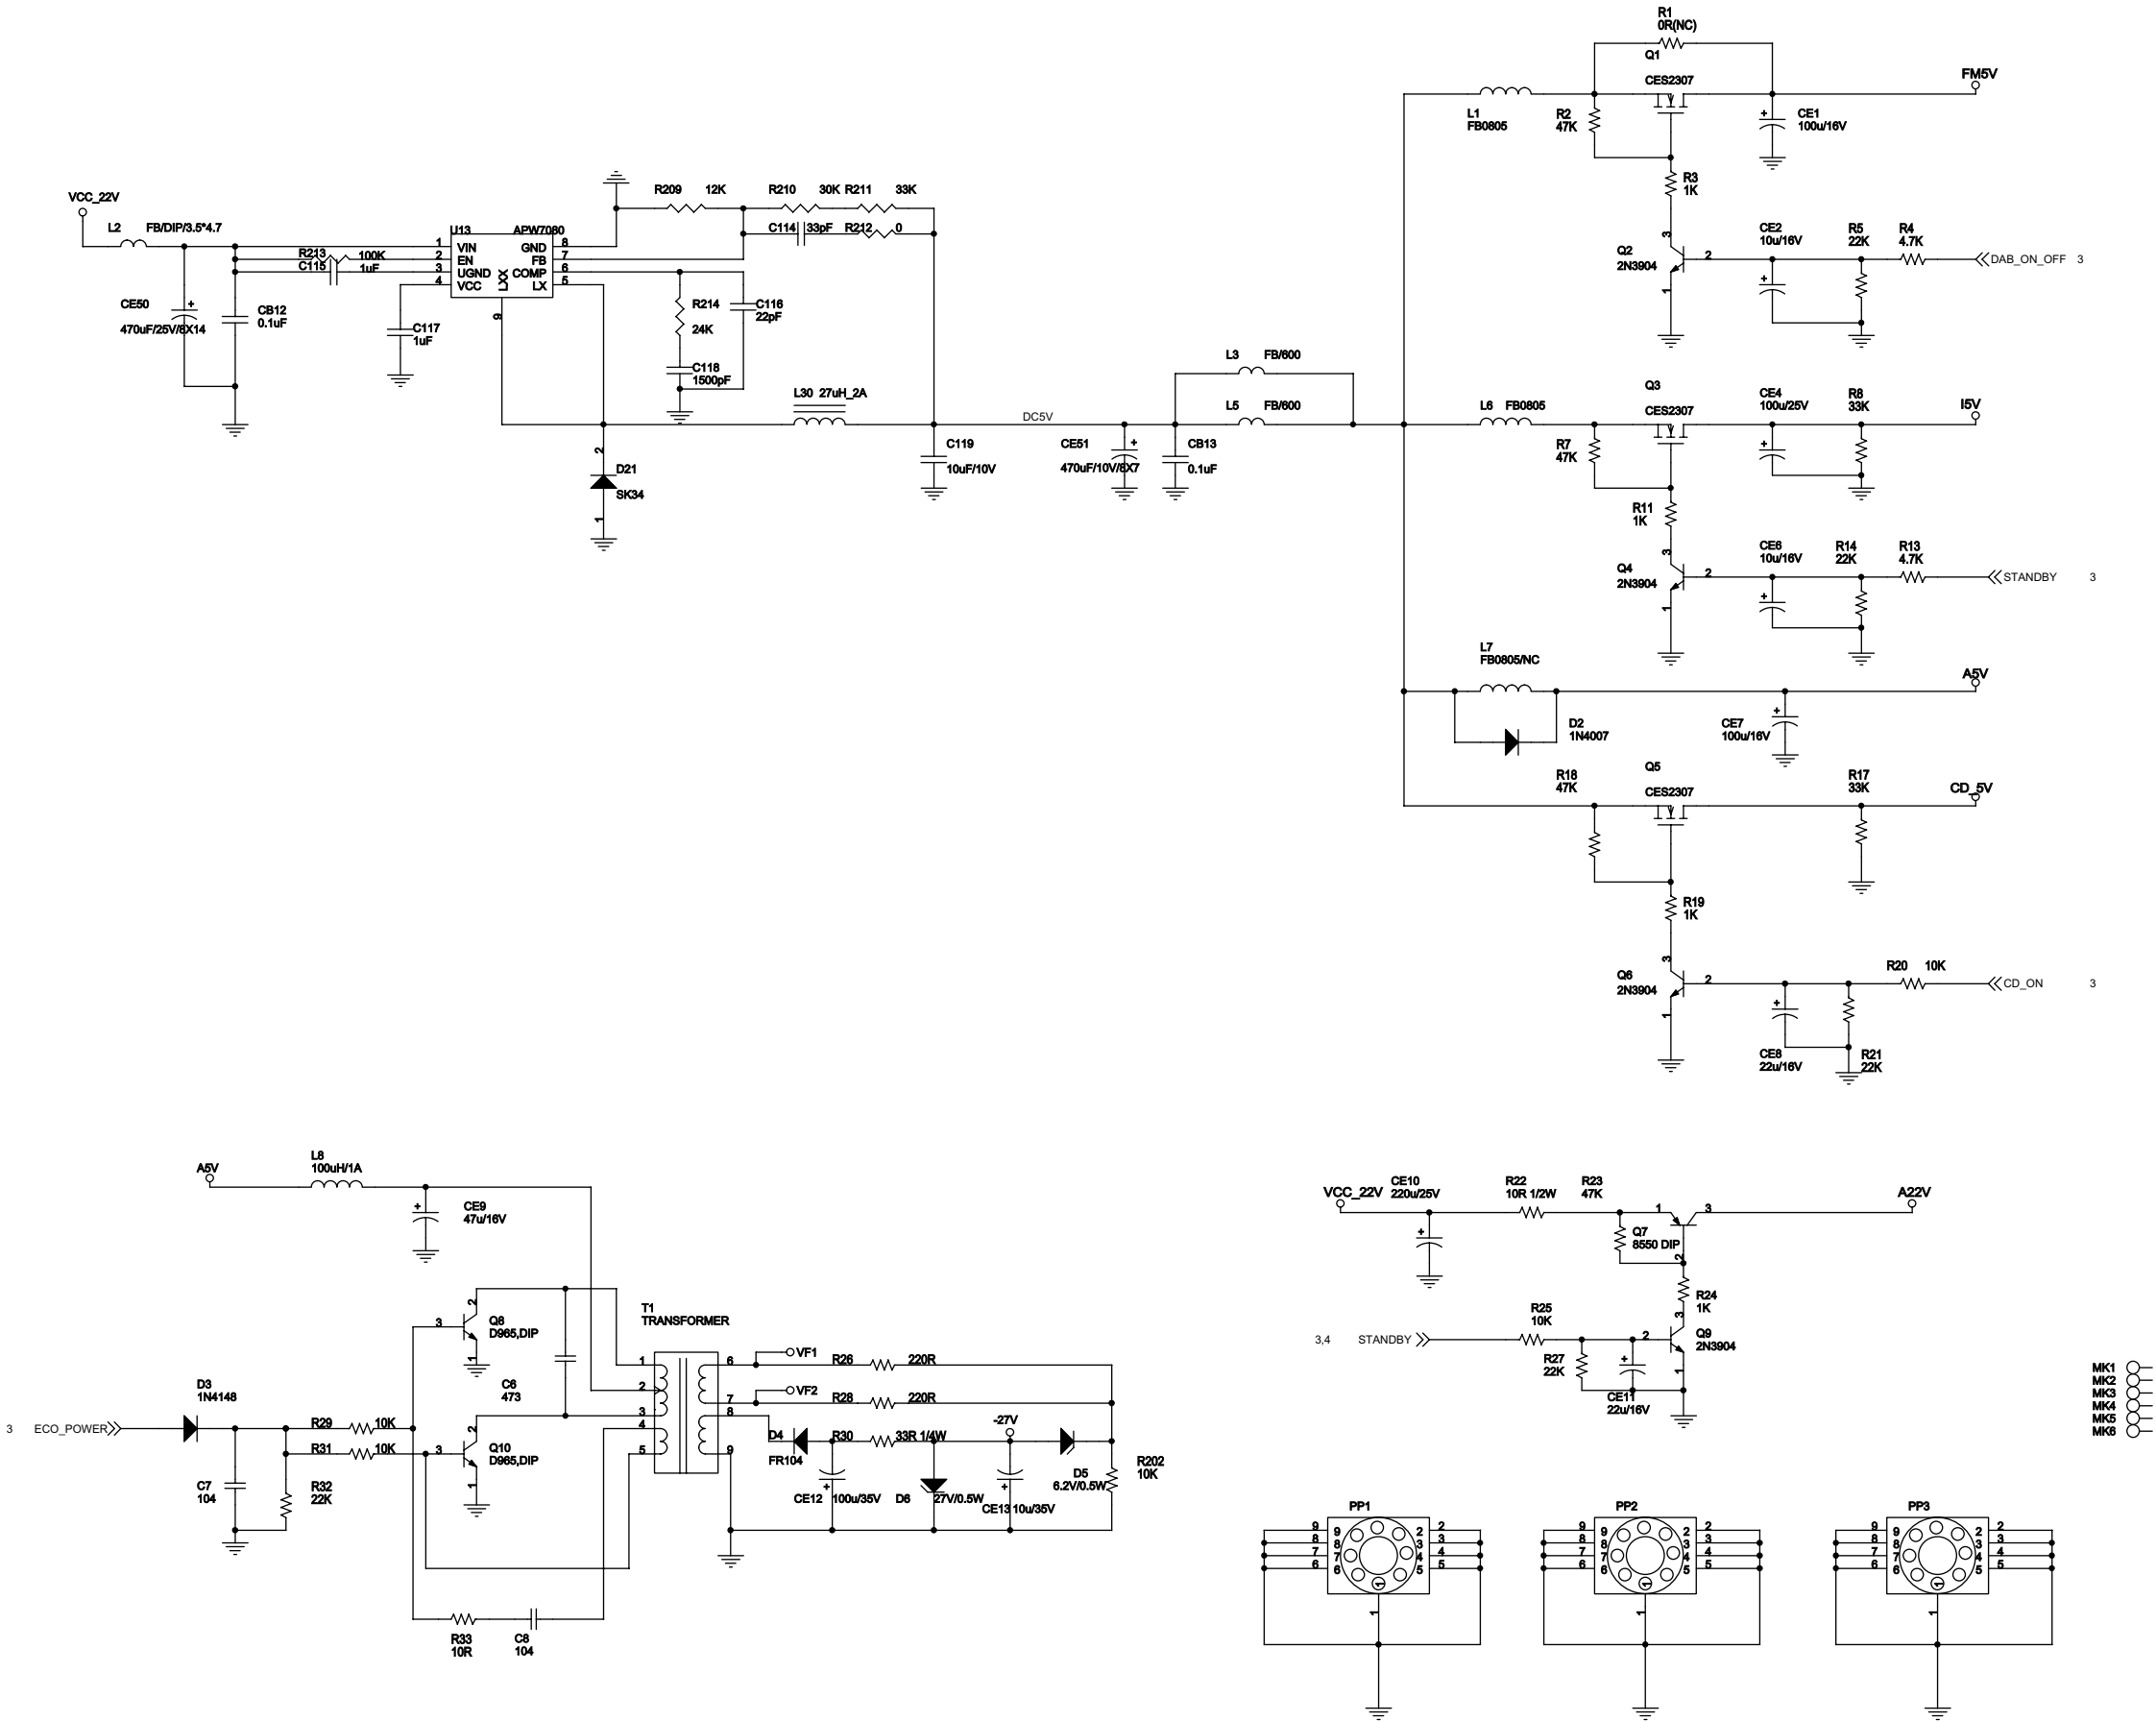






Decoder Board--Circuit Diagram

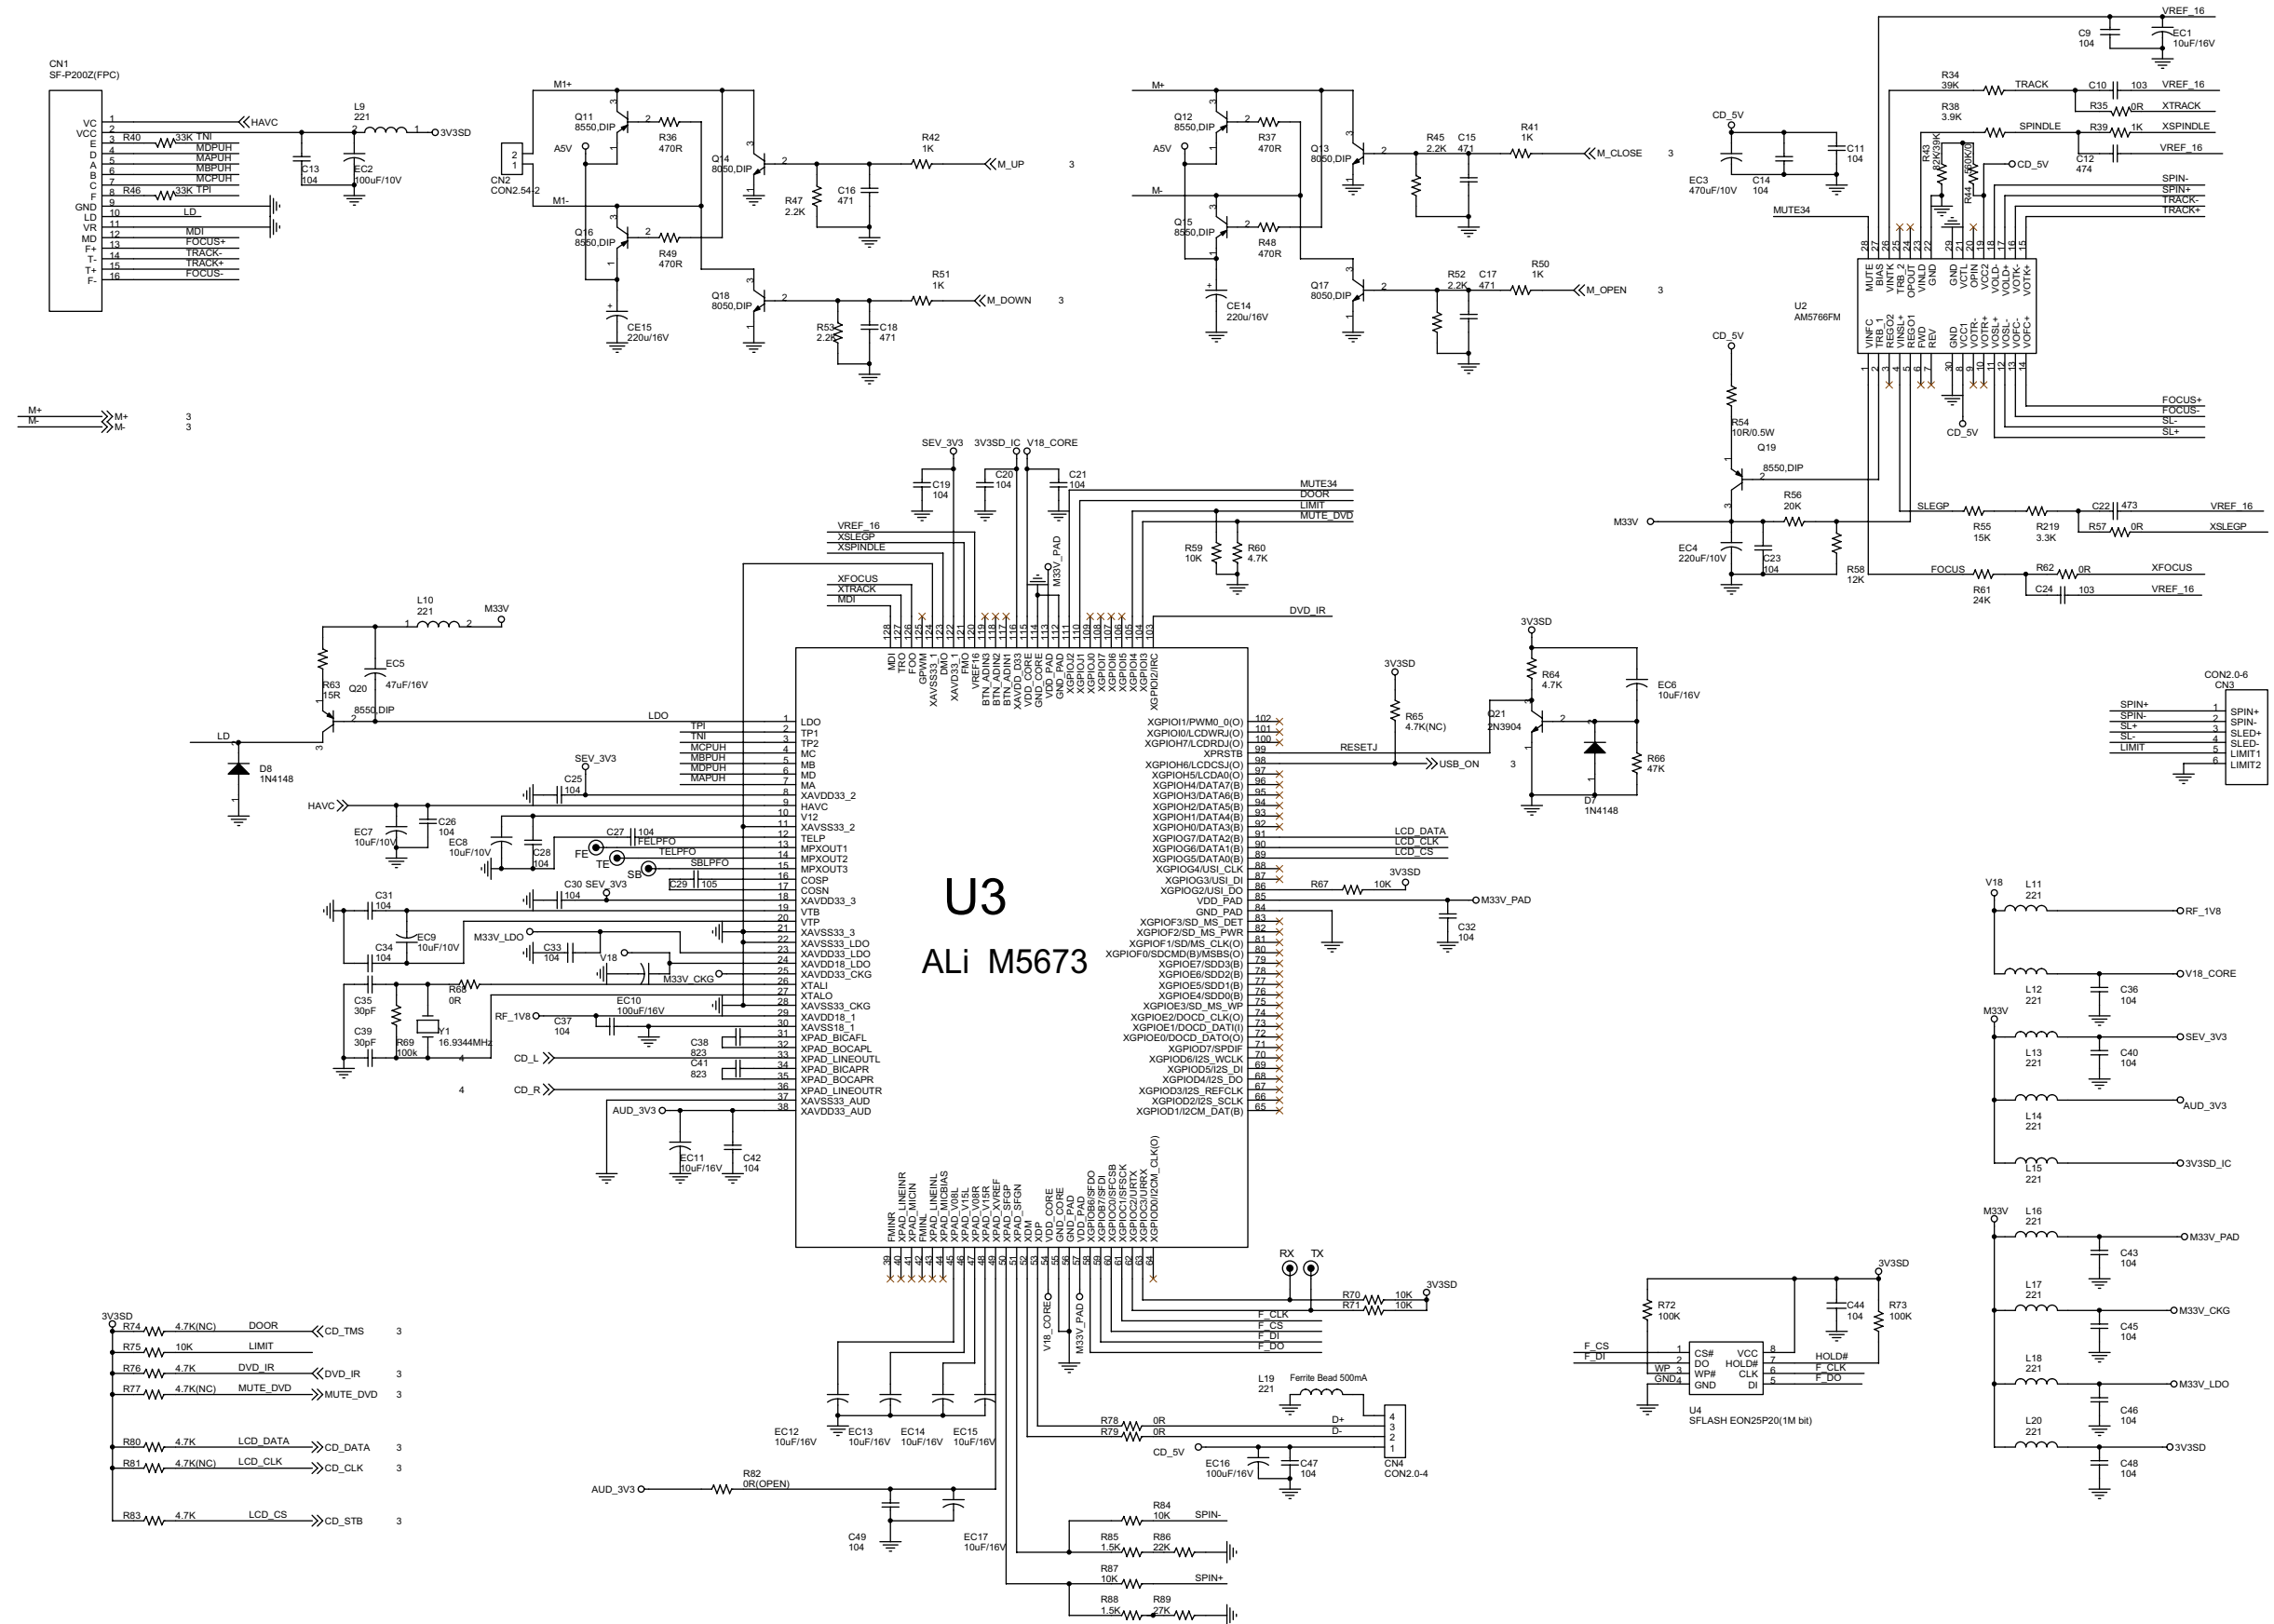


Decoder Board--Circuit Diagram

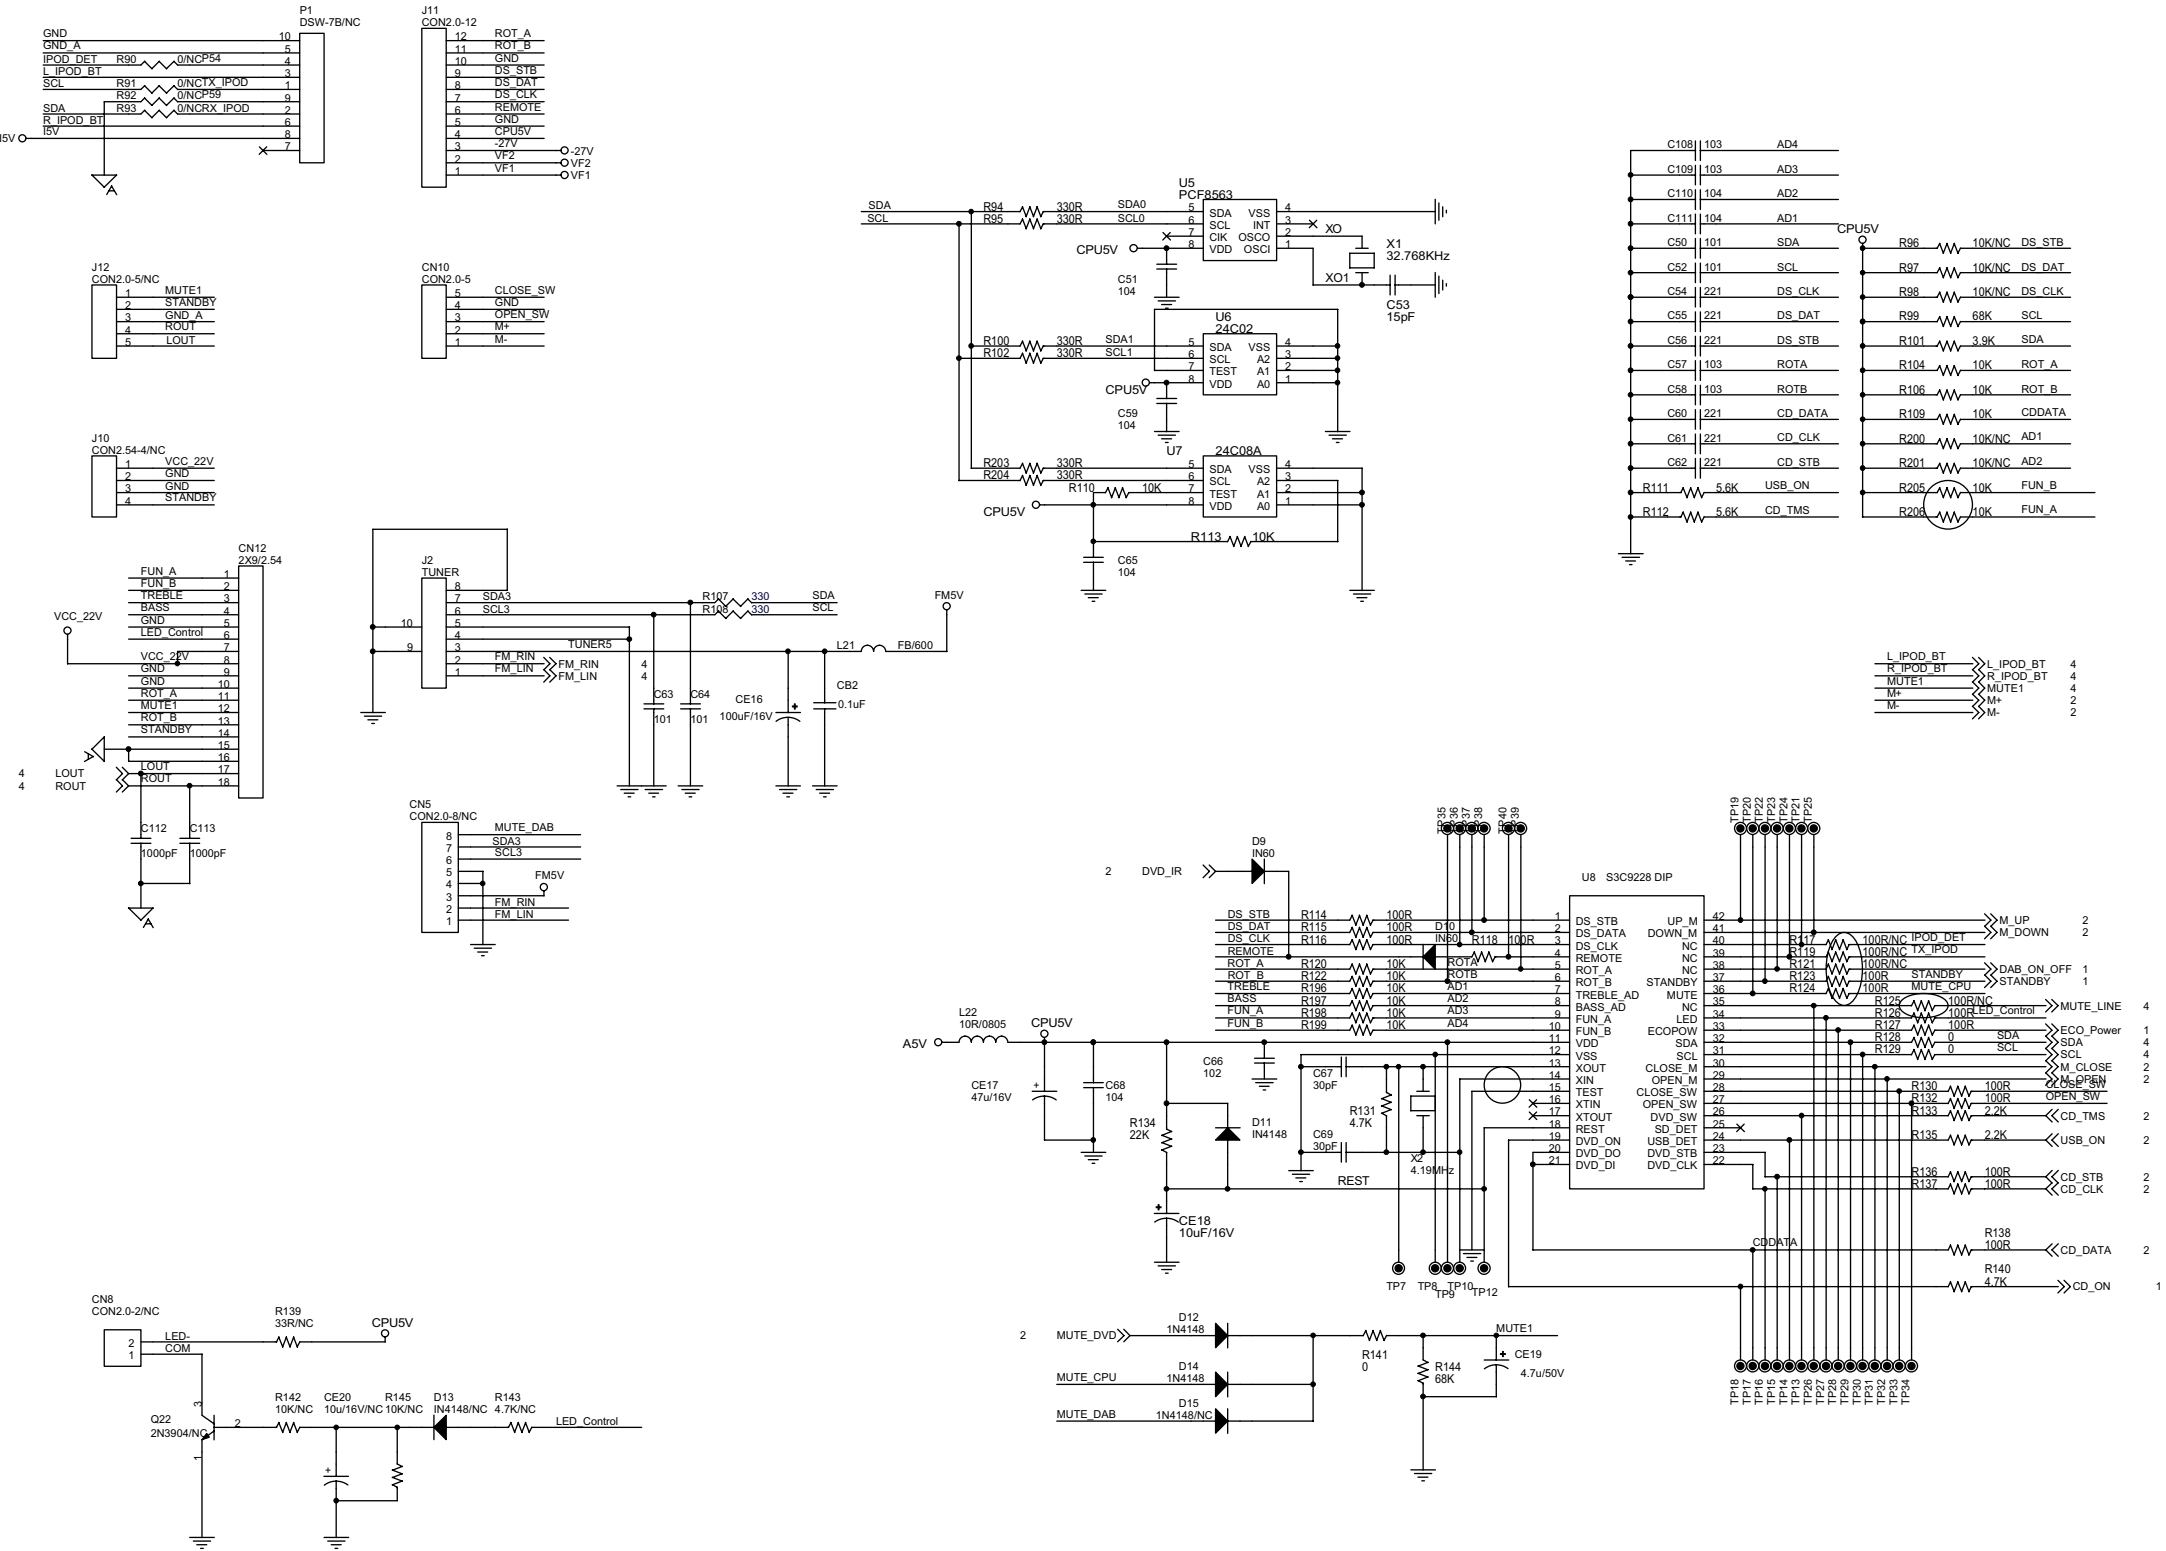


Decoder Board--Circuit Diagram

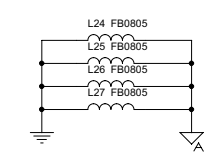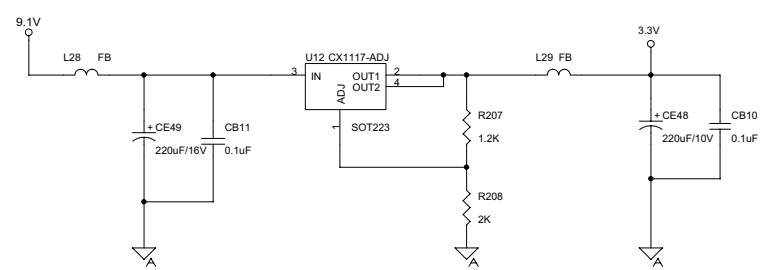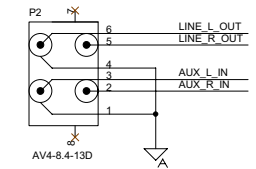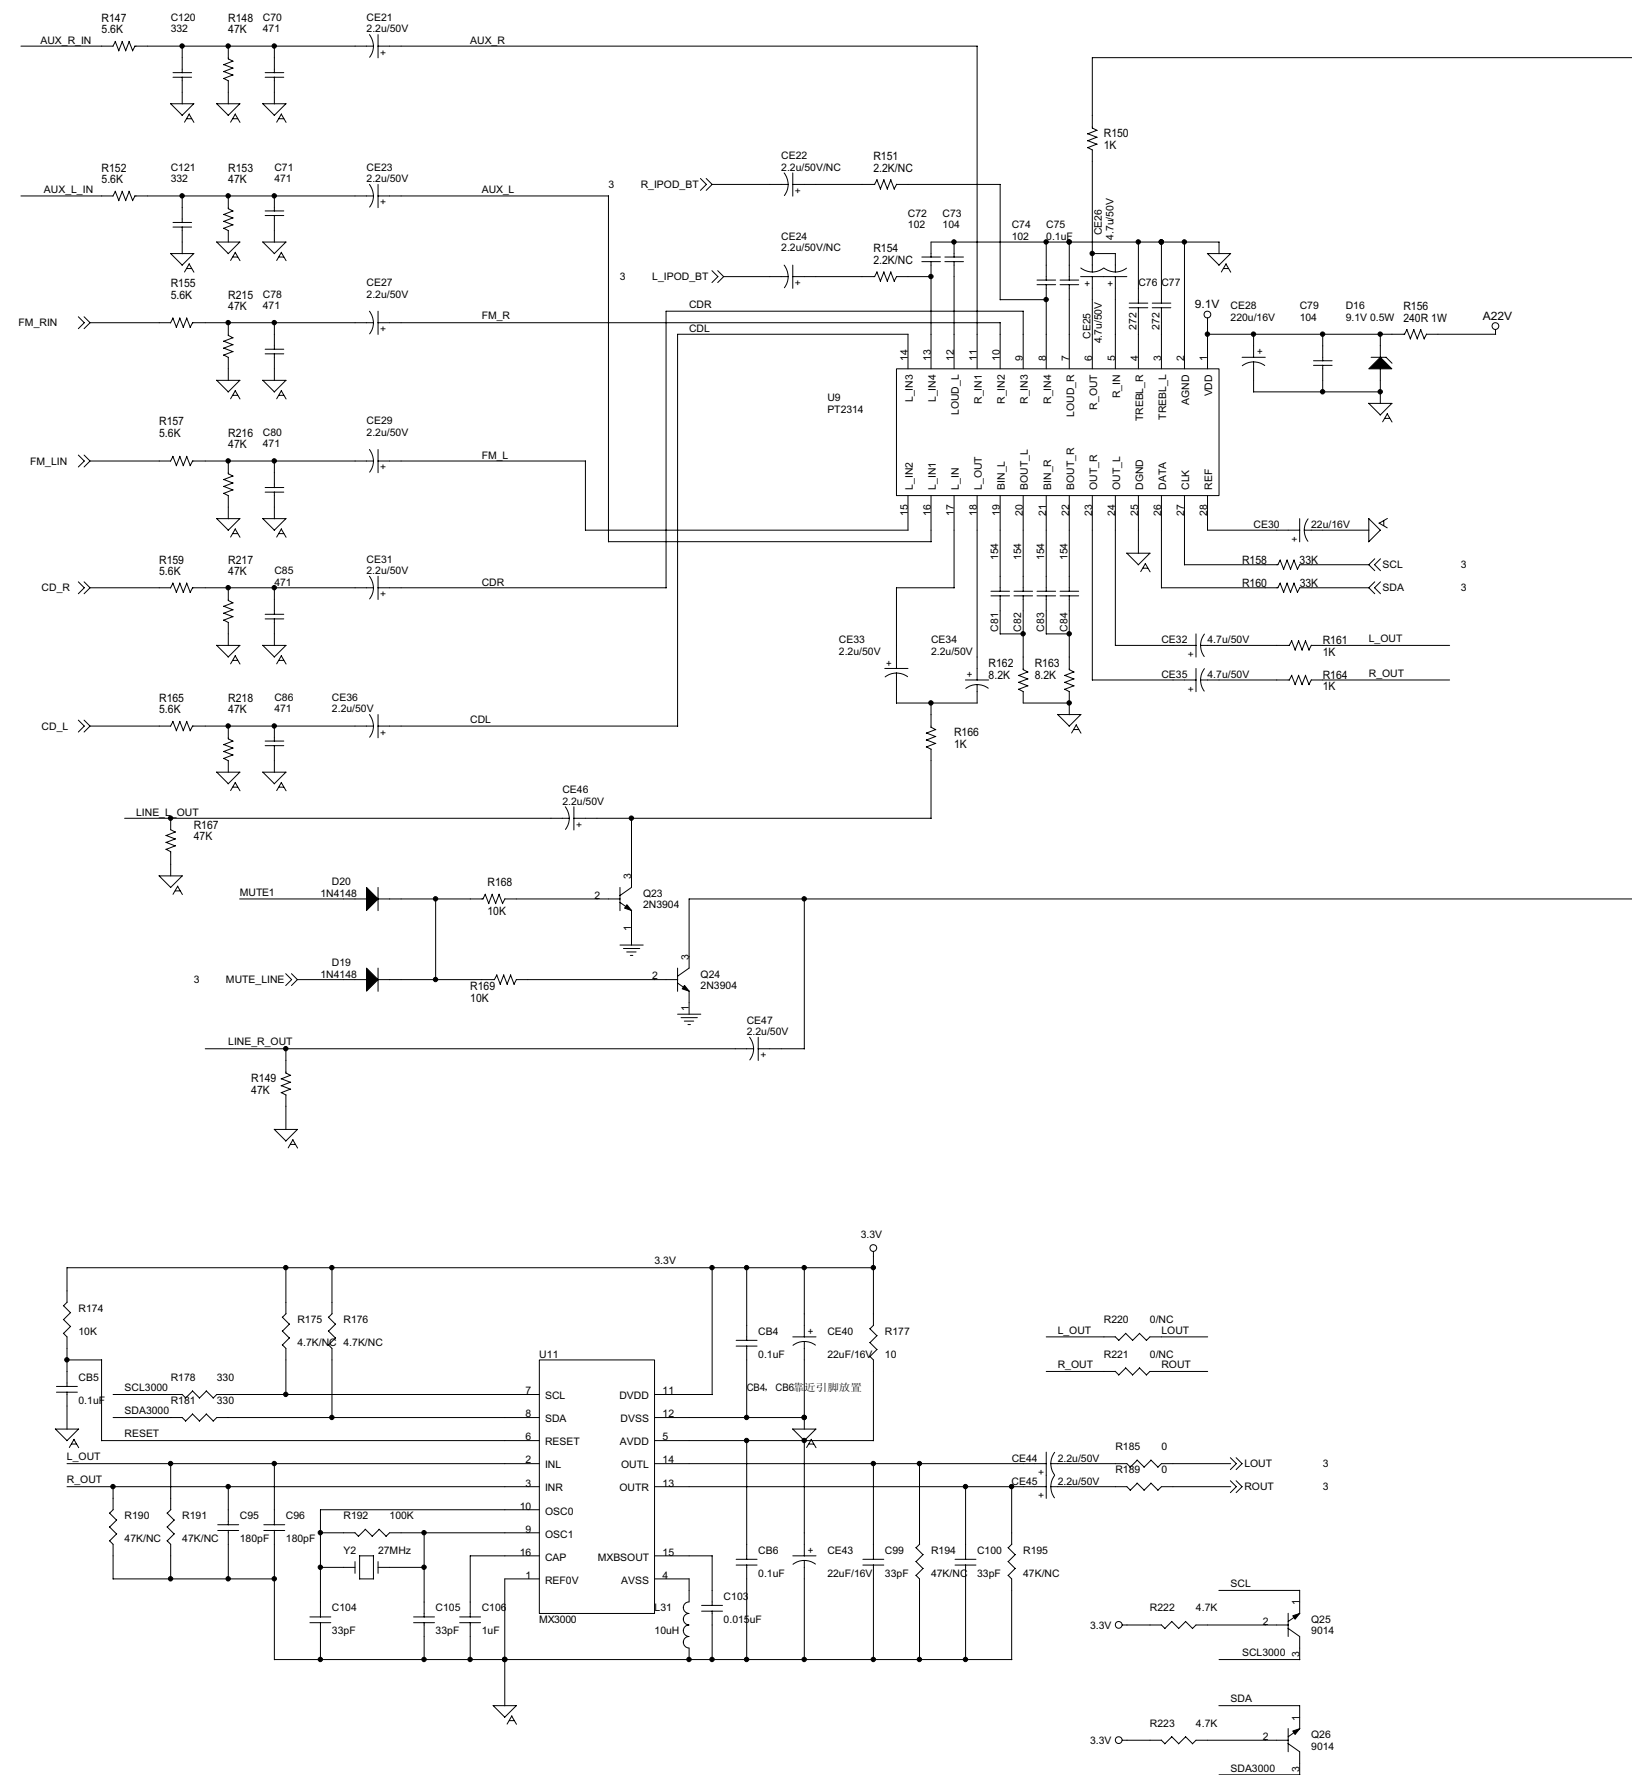


Decoder Board--Layout Diagram

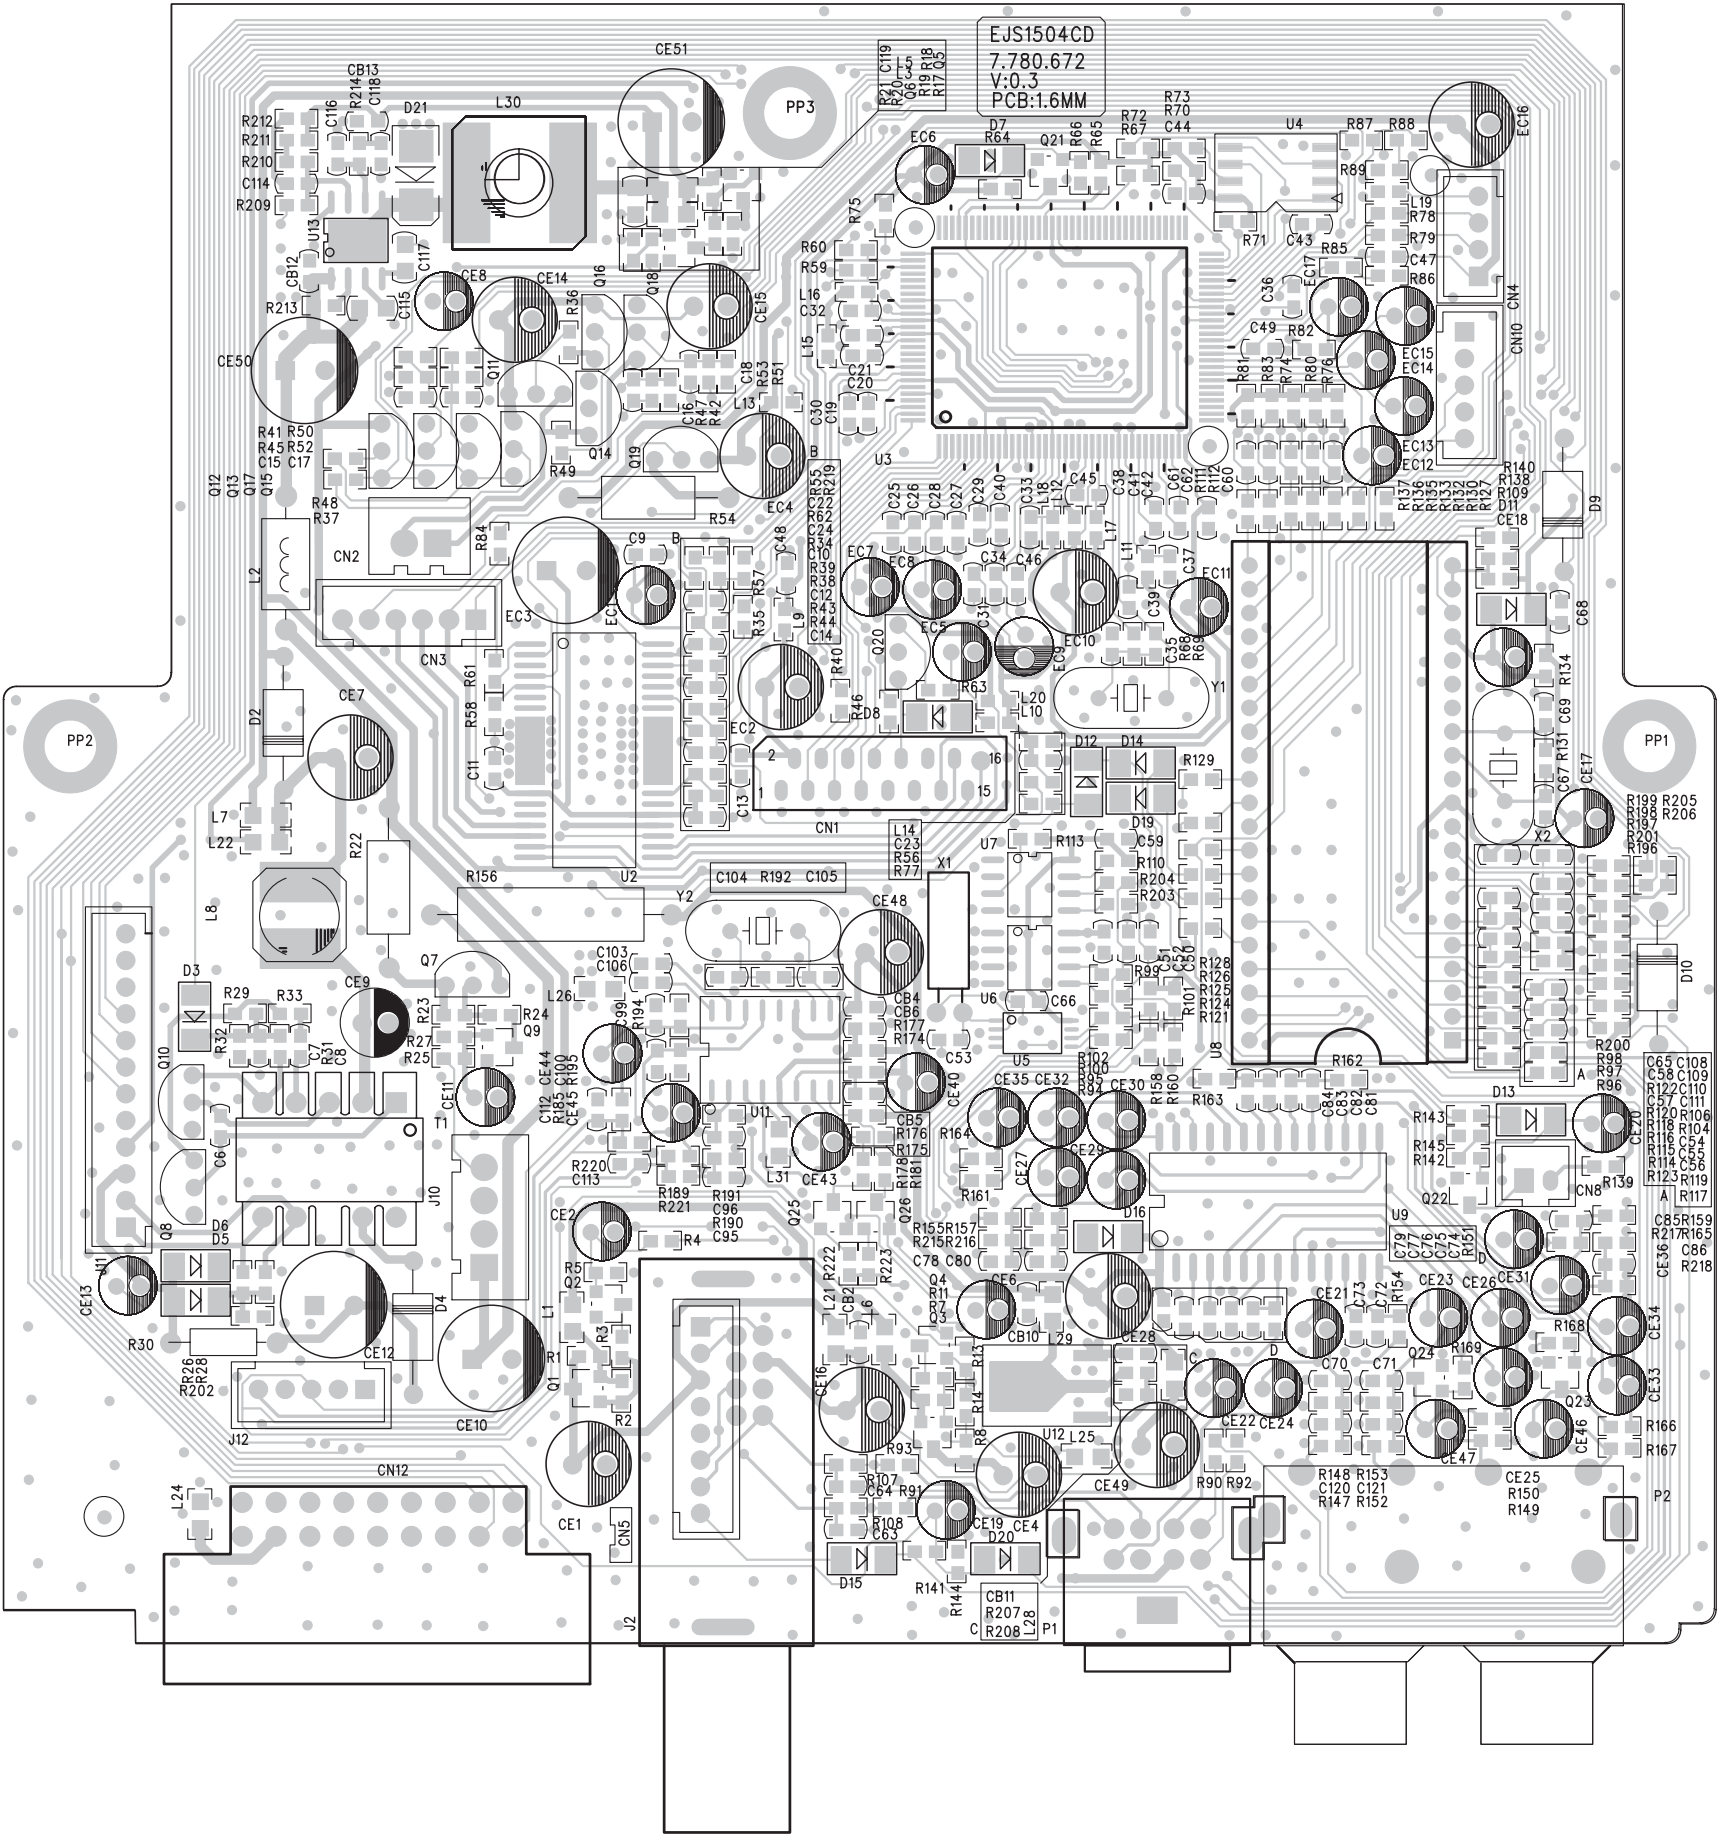


Decoder Board--Layout Diagram(Bottom)

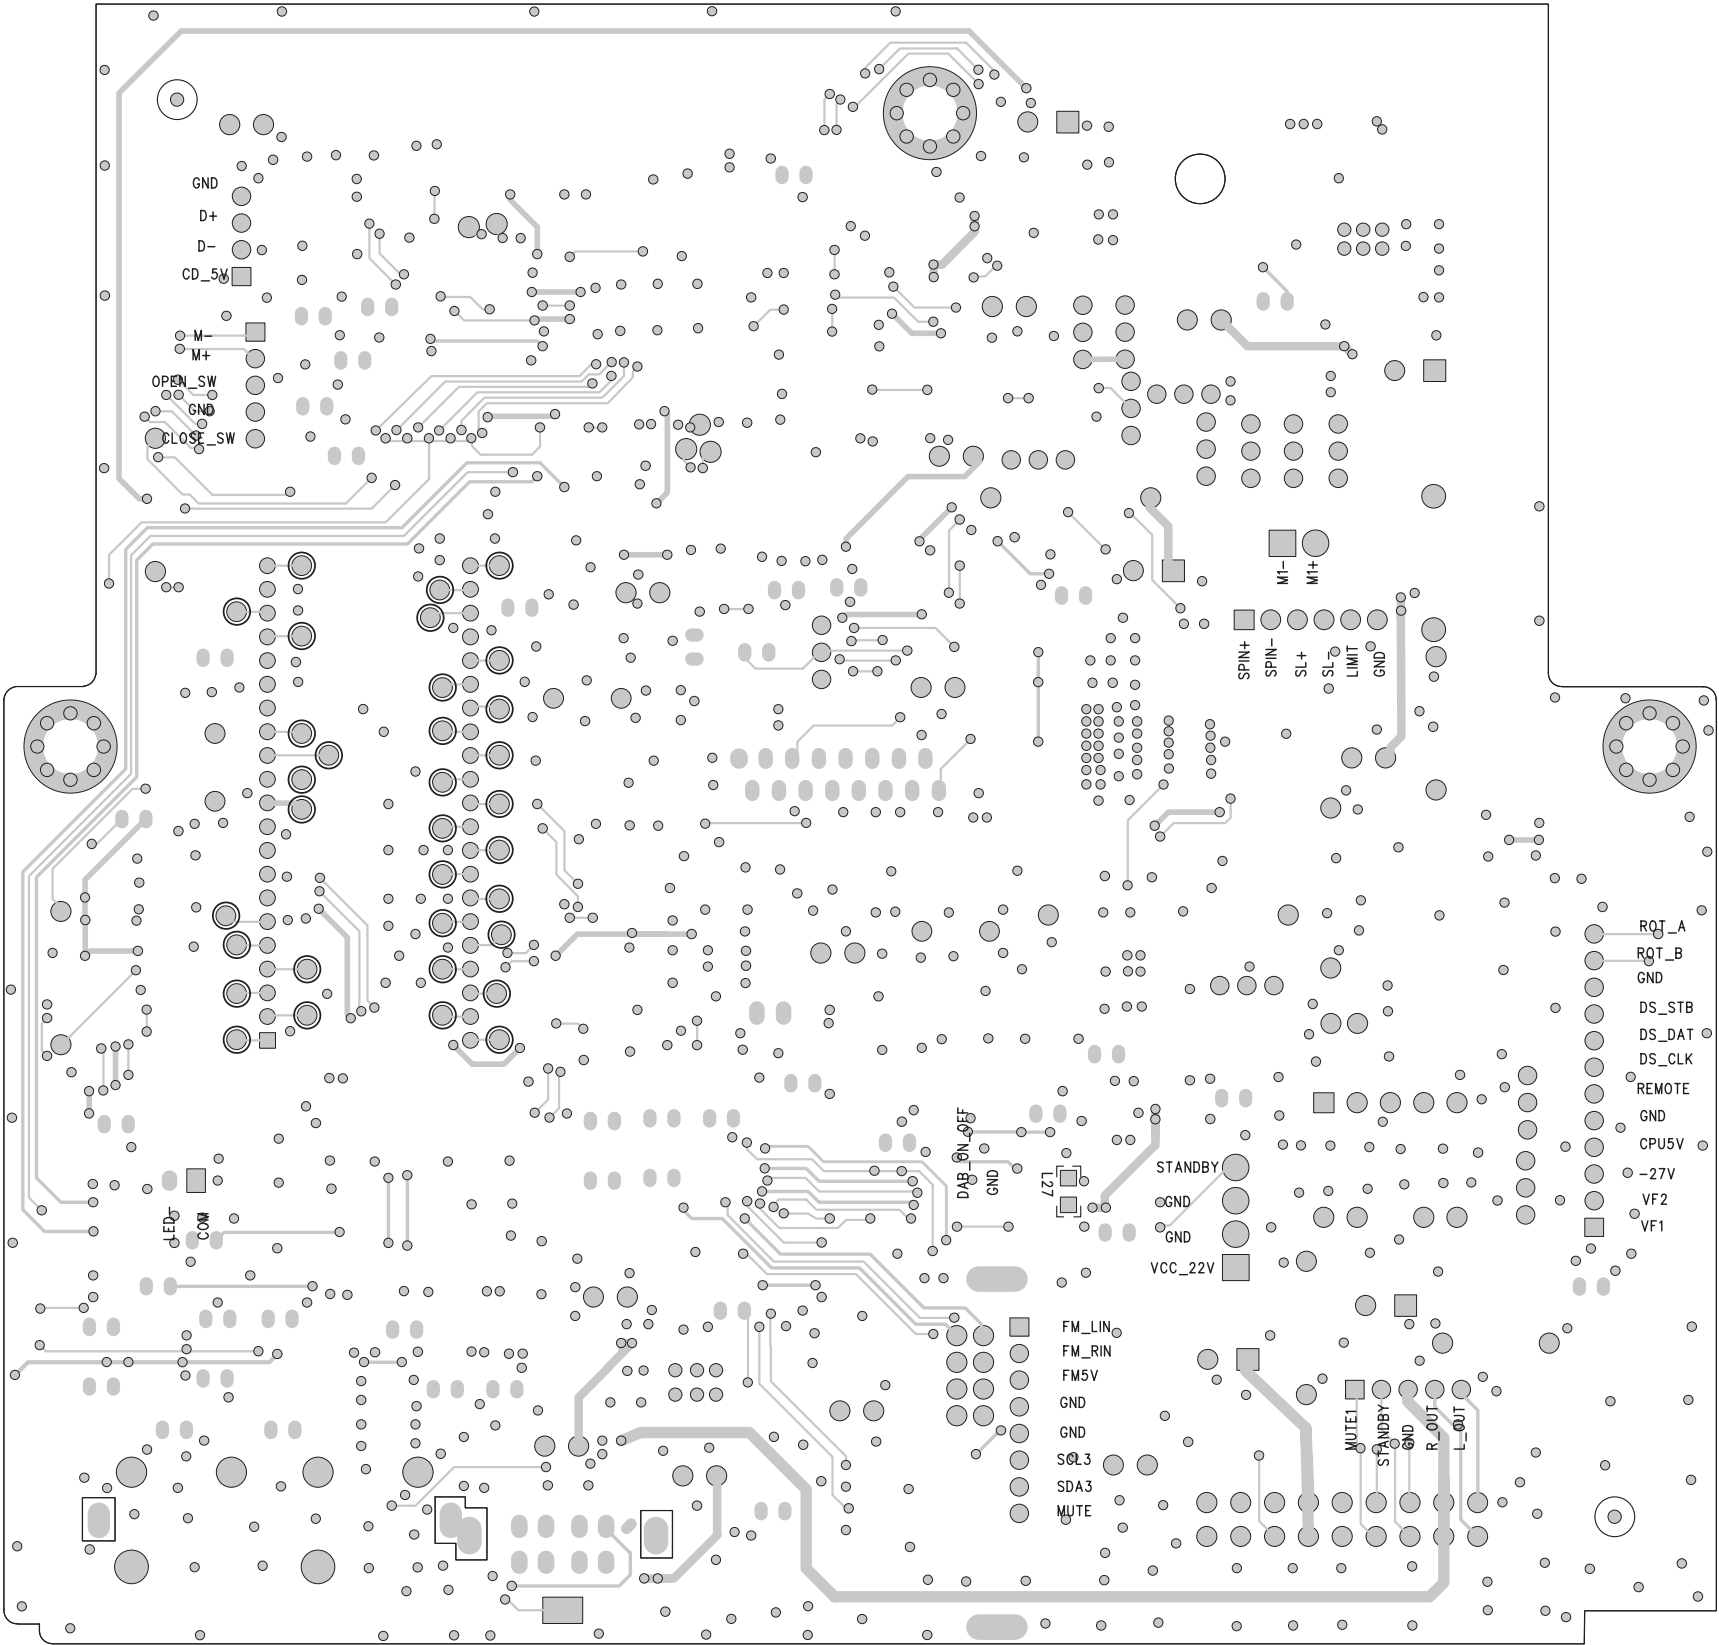

Explode View-CD Part

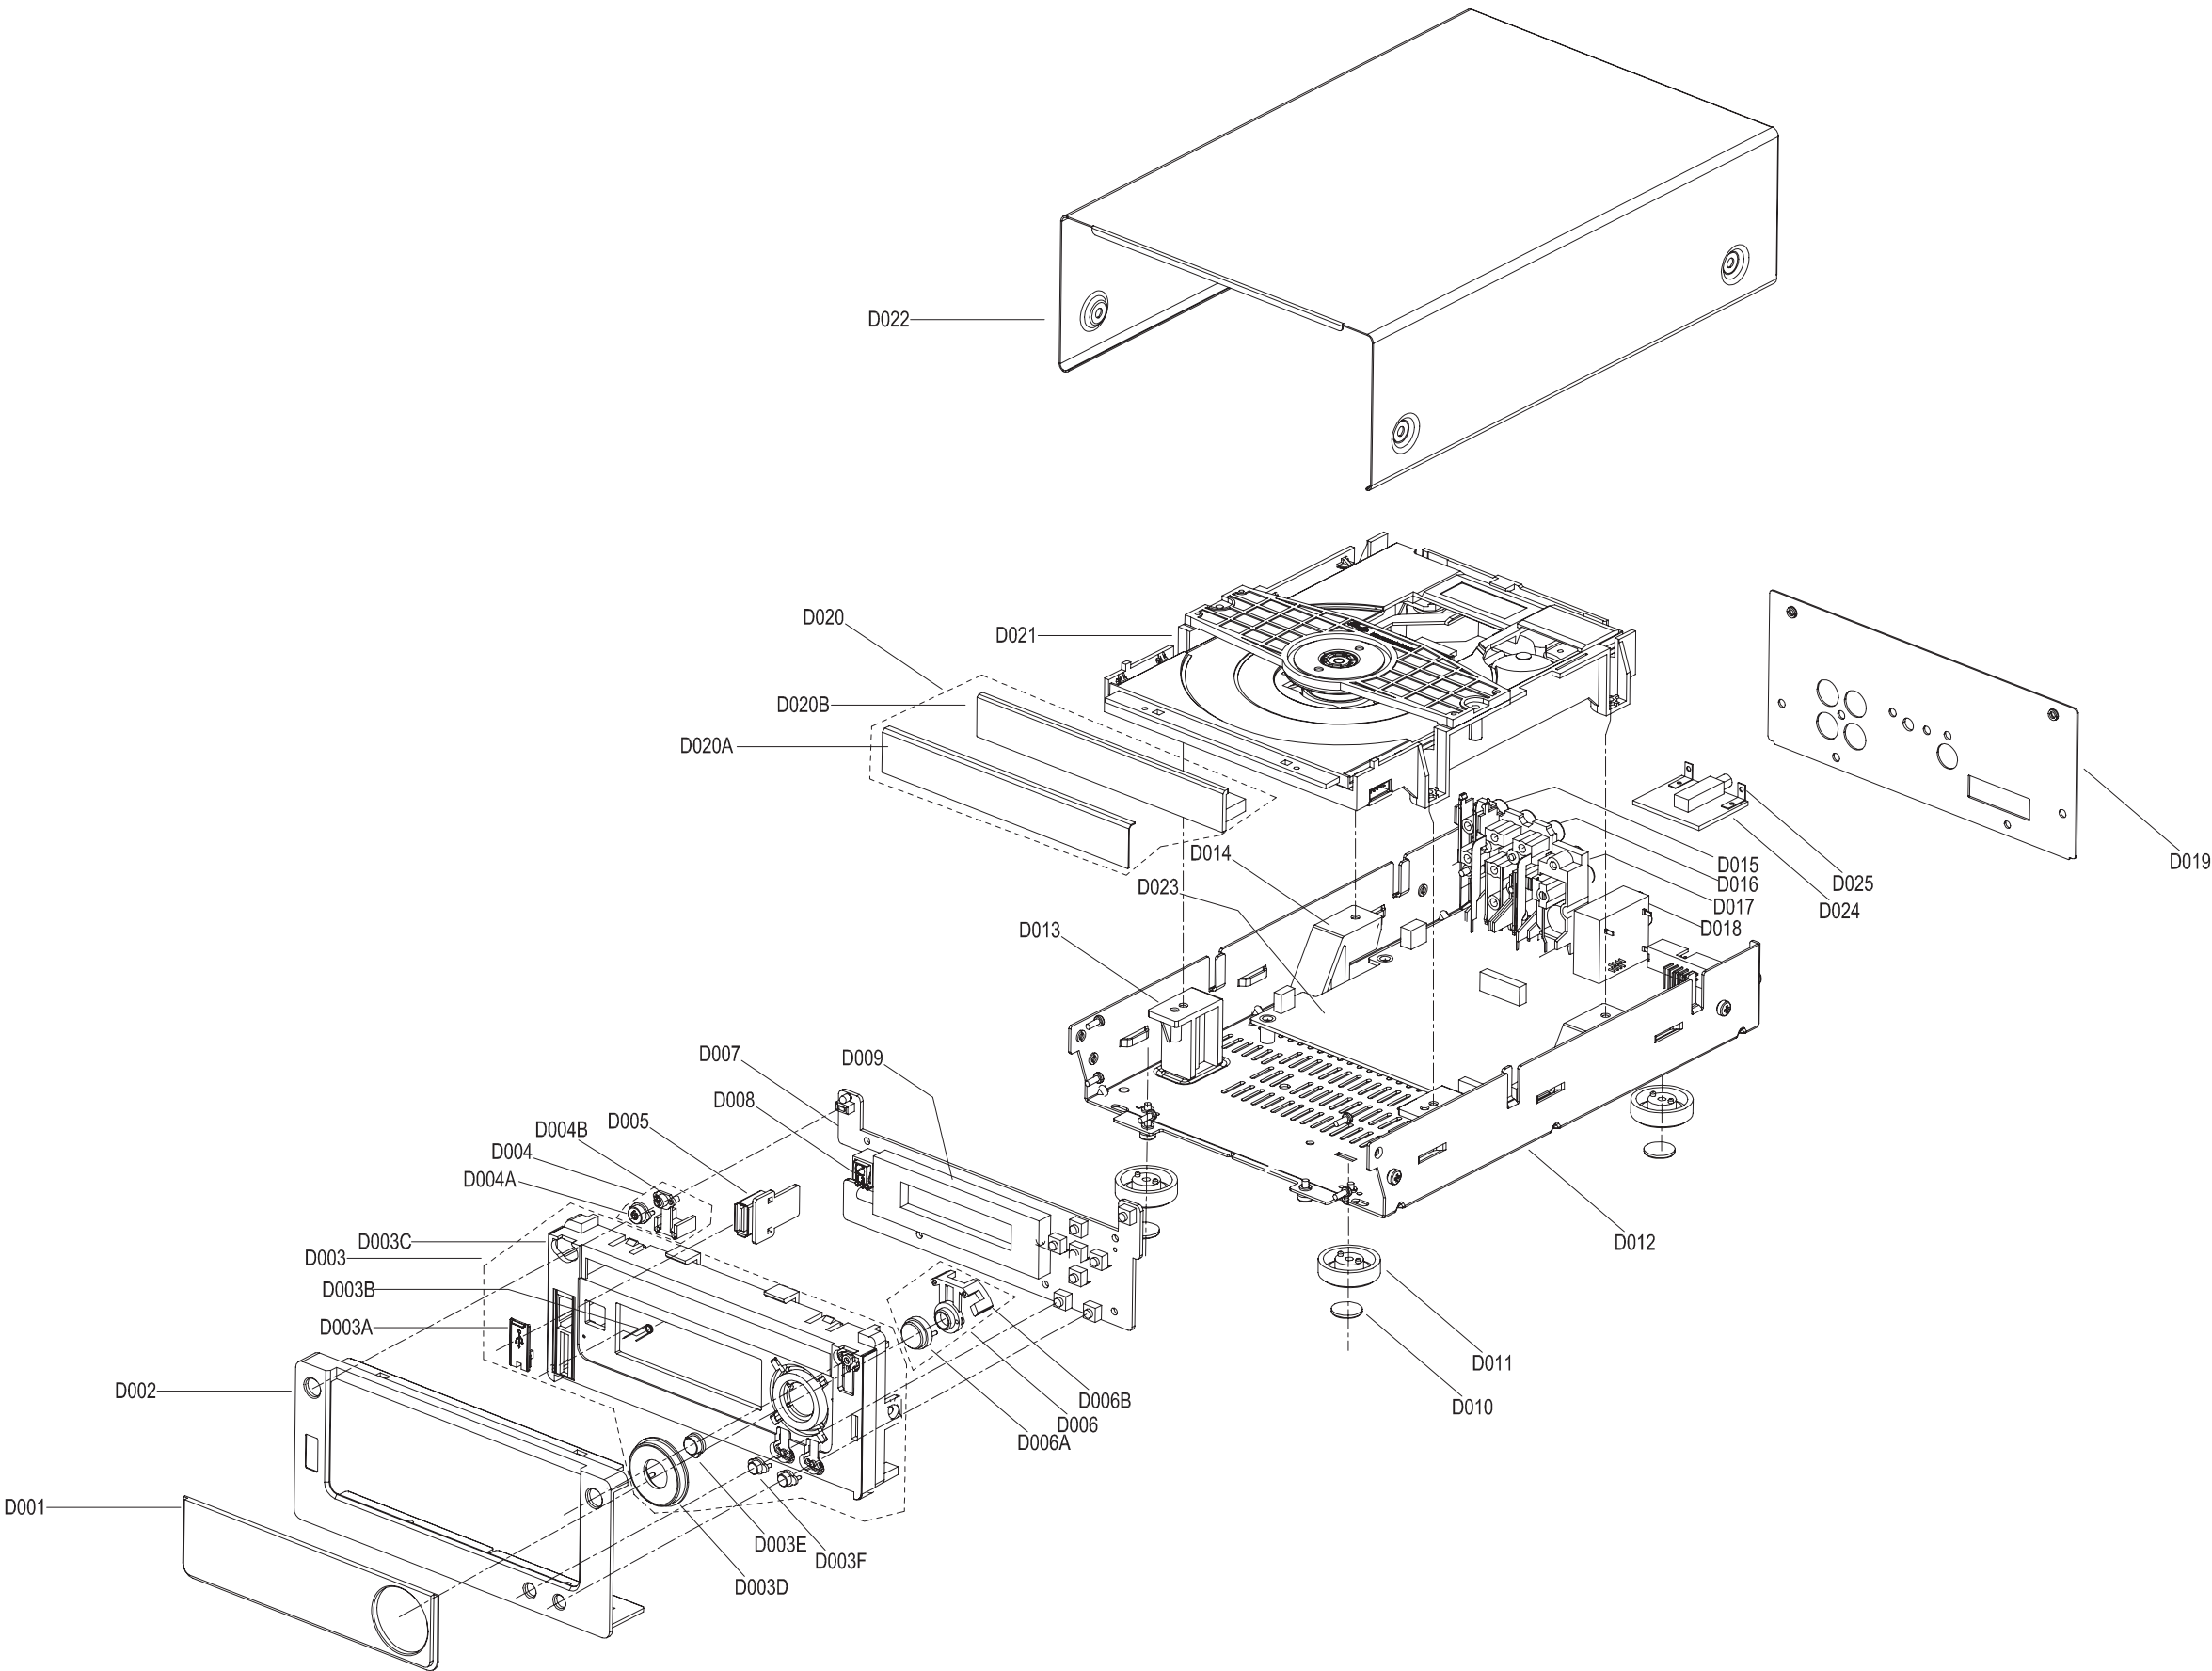

Explode View-AMP Part

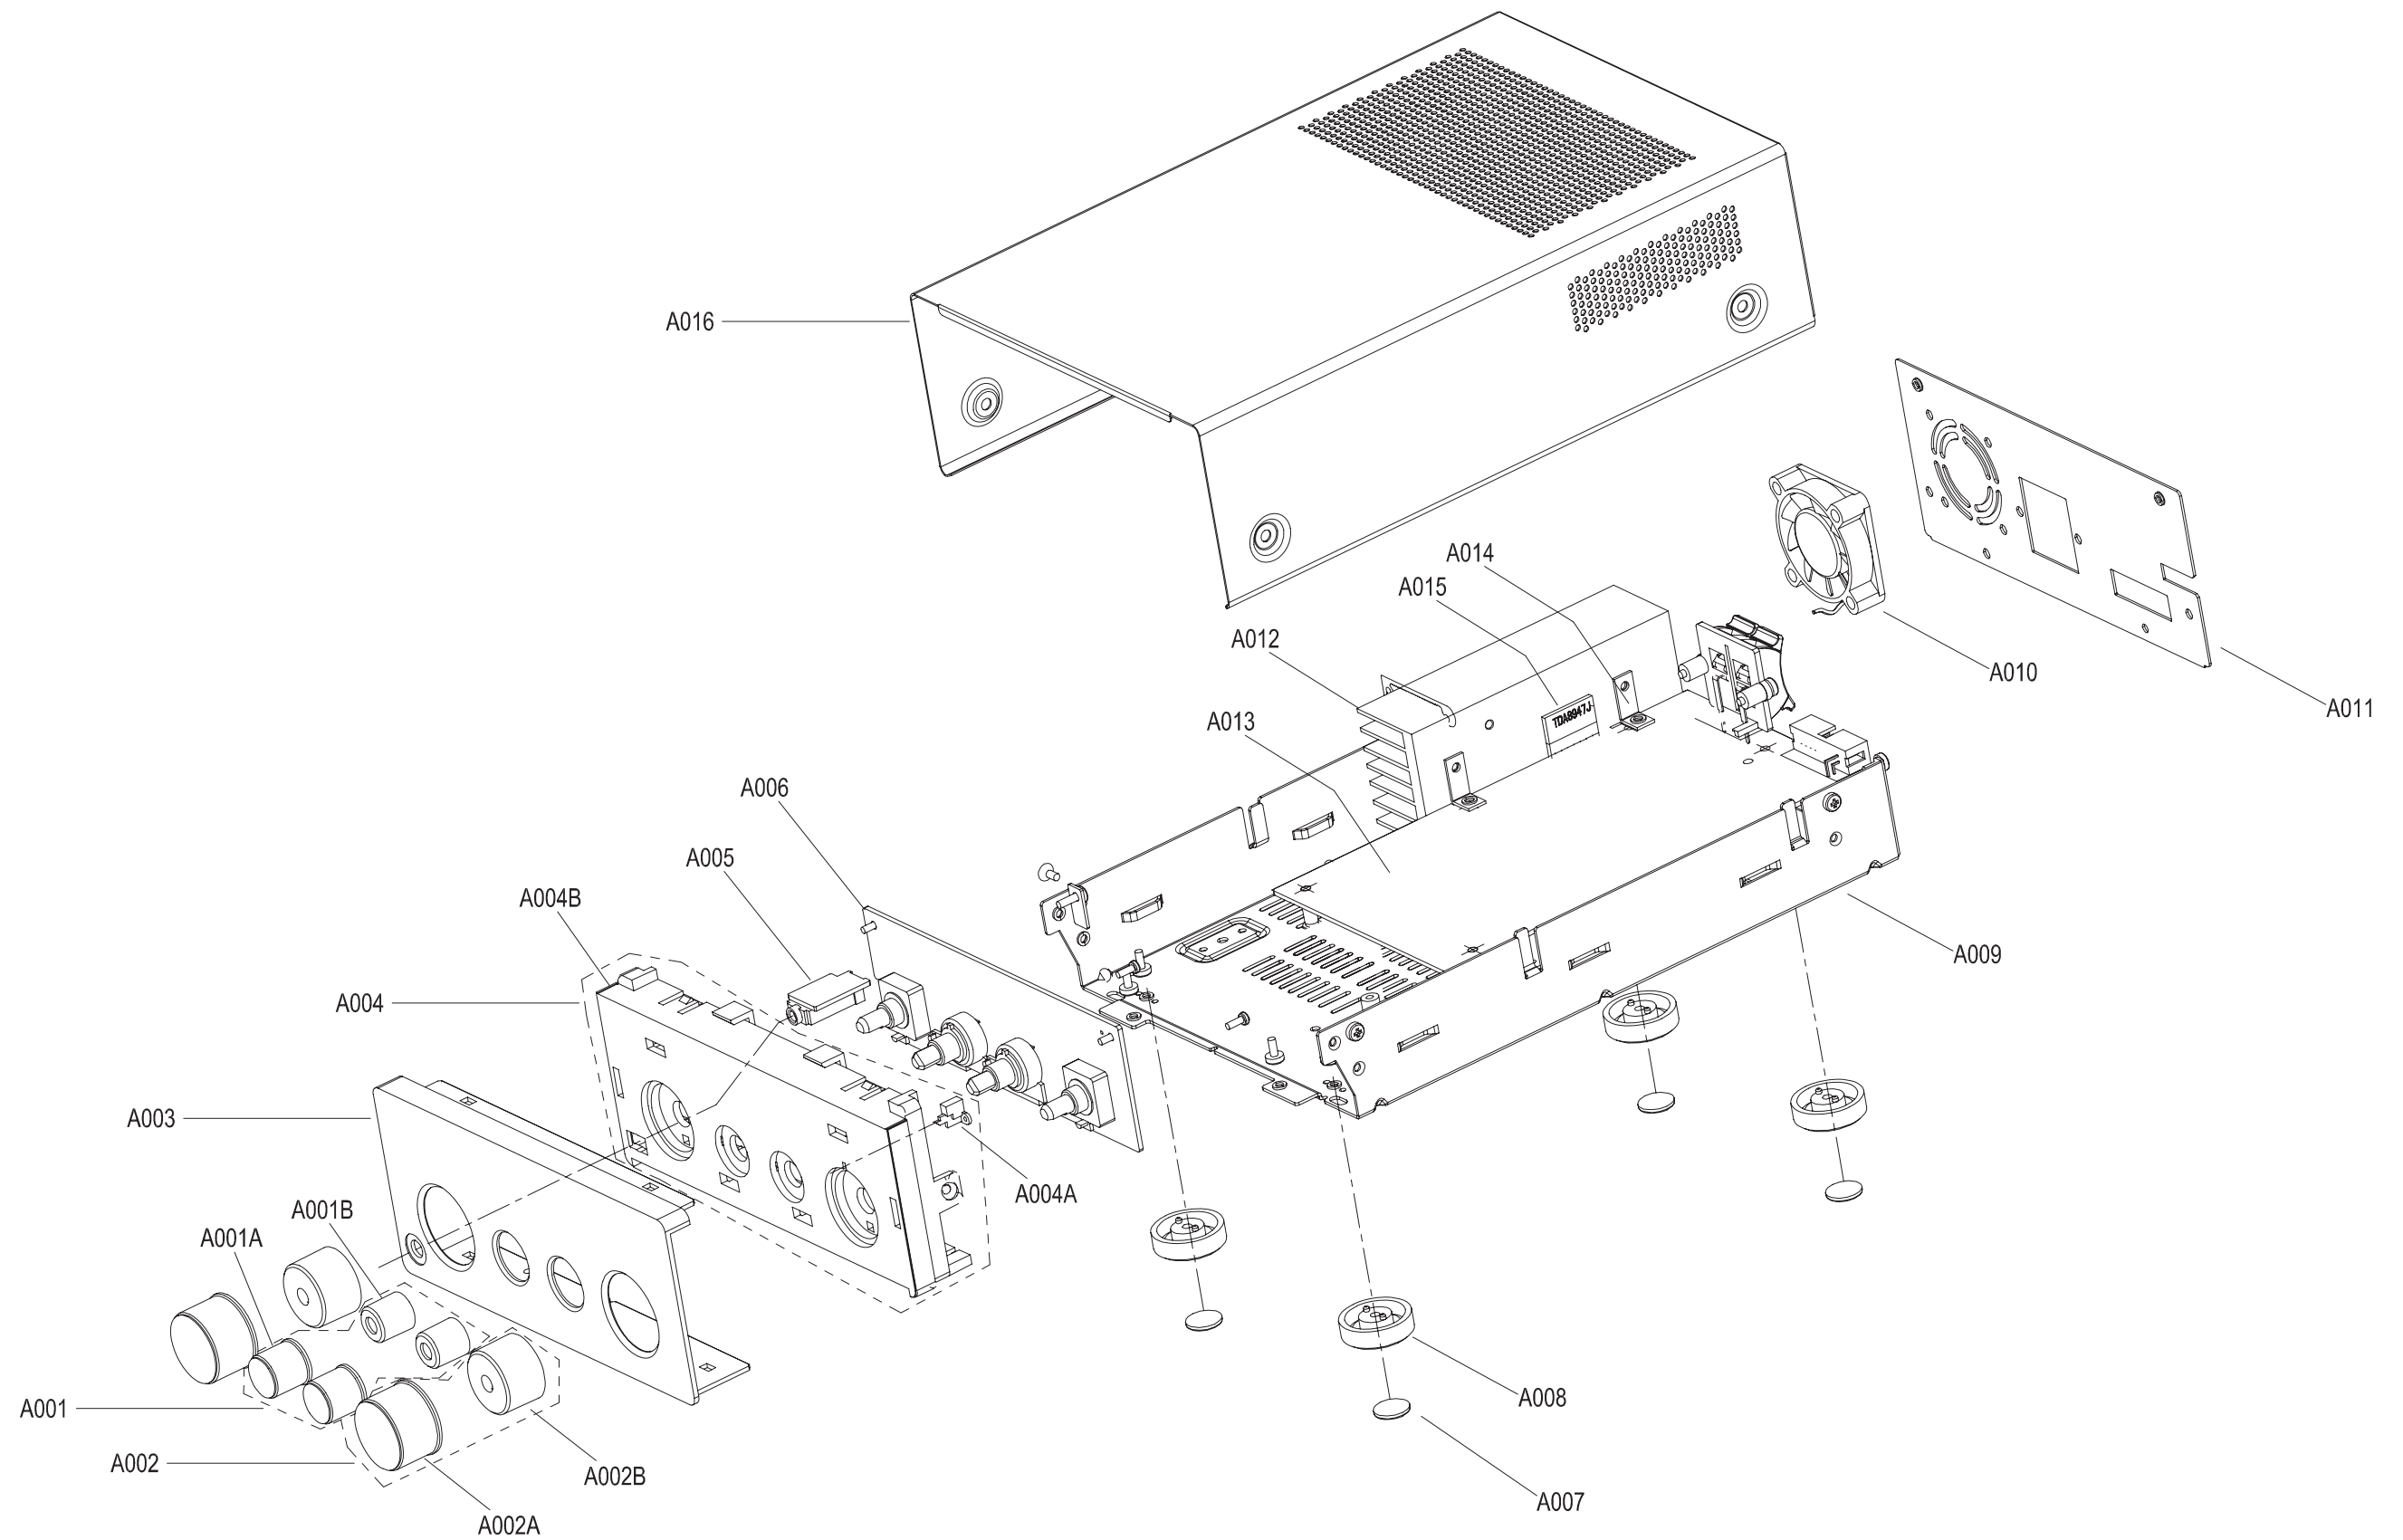

ACCESSORIES PARTS LIST

3A	996510018646	MCM772/12 SPEAKER BOX ASSY(L)
3B	996510018647	MCM772/12 SPEAKER BOX ASSY(R)
3C	996510018452	MCM770/12 MAIN BRACKET ASSY
3D	996510018455	PRC500-49 REMOTE CONTROL
3E	996500041018	FM ANTENNA WIRE 1.5m
3F	996510013407	WIRE 250 2.5/18PX2

MECHANICAL&MISCELLANEOUS PARTS - AMP UNIT

A001	996510015415	DISCRETION KNOB PARTS
A002	996510015414	VOLUME KNOB PARTS
A004	996510015416	AMP PLASTIC CABINET ASSY
A005	996510015413	HEADPHONE BOARD ASSY
A006	996510015412	VOLUME BOARD ASSY
2B	996510018644	POWER CORD 2.15m VH-03
A007	996520033990	RUBBER PAD
A008	996510015779	PLASTIC FOOT
A010	996500041003	MINI FAN RDM4010S DC12V/0.07A
A013	996510018643	POW181F POWER BOARD 50WX2

MECHANICAL&MISCELLANEOUS PARTS - CD UNIT

1B	996510010513	FLAT FLEXIBLE CABLE
D001	996510015410	DVD DISPLAY LENS
D003A	996510015411	USB DOOR ABS SILVER
D010	996520033990	RUBBER PAD
D011	996510015779	PLASTIC FOOT
D013	996510018448	MCD770 FRONT CD BRACKET
D014	996510018449	MCD770 BACK CD BRACKET
D003	996510015408	DVD PLASTIC CABINET ASSY
D004	996510015406	STANDBY BUTTON PARTS
D005	996510018755	USB BOARD ASSY
D006	996510015407	CENTER BUTTON ASSY
D020	996510015409	DVD DOOR ASSY
D021	996510010504	MECHANISM ASSY
D022	996510021719	MCD770 DVD TOP COVER(ALU.)
D023	996510018642	DECODER+MCU PARTS ASSY
D024	996510018641	MCM770/772/906 M-BOY BOARD

ELECTRICAL PARTS - DISPLAY PCB

D008	996510018444	MCD770 IR RECEIVER BRACKET
IC101	996510000500	IC PT6311/SC16311/CD16311
LED101	994000004948	LED LAMP(BLUE) /12
S101	994000004961	IR SENSOR BLACK
SW101	996520033923	TACT SWITCH TS-1307-01 6X6X5
SW102	996520033926	TACT SWITCH HCT-1106W 6X3X4.3
SW103	996520033923	TACT SWITCH TS-1307-01 6X6X5
SW104	996520033923	TACT SWITCH TS-1307-01 6X6X5
SW105	996520033923	TACT SWITCH TS-1307-01 6X6X5
SW106	996520033923	TACT SWITCH TS-1307-01 6X6X5
SW107	996520033923	TACT SWITCH TS-1307-01 6X6X5
SW108	996520033923	TACT SWITCH TS-1307-01 6X6X5
SW109	996520033923	TACT SWITCH TS-1307-01 6X6X5
VFD101	996520033924	VFD DISPLAY NE-770D-1.GB

Note: Only these parts mentioned in the list are normal service parts.

Factory Parts List

LOCATION NO.	12NC	DESCRIPTION
CD		MCM772/12 CD+MP3 UNIT PARTS ASS'Y
D007		MCM772/12 DISPLAY BOARD ASS'Y
R103		CARBON FILM RESISTOR 1K 1/8W J-52
R109		CARBON FILM RESISTOR 10K 1/8W J-52
R111		CARBON FILM RESISTOR 10K 1/8W J-52
R113		CARBON FILM RESISTOR 10K 1/8W J-52
R114		CARBON FILM RESISTOR 10K 1/8W J-52
R105		CARBON FILM RESISTOR 33K 1/8W J-52
R106		CARBON FILM RESISTOR 33K 1/8W J-52
R107		CARBON FILM RESISTOR 33K 1/8W J-52
R108		CARBON FILM RESISTOR 33K 1/8W J-52
R112		CARBON FILM RESISTOR 47 1/8W J-52
R110		CARBON FILM RESISTOR 4.7K 1/8W J-52
R104		CARBON FILM RESISTOR 47K 1/8W J-52
R101		CARBON FILM RESISTOR 5.6 1/2W J-52
R102		CARBON FILM RESISTOR 5.6 1/2W J-52
C102		CHIP CERAMIC CAP.104P 50V K-5
C103		CHIP CERAMIC CAP.104P 50V K-5
C104		CHIP CERAMIC CAP.104P 50V K-5
C101		ELECTROLYTIC CAP.47u 16V L-5 5X5
D701		DIODE 4148-52
D703		DIODE 4148-52
D704		DIODE 4148-52
LED101		LED 3R4CB71D-2B-208 (BLUE)
IC101		IC PT6311/SC16311/CD16311
S101		IR SENSOR SMALL BLACK
SW101		TACT SWITCH TS-1307-01 6X6X5
SW103		TACT SWITCH TS-1307-01 6X6X5
SW104		TACT SWITCH TS-1307-01 6X6X5
SW105		TACT SWITCH TS-1307-01 6X6X5
SW106		TACT SWITCH TS-1307-01 6X6X5
SW107		TACT SWITCH TS-1307-01 6X6X5
SW108		TACT SWITCH TS-1307-01 6X6X5
SW109		TACT SWITCH TS-1307-01 6X6X5
SW102		TACT SWITCH HCT-1106W 6X3X4.3
VFD101		VFD DISPLAY NE-770D-1.GB
JP101-118		JUMPER WIRE Φ 0.6X40mm (375m=1kG)
		VFD DISPLAY PCB 35-MCD772-01A1
		28WIRE 230 2.0/12PX1 2.0/9PX1
		BLACK SPONGE 20X20X2 40°
		MCD770 IR RECEIVER BRACKET(ABS)
D005		MCD772 USB BOARD ASS'Y
J301		USB JACK A-TYPE 4P FEMALE 90 DIP TYPE
		26SHIELDING WIRE160 2.0/4PX1 2.0/4PX1
		USB PCB 35-MCD772-03A1
D024		MCM770/772/906 M-BOY BOARD ASS'Y
CN1		26 WIRE 120 2.0/4PX1
J1		SOCKET ST—3541 4P BLACK
		PCB 35-MCD770-08A1 M-BOY 30X28
D025		NE1503PCB METAL BRACKET 13X13X8X1
		SCREW 3 X 5 PMTT (PLATING)
D021		DA11 MECHANISM ASS'Y
		CD MECHANISM (SANYO DA11VZ)
		VCD MECHANISM BRACKET RT—656YV
		SCREW 2.6 X10 PWBB (Φ 10) (PLATING)
D023		MCM772/12 DECODER+MCU PARTS ASS'Y

Factory Parts List

LOCATION NO.	12NC	DESCRIPTION
DIP42		CPU U252(S3C9228 XYZ-CAN CHANGE) CD DECODER EJS1504CDMP3 IC P74LVC2GU04GW SOT-363(TW) IC TEA5766UK MCM772/12 DECODER+MCU SOFTWARE MCM772/12 DECODER SOFTWARE MCM772/12 CPU SOFTWARE
D004		MCD770 STANDBY BUTTON PARTS
D004A		MCD770 STANDBY BUTTON(ABS)
D004B		MCD770 STANDBY BUTTON BRACKET(ABS)
D006		MCD772 CENTER BUTTON ASS'Y
D006A		MCD772 CENTER BUTTON ABS
D006B		MCD772 CENTER BUTTON BRACKET(ABS)
D003		MCD772 DVD PLASTIC CABINET ASS'Y
D003B		MCD770 USB SPRING $\phi 0.4$
D003E		MCD770 OPEN/CLOSE BUTTON(PLATE)
D003F		MCD770 FUNCTION BUTTON
D003C		MCD772 DVD PLASTIC CABINET
D003D		MCD772 DIRECTION BUTTON ABS
D020		MCD770 DVD DOOR PARTS(BLACK)
LOGO		SCUTCHEON PHILIPS 22X4.03
D020A		MCD770 DVD DOOR ALUMINIUM PIECE(BLACK)
D020B		MCD770 DVD DOOR BRACKET(ABS)
CASING1		MCM772/12 CD+MP3 CASING PARTS ASS'Y
D002		MCD772 DVD ALUMINUM PANEL SILVER
D012		MCD770 DVD METAL BOTTOM CHASSIS
D022		MCD770 DVD TOP COVER(ALUMINIUM)
D019		MCD772 DVD BACK METAL PLATE
D001		MCD770 DVD DISPLAY LENS
D003A		MCD770 USB DOOR(ABS)
D013		MCD770 CD FRONT MECHANISM BRACKET
D014		MCD770 CD BACK MECHANISM BRACKET
D011		MCD770 PLASTIC FOOT(HIPS)
D010		MCD770 RUBBER FOOT($\phi 12 \times 1.5$ BLACK) SCREW 3 X 5 FMTT (PLATING) SCREW 2.6 X 8 PA (PLATING) SCREW 3 X 5 BMTT (PLATING) PHILIPS TORX T-10 1.5P 3.0X10.0 AB3 TORX STTP T-10 3.0X6.0 AB3 SCREW 3 X 5 BM (PLATING) SCREW 3 X 10 BA (PLATING) SCREW 3 X 10 PWA (PLATING) TORX T-10 STTT 3.0X6.0 NI TORX T-10 STTB 3.0X6.0 NI FLAT FLEXIBLE CABLE 16PX120X1.0XA 28WIRE 300 2.0/5PX2 28WIRE 150 2.0/6PX2
AMP		MCM772/12 AMP UNIT PARTS ASS'Y
A006		MCD772 VOLUME BOARD ASS'Y
R203		CARBON FILM RESISTOR 10K 1/8W J-52
R204		CARBON FILM RESISTOR 10K 1/8W J-52
R201		CARBON FILM RESISTOR 3.3K 1/8W J-52
R202		CARBON FILM RESISTOR 3.3K 1/8W J-52
R205		CARBON FILM RESISTOR 680 1/8W J-52
C201		CHIP CERAMIC CAP.103P 50V K-5
C202		CHIP CERAMIC CAP.103P 50V K-5

Factory Parts List

LOCATION NO.	12NC	DESCRIPTION
C203		CHIP CERAMIC CAP.103P 50V K-5
C204		CHIP CERAMIC CAP.103P 50V K-5
C205		CHIP CERAMIC CAP.104P 50V K-5
C206		CHIP CERAMIC CAP.104P 50V K-5
C207		ELECTROLYTIC CAP.100u 16V L-5 105°C 6.3X
L201		AXIAL FIXED INDUCTOR 10u 52
D201		DIODE 4148-52
LED201		LED 2X3X4 23004BCH09-357
Q201		TRANSISTOR 8050C-5
EN201		CODER R166ECC-D1-15F-24P-I066
EN202		CODER R161EC-D1-15F-12CC
RV201		RESISTOR 100KB RV161NH-B100K-15F-CC-F
RV202		RESISTOR 100KB RV161NH-B100K-15F-CC-F
		VOLUME PCB 35-MCD772-02A1
JP119		JUMPER WIRE Ø0.6X40mm (375m=1kG)
JP120		JUMPER WIRE Ø0.6X40mm (375m=1kG)
		28WIRE CABLE 240 2.0/13PX1 2.0/11PX1
A005		MCD772 HEADPHONE BOARD ASS'Y
J401		HEADPHONE JACK Ø3.5 TE-03501S-11
		HEADPHONE PCB 35-MCD772-04A1
		26SHIELDING 320 2.0/4PX1 2.0/4PX1
A002		MCD770 ALUMINIUM VOLUME KNOB
A002A		MCD770 VOLUME KNOB COVER(SILVER)
A002B		MCD770 VOLUME KNOB CORE(ABS)
A001		MCD772 DISCRETION KNOB PARTS
A001A		MCD772 DISCRETION KNOB PARTS
A001B		MCD772 DISCRETION KNOB
A004		MCD772 AMP PLASTIC CABINET ASS'Y
A004B		MCD772 AMP PLASTIC CABINET
A004A		MCD772 VOLUME KNOB LIGHT-GUIT PMMA
CASING2		MCM772/12 AMP CASING PARTS ASS'Y
A013		POW181F POWER BOARD ASS'Y 50WX2 2.0
		FERRITE RING JTH28X16X8
		METAL PLATE 19X7X1 Ø3
A003		MCD772 AMP ALUMINUM PANEL SILVER
A016		MCD770 DVD ALUMINIUM TOP COVER
		MCD772 AMP MATAL PLATE 109X82X3
A009		MCD770 AMP METAL BOTTOM CHASSIS
A011		MCD772 AMP BACK METAL PLATE V1.1
A008		MCD770 PLASTIC FOOT(HIPS)
A007		MCD770 RUBBER FOOT(Ø12X1.5 BLACK)
		SCREW 2.6 X 8 PA (PLATING)
		SCREW 3 X 8 BA (PLATING)
		SCREW 3 X 5 FMTT (PLATING)
		SCREW 3 X 5 BM (PLATING)
		SCREW 3 X 5 BMTT (PLATING)
		TORX STTP T-10 3.0X6.0 AB3
		PHILIPS TORX T-10 1.5P 3.0X10.0 AB3
		SCREW 3 X 10 PMTT (PLATING)
		TORX T-10 STTB 3.0X15.0 AB3
		SCREW 3 X 9 BMTT (PLATING)
		M3 NUT (PLATING)
		SCREW 3 X 6 BTH(PLATING)
		CABLE TIE 70
		TORX T-10 STTT 3.0X6.0 NI
		TORX T-10 STTB 3.0X6.0 NI

Factory Parts List

LOCATION NO.	12NC	DESCRIPTION
		POWER CORD 2.15m VH-03
		MINI FAN RDM4010S DC12V/0.07A
		FIBRE WASHER $\Phi 3 \times 8 \times 1$
		MCM772/12 SPEAKER BOX ASS'Y(L)
		MCM772 FREQUENCY DIVIDER ASS'Y
R1		CEMENT RESISTOR 4.7 10W J
C1		NON-POLARITG ELEC.CAP.5.6u 100V M SNP
L1		HOLLOW INDUCTOR 0.18mH
L2		SILICON INDUCTOR 0.47mH
R2		CEMENT RESISTOR 4.7 5W J
R3		CEMENT RESISTOR 4.7 5W J
C2		NON-POLARITG ELEC.CAP.6.8U 100V M
		FREQUENCY DIVIDER PCB 35-MCM772-01A1
		CABLE TIE 150
		22 SINGLE WIRE 150 BLACK
		22 SINGLE WIRE 150 RED
		22 SINGLE WIRE 150
		MCM772/12 SPEAKER BOX ASS'Y(L)
		PHILIPS SCUTCHEON 20.3X4.2X1.5 SILVER
		MCM772 GRILLE BRACKET ABS+10%
		NON-POLARITG ELEC.CAP.2.2u 50V M SBP5X11
		SPEAKER SOCKET DDJ-270DH-03 56X56
		ANTIMAGNETIC WOOFER SPEAKER 4"4 Ω 50W Φ 80
		TWEETER $\Phi 25$
		MCD700 GRILL FIXER $\phi 3 \times 11$
		MCM772 ALUMINIUM TWEETER CIRCLE
		MCM772 ALUMINIUM WOOFER CIRCLE
		PORT TUBE DJ-214 MCD288
		MCD770 TWEETER BRACKET HIPS BLACK
		RUBBER FOOT($\Phi 12 \times 8 \times 7$ BLACK)
		MCD700 GRILLE FIXER RUBBER($\Phi 6 \times 6$ BLACK)
		MCM772 WOODEN BOX 190X120X250
		MCM772/12 SPEAKER BLACK LABEL 34X20
		PHILIPS TORX T-10 1.5P 3.0X10.0 AB3
		SCREW 2.6 X 8 BA BLACK
		SCREW 3 X 16 HA (PLATING)
		PLASTIC BAG(PE) 55X39cm PHILIPS
		PAPER $\Phi 46 \times \Phi 41.5 \times 86$
		STENCIL PAPER 28X75cm
		MCM772/12 SPEAKER BOX ASS'Y(R)
		MCM772 FREQUENCY DIVIDER ASS'Y
R1		CEMENT RESISTOR 4.7 10W J
C1		NON-POLARITG ELEC.CAP.5.6u 100V M SNP
L1		HOLLOW INDUCTOR 0.18mH
L2		SILICON INDUCTOR 0.47mH
R2,3		CEMENT RESISTOR 4.7 5W J
C2		NON-POLARITG ELEC.CAP.6.8U 100V M
		FREQUENCY DIVIDER PCB 35-MCM772-01A1
		CABLE TIE 150
		22 SINGLE WIRE 150 BLACK
		22 SINGLE WIRE 150 RED
		22 SINGLE WIRE 150
		MCM772/12 SPEAKER BOX ASS'Y(R)
		PHILIPS SCUTCHEON 20.3X4.2X1.5 SILVER
		MCM772 GRILLE BRACKET ABS+10%
		NON-POLARITG ELEC.CAP.2.2u 50V M SBP5X11

Factory Parts List

LOCATION NO.	12NC	DESCRIPTION
		SPEAKER SOCKET DDJ-270DH-03 56X56
		ANTIMAGNETIC WOOFER SPEAKER 4"4Ω50WΦ80
		TWEETER Φ25
		MCD700 GRILL FIXER φ3X11
		MCM772 ALUMINIUM TWEETER CIRCLE
		MCM772 ALUMINIUM WOOFER CIRCLE
		PORT TUBE DJ-214 MCD288
		MCD770 TWEETER BRACKET HIPS BLACK
		RUBBER FOOT(Φ12X8X7 BLACK)
		MCD700 GRILLE FIXER RUBBER(Φ6X6BLACK)
		MCM772 WOODEN BOX 190X120X250
		MCM772/12 SPEAKER BLACK LABEL 34X20
		PHILIPS TORX T-10 1.5P 3.0X10.0 AB3
		SCREW 2.6 X 8 BA BLACK
		SCREW 3 X 16 HA (PLATING)
		PLASTIC BAG(PE) 55X39cm PHILIPS
		PAPER Φ46XΦ41.5X86
		STENCIL PAPER 28X75cm
		MCM772/12 ACCESSORY PARTS ASS'Y
		WARRANTY CARD(PH 9965 100 15858)
		MCM772/12 QUICK START GUIDE ENG./FRE
		MCM772/12 QUICK START GUIDE
		MCM772/12 QUICK START GUIDE
		MCM772/12 INSTRUCTION MANUAL -A
		MCM772/12 INSTRUCTION MANUAL -B
		PLASTIC BAG(PE) 29X18cm PHILIPS
		SPEAKER WIRE 3m
		RCA JACK FM SINGLE WIRE 1.5m
		FLEXIBLE FLAT WIRE 250 2.5/18PX2
		PLASTIC BAG(PE) 18X10cm PHILIPS
		MCM772/12 PACKING PARTS ASS'Y
		MCM772/12 POLYFOAM
		PLASTIC BAG(PE) 45X25cm PHILIPS
		PLASTIC BAG(PE) 26X7cm(PHILIPS)
		PASSED LABEL Φ13
		LASER WARNING LABEL PH Φ15 BLACK
		DESIGNE LABEL PH 43X11
		MCM772/12 GIFT BOX
		MCM772/12 GIFT BOX LABEL 91X111
		MCM772/12 DVD UNIT MAIN LABEL 52X30
		MCM772/12 AMP MAIN LABEL 52X30
		MCM772/12 POS BILLBOARD
		VIGYAZAT LABEL PH 56X15
		CHRANTE LABEL PH 59X12
		UWAGALABEL PH 36X12
		POZOR LABEL PH 36X12
		MCM770/12 MAIN BRACKET ASS'Y
		PERSPEX BRACKET 253X169X6 HPILIPS 877C
		MCD705 BRACKET FOOT SILVER ABS
		MCD705 BRACKET FOOT COVER SILVER ABS
		MCD705 RUBBER-FOOT Φ4X6
		SCREW 5.8X16FA (PLATING)
		PLASTIC BAG(PE) 33X22cm
		PRC500-49 REMOTE CONTROL ASS'Y MCM770/12
		PRC500-05A REMOTE CONTROL BOARD ASS'Y
		CHIP RESISTOR 0 1/16W J (0805)

Factory Parts List

LOCATION NO.	12NC	DESCRIPTIN
R2		CHIP RESISTOR 680 1/16W J (0805)
C1		ELECTROLYTIC CAP.47u 10V L 4X7
D1		INFRARED-EMITTING DIODE Φ3
Q1		CHIP TRANSISTOR BC817-25(SOT23)
U1		IC TM58PR11S18C
		REMOTE CONTROL PCB PRC500-A 139X40X1.6
		PRC500-05 SOFTWARE A(V1.0)
		PRC500-49 REMOTE CONTROL CASING PART ASS
		BUTTON BATTERIES 3V CR2025
		CONDUCTIVE RUBBER PRC500-49
		REMOTE SPRING SHEET PCR500
		REMOTE SPRING PCR500 Φ0.6
		IRON BLOCK PCR500 35X26.6X4
		PRC500 REMOTE CONTROL TOP CABINET
		PRC500 REMOTE BOTTOM CHASSIS ABS10894
		PRC500 REMOTE CONTROL BATTERY COVER
		PRC500 REMOTE CONTROL LENS PC
		PRC500 PLATE RING ABS
		INSULATION PAPER 32X24X0.15
		PRC500-49 REMOTE CONTROL LABEL MCM770
		PLASTIC BAG(PE) 20X6cm
		ADD-ONS INSTRUCTION LABEL PH 38X18